



NRL/MR/7322--00-8251

# Software Design Document for the Oceanographic and Atmospheric Master Library SURF 3.1 Forecasting Program

DANIEL A. OSIECKI  
LARI N. MIGUES  
MARSHALL D. EARLE

*Neptune Sciences, Inc.  
Slidell, Louisiana*

Y. LARRY HSU

*Ocean Dynamics and Prediction Branch  
Oceanography Division*

October 31, 2000

Approved for public release; distribution is unlimited.

20001107 039

# REPORT DOCUMENTATION PAGE

Form Approved  
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.

1. AGENCY USE ONLY (Leave Blank)		2. REPORT DATE October 31, 2000	3. REPORT TYPE AND DATES COVERED NRL Memorandum Report
4. TITLE AND SUBTITLE Software Design Document for the Oceanographic and Atmospheric Master Library SURF 3.1 Forecasting Program			5. FUNDING NUMBERS PE-603207N
6. AUTHOR(S) Daniel A. Osiecki,* Lari N. Miguez,* Marshall D. Earle,* and Y. Larry Hsu			
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) Naval Research Laboratory Ocean Dynamics and Prediction Branch Stennis Space Center, MS 39529-5004			8. PERFORMING ORGANIZATION REPORT NUMBER NRL/MR/7322--00-8251
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) Commander, Space and Naval Warfare Systems Command PMW185 4301 Pacific Highway San Diego, CA 92110			10. SPONSORING/MONITORING AGENCY REPORT NUMBER
11. SUPPLEMENTARY NOTES *Neptune Sciences, Inc.. 40201 Highway 190 East, Slidell, LA 70461			
12a. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release; distribution is unlimited.			12b. DISTRIBUTION CODE
13. ABSTRACT (Maximum 200 words)  The Software Design Document (SDD) is written for the new SURF 3.1 model to be submitted to the Oceanographic and Atmospheric Master Library (OAML). This SDD provides detailed software descriptions such as flowcharts and variable names of the SURF 3.1 model. An overview of the surf forecasting model and the equations used for wave and longshore current computation are also included.			
14. SUBJECT TERMS SURF                      Military oceanography Ocean models			15. NUMBER OF PAGES 210
			16. PRICE CODE
17. SECURITY CLASSIFICATION OF REPORT UNCLASSIFIED	18. SECURITY CLASSIFICATION OF THIS PAGE UNCLASSIFIED	19. SECURITY CLASSIFICATION OF ABSTRACT UNCLASSIFIED	20. LIMITATION OF ABSTRACT UL

## TABLE OF CONTENTS

<b>1.0</b>	<b>SCOPE .....</b>	<b>1</b>
1.1	Identification .....	1
1.2	Document Overview .....	1
<b>2.0</b>	<b>REFERENCED DOCUMENTS .....</b>	<b>3</b>
<b>3.0</b>	<b>PRELIMINARY DESIGN OF SURF 3.1 .....</b>	<b>5</b>
3.1	SURF 3.1 CSCI Overview .....	5
3.1.1	Wave and Roller Energy Models .....	5
3.1.2	Energy Dissipation in the Surf Zone .....	6
3.1.3	Longshore Current Calculations .....	8
3.1.4	Directional Energy Spectra .....	10
3.1.5	Differences Between SURF3.0 and SURF3.1 .....	10
<b>4.0</b>	<b>SURF 3.1 CSCI ARCHITECTURAL DESIGN .....</b>	<b>12</b>
<b>5.0</b>	<b>SURF 3.1 CSCI DETAILED DESIGN .....</b>	<b>14</b>
5.1	Program SURF .....	14
5.2	Subroutine ABORT .....	18
5.3	Subroutine B_DETAIL .....	20
5.4	Subroutine B_HEAD .....	21
5.5	Subroutine BALANCEQ .....	22
5.6	Subroutine C_FINE .....	25
5.7	Subroutine C_GAMMA .....	27
5.8	Subroutine C_IN_DEP .....	28
5.9	Subroutine C_REGRID .....	31
5.10	Subroutine C_UN .....	33
5.11	Subroutine CALC_HB3 .....	35
5.12	Subroutine CALCROLL .....	37
5.13	Subroutine CALCSURF .....	39
5.14	Subroutine CON_ANG .....	44
5.15	Subroutine DEPDRV .....	46
5.16	Subroutine EQUILPRF .....	48
5.17	Subroutine GENRLSPL .....	51
5.18	Subroutine GENSPEC .....	53
5.19	Subroutine GET_BRK .....	55
5.20	Subroutine GET DISS .....	57
5.21	Subroutine GET_FC .....	59
5.22	Subroutine GET_M .....	61

5.23	Subroutine GET_P .....	62
5.24	Subroutine GET_RHS .....	64
5.25	Subroutine GET_UM .....	66
5.26	Subroutine GET_WAVE .....	68
5.27	Subroutine GRIDOUT .....	70
5.28	Subroutine GT_P .....	72
5.29	Subroutine GT_SIG_H .....	74
5.30	Subroutine INITLIZE .....	76
5.31	Subroutine KLONG .....	78
5.32	Subroutine LIN_1 .....	81
5.33	Subroutine LIN_2 .....	83
5.34	Subroutine LIN_3 .....	85
5.35	Subroutine LONG1 .....	87
5.36	Subroutine MAIN_WAV .....	89
5.37	Subroutine MDSRF1 .....	93
5.38	Subroutine MDSRF2 .....	96
5.39	Subroutine NEW_BRK .....	98
5.40	Subroutine NONLIN .....	101
5.41	Subroutine NONLIN2 .....	103
5.42	Subroutine PERCENT .....	105
5.43	Subroutine PR7_OUT1 .....	107
5.44	Subroutine PR7_OUT2 .....	109
5.45	Subroutine PR7_OUT3 .....	111
5.46	Subroutine PT2 .....	112
5.47	Subroutine RAD_ST1 .....	114
5.48	Subroutine RAD_ST2 .....	118
5.49	Subroutine READRFRC .....	120
5.50	Subroutine READSPEC .....	125
5.51	Subroutine REFRAC .....	128
5.52	Subroutine RN2 .....	130
5.53	Subroutine S_COEFF .....	132
5.54	Subroutine S_NOSURF .....	135
5.55	Subroutine S_TIDE .....	137
5.56	Subroutine SEAFIT .....	139
5.57	Subroutine SETUP .....	142
5.58	Subroutine SHORTOUT .....	145
5.59	Subroutine SLF_STRT .....	148
5.60	Subroutine SPLINE .....	151
5.61	Subroutine SRFSETUP .....	153
5.62	Subroutine STRFRAC .....	156
5.63	Subroutine SUMMARY .....	159
5.64	Subroutine SURFCAST .....	162
5.65	Subroutine SWLFIT .....	165
5.66	Subroutine WAVEFIT .....	167
5.67	Subroutine WAVENUM .....	169
5.68	Subroutine WEIGHTFN .....	171
5.69	Subroutine ZONE1 .....	173

5.70	Function CUBPOLY .....	176
5.71	Function F2 .....	178
5.72	Function F3 .....	180
5.73	Function FCN1 .....	182
5.74	Function INTEGRAT .....	184
5.75	Include File: COMMON.INC .....	186
<b>6.0</b>	<b>NOTES.....</b>	<b>187</b>
6.1	SURF 3.1 Input Files .....	187
6.1.1	SURF 3.1 Input File .....	187
6.1.2	SURF 3.1 Input Depth Profile File .....	188
6.1.3	SURF 3.1 Wave Refraction File .....	189
6.1.4	SURF 3.1 Spectrum File .....	190
6.1.5	Advanced SURF 3.1 Model Options .....	191
6.2	SURF 3.1 Output Files.....	194
6.2.1	SURF 3.1 Detailed Output File.....	194
6.2.2	SURF 3.1 Summary Output File.....	196
6.2.3	SURF 3.1 Data Only Output File.....	198
6.2.3	SURF 3.1 Shallow Water Directional Wave Spectrum .....	199
6.3	Error Message Description.....	200
6.4	Flowchart Symbol Index .....	202
6.5	Acronyms .....	203

## ACKNOWLEDGEMENT

## LIST OF FIGURES

Figure 1	Surf CSCI Architectural Design .....	13
Figure 2	Program SURF Flowchart.....	17
Figure 3	Subroutine ABORT Flowchart .....	19
Figure 4	Subroutine B_DETAIL Flowchart.....	20
Figure 5	Subroutine B_HEAD Flowchart .....	21
Figure 6	Subroutine BALANCEQ Flowchart .....	24
Figure 7	Subroutine C_FINE Flowchart .....	26
Figure 8	Subroutine C_GAMMA Flowchart .....	27
Figure 9	Subroutine C_IN_DEP Flowchart .....	30
Figure 10	Subroutine C_REGRID Flowchart .....	32
Figure 11	Subroutine C_UN Flowchart .....	34
Figure 12	Subroutine CALC_HB3 Flowchart.....	36
Figure 13	Subroutine CALCROLL Flowchart.....	38
Figure 14	Subroutine CALCSURF Flowchart .....	43
Figure 15	Subroutine CON_ANG Flowchart.....	45
Figure 16	Subroutine DEPDRV R Flowchart .....	47
Figure 17	Subroutine EQUILPRF Flowchart.....	50
Figure 18	Subroutine GENRLSPL Flowchart.....	52
Figure 19	Subroutine GENSPEC Flowchart .....	54
Figure 20	Subroutine GET_BRK Flowchart.....	56
Figure 21	Subroutine GET DISS Flowchart .....	58
Figure 22	Subroutine GET_FCN Flowchart .....	60
Figure 23	Subroutine GET_M Flowchart .....	61
Figure 24	Subroutine GET_P Flowchart.....	63
Figure 25	Subroutine GET_RHS Flowchart .....	65
Figure 26	Subroutine GET_UM Flowchart.....	67
Figure 27	Subroutine GET_WAVE Flowchart .....	69
Figure 28	Subroutine GRIDOUT flowchart.....	71
Figure 29	Subroutine GT_P Flowchart .....	73
Figure 30	Subroutine GT_SIG_H Flowchart .....	75
Figure 31	Subroutine INITLIZE Flowchart.....	77
Figure 32	Subroutine KLONG Flowchart.....	80
Figure 33	Subroutine LIN_1 Flowchart .....	82
Figure 34	Subroutine LIN_2 Flowchart .....	84
Figure 35	Subroutine LIN_3 Flowchart .....	86
Figure 36	Subroutine LONG1 Flowchart.....	88
Figure 37	Subroutine MAIN_WAV Flowchart.....	92
Figure 38	Subroutine MDSRF1 Flowchart .....	95
Figure 39	Subroutine MDSRF2 Flowchart .....	97
Figure 40	Subroutine NEW_BRK Flowchart .....	100
Figure 41	Subroutine NONLIN Flowchart.....	102
Figure 42	Subroutine NONLIN2 Flowchart.....	104
Figure 43	Subroutine PERCENT Flowchart.....	106

Figure 44	Subroutine PRT_OUT1 Flowchart .....	108
Figure 45	Subroutine PRT_OUT2 Flowchart .....	110
Figure 46	Subroutine PRT_OUT3 Flowchart .....	111
Figure 47	Subroutine PT2 Flowchart .....	113
Figure 48	Subroutine RAD_ST1 Flowchart.....	117
Figure 49	Subroutine RAD_ST2 Flowchart.....	119
Figure 50	Subroutine READRFRC Flowchart.....	123
Figure 51	Subroutine READSPEC Flowchart .....	127
Figure 52	Subroutine REFRAC Flowchart .....	129
Figure 53	Subroutine RN2 Flowchart .....	131
Figure 54	Subroutine S_COEFF Flowchart .....	134
Figure 55	Subroutine S_NOSURF Flowchart.....	136
Figure 56	Subroutine S_TIDE Flowchart.....	138
Figure 57	Subroutine SEAFIT Flowchart .....	141
Figure 58	Subroutine SETUP Flowchart.....	144
Figure 59	Subroutine SHORTOUT Flowchart .....	147
Figure 60	Subroutine SLF_STRT Flowchart.....	150
Figure 61	Subroutine SPLINE Flowchart .....	152
Figure 62	Subroutine SRFSETUP Flowchart .....	155
Figure 63	Subroutine STRFRAC Flowchart.....	158
Figure 64	Subroutine SUMMARY Flowchart .....	161
Figure 65	Subroutine SURFCAST Flowchart.....	164
Figure 66	Subroutine SWLFIT Flowchart.....	166
Figure 67	Subroutine WAVEFIT Flowchart.....	168
Figure 68	Subroutine WAVENUM Flowchart .....	170
Figure 69	Subroutine WEIGHTFN Flowchart .....	172
Figure 70	Subroutine ZONE1 Flowchart .....	175
Figure 71	Function CUBPOLY Flowchart.....	177
Figure 72	Function F2 Flowchart.....	179
Figure 73	Function F3 Flowchart.....	181
Figure 74	Function FCN1 Flowchart .....	183
Figure 75	Function INTEGRAT Flowchart .....	185

## **1.0 SCOPE**

### **1.1 Identification**

This Software Design Document (SDD), prepared for the Oceanographic and Atmospheric Master Library (OAML), provides detailed information on the nearshore wave and current forecasting software titled SURF 3.1. This model equips users with an automated method for determining surf conditions and related environmental parameters. SURF 3.1 produces a standard surf forecast and a Modified Surf Index (MSI) number, which are Navy requirements for littoral operations and amphibious landings (see Joint Surf Manual). The first operational Navy surf forecasting computer model was developed for the Fleet in 1988 (see Earle, 1988) to supplement the manual and visual techniques developed in the 1950's. The manual procedures are subjective and do not adequately consider shallow water effects such as wave shoaling and refraction. This version of SURF 3.1 is a modern redesigned application, which uses state of the art technology in operational real-time surf zone forecasting.

### **1.2 Document Overview**

This OAML SDD describes the design, structure, and scientific aspects of the Computer Software Configuration Item (CSCI) titled SURF 3.1. This document provides a detailed summary of all Computer Software Units (CSU) or subroutines, input file formats, output file formats, and user-specified options. The SDD is divided into three sections; the Preliminary Design, the Architectural Design, and the Detailed Design.

The Preliminary Design section describes the scientific aspects of SURF 3.1 including a brief description of the mathematical formulation and theory behind the model. The Architectural Design section outlines the structural design of SURF 3.1 with a graphical representation of the CSU calling sequence. The Detailed Design section identifies and summarizes the operation of each CSU



including detailed listings of input variables, output variables, local variables, calling routines, and called routines and/or called functions.

## 2.0 REFERENCED DOCUMENTS

- Battjes, J.A., Modeling of Turbulence in the Surf Zone, Proceedings of the Symposium on Modeling Techniques, San Francisco, ASCE, 1050-1061, 1975.
- COMNAVSURFPAC / COMNAVSURFLANT, Joint Surf Manual, 3840.1B, January 2, 1987.
- Dean, R.G. Ocean Engineering Technical Report No. 12, "Equilibrium Beach Profiles: U.S. Atlantic and Gulf Coasts, University of Delaware, 45 pp. January, 1977.
- Earle, M. D., Surf Forecasting Software Users Manual, Naval Research Laboratory (Formerly Naval Ocean Research and Development Activity) Technical Report 352, 194 pp., 1988.
- Earle, M. D., Surf Forecasting Software Scientific Reference Manual, Naval Research Laboratory (Formerly Naval Ocean Research and Development Activity) Technical Note 351, 261 pp., 1989.
- Earle, M. D., Surf Forecasting Software Improvements, MEC Systems Corp. (now Neptune Sciences, Inc.). Report for Naval Research Laboratory (Formerly Naval Oceanographic and Atmospheric Research Laboratory), 31 pp., 1991.
- Hsu, Y.L, T.R. Mettlach, and M.D. Earle, Improvement and Validation of the Navy Longshore Current Model, Naval Research Laboratory, NRL/FR/7320-00-9927, 41 pp., July, 2000.
- Kraus, N.C., and M. Larson, NMLONG: Numerical Model for Simulating the Longshore Current, Report 1, Model Development and Tests, U.S. Army Waterways Experiment Station, Vicksburg, Mississippi, June, 1991.
- Lippman, T.C., A.H. Brookins and E.B. Thornton, Wave Energy Transformation on Natural Profiles, Coastal Engineering, 27, 1-20, 1996.
- Lippman, T.C., E.B. Thornton, and A.J.H.M. Reniers, Wave Stress and Longshore Current on Barred Profiles. Proc. of the International Conference on Coastal Research in Terms of Large Scale Experiments, Gdansk, Poland, 401-412, 1995.
- Longuet-Higgins, M.S., Longshore Currents Generated by Obliquely Incident Sea Waves, I and II,, J. of Geophysical Research (75), 6778-6801, 1970.
- Longuet-Higgins, M.S., and J.S. Turner, An Entraining Plume Model of a Spilling Breaker, J. Fluid Mech., 63(1), 1-20, 1974.
- Mettlach, T.R. and D. A. May, The Accuracy of the Navy Standard Surf Model-Derived Modified Surf Index and its Sensitivity to Nearshore Bathymetric Profile Error, Naval Research Laboratory, NRL/FR/7240-97-9665, October, 1997.

Pierson, W.J., and L. Moskowitz, A Proposed Spectral Form for Fully-developed Wind Seas Based on the Similarity Theory of A.S. Kitaigorodoski. J. of Geophysical Research, (69), 5181-5190, 1964.

Svendsen, I.A., Wave Heights and Set-up in a Surf Zone. Coastal Engineering, 303-329, 1984.

Svendsen, I.A., Mass Flux and Undertow in a Surf Zone. Coastal Engineering, 347-364, 1984.

Thornton, E.B. and R.T. Guza, Transformation of Wave Height Distribution, J. of Geophysical Research, Volume 88 C10, 5925-5938, 1983.

Thornton, E.B. and R.T. Guza, Surf Zone Longshore Currents and Random Waves, J. of Physical Oceanography, 16, 1165-1178, 1986.

### **3.0 PRELIMINARY DESIGN OF SURF 3.1**

#### **3.1 SURF 3.1 CSCI Overview**

SURF 3.1 is a parametric one-dimensional model based largely on the work of Thornton and Guza (1983, 1986). Thornton and Guza developed several models for random wave processes including a wave height transformation model and a longshore current model. These models contain both numerical and analytical solutions, which provide cross-shore distributions of various parameters such as wave height, longshore current velocity, and wave length. However, because SURF 3.1 is one-dimensional, certain approximations are made: (1) straight and parallel bottom contours, (2) depth-uniform currents, (3) wave heights are Rayleigh distributed, (4) linear wave theory is applicable, and (5) directional wave spectra are narrow-banded in frequency and direction.

The model is designed to operate in a variety of modes to provide both military and civilian users with local surf and current forecasts. SURF 3.1 requires three distinct pieces of information to perform calculations: (1) a depth profile, (2) a directional wave spectrum, and (3) wave refraction information. Each of these required data sources can be accessed externally or generated internally.

This design allows for maximum flexibility when using SURF 3.1 to generate local forecasts where input data may or may not be available. The details of these input formats are described in section 6.0. The following subsections outline the scientific principles behind SURF 3.1 and the inherent fundamental hydrodynamic calculations contained in the model.

##### **3.1.1 Wave and Roller Energy Models**

As waves approach the coast, the frictional effect of the sea floor on the organized orbital motion of water particles within a wave causes the wave to break or spill. The flows of spilling breakers can be separated into two layers, an upper layer of turbulent energy, which rides over a lower layer of energy that maintains an organized oscillatory wave motion. The region of turbulent

water above the wave is termed a surface roller. The original idea of such a two-layer system was introduced by Longuet-Higgins and Turner (1974) (see also Svendsen (1984a,b)). SURF 3.1 incorporates the model of Lippman *et al* (1995, 1996), which produces results consistent with measurements from both a planar and a barred beach. The energy associated with each region of interest is utilized to shoal the incoming waves and drive the longshore current. The energy per unit surface area in a wave is calculated as:

$$E_w = \frac{1}{8} \rho g H_{rms}^2$$

where  $\rho$  is water density and  $g$  is the acceleration due to gravity.  $H_{rms}$  is the root-mean-square wave height. The energy per unit area associated with a roller is given as:

$$E_r = \frac{1}{8} \rho c f \frac{H_b^3}{h \tan \sigma}$$

where  $c$  is the phase speed of the wave,  $f$  is the zero crossing frequency,  $H_b$  is the height of the wave at breaking,  $h$  is water depth, and  $\sigma$  is the angle the roller makes with the body of the wave. A default value of 5 degrees is used for the roller angle in SURF 3.1.

### 3.1.2 Energy Dissipation in the Surf Zone

As a wave propagates across the surf zone, its energy is dissipated due to bottom friction, wave breaking, turbulence, and wave-current interaction. A generic formulation of this energy dissipation is given by the energy flux equation:

$$\frac{\partial(E_w c_g \cos \theta)}{\partial x} = - \langle \epsilon_b \rangle$$

where  $E_w$  is the wave energy,  $c_g$  is the wave group velocity and  $\theta$  is the wave direction relative to shore normal ( $x$  positive offshore). The Right Hand Side (RHS) of the above, equation,  $\langle \varepsilon_b \rangle$ , is the ensemble averaged dissipation function. Thornton and Guza (1983) modeled this dissipation function as:

$$\langle \varepsilon_b \rangle = \frac{1}{4} \rho g f \frac{B^3}{h} \int H^3 p_b(H) dH$$

where  $B$  is an empirical coefficient, and  $p_b(H)$  is the probability distribution for breaking waves described by:

$$p_b(H) = W(H)p(H)$$

where  $p(H)$  is a Rayleigh Distribution of wave heights and  $W(H)$  is a weighting function resulting in a weighted Rayleigh distribution. Several weighting functions  $W(H)$  have been constructed by various authors, the weighting function applied in SURF 3.1 developed by Thornton and Guza (1986) is given as:

$$W(H) = \left[ \frac{H_{rms}}{\gamma h} \right]^4 \left( 1 - e^{-\left[ \frac{H}{\gamma h} \right]^2} \right)$$

where  $\gamma$  is an empirical factor determined from field data to be 0.42,  $h$  is the water depth and  $H$  is the wave height. If wave roller energy is considered in the model, the modified energy flux equation is given as:

$$\frac{\partial(E_w c_g \cos \theta)}{\partial x} + \frac{\partial(E_r c \cos \theta)}{\partial x} = - \langle \varepsilon_r \rangle$$

and the dissipation becomes a function of the roller term.

$$\langle \varepsilon_r \rangle = \frac{1}{4} \rho g f \frac{H_b^3}{h} \cos \sigma \int H^3 p_b(H) dH$$

The above equation is solved using a numerical forward stepping and convergence scheme to determine wave and roller energy along with  $H_{rms}$  values at each point.

### 3.1.3 Longshore Current Calculations

When waves enter the surf zone at an angle, the shore-parallel component of momentum inherent to wave motion drives a current along the shore. This longshore current can be a significant force inside the surf zone. Calculation of the current velocity is based on radiation stress theory (see Longuet-Higgins, 1970a, 1970b). A general form of the longshore momentum equation is:

$$\tau_y^h + \rho \frac{d}{dx} \left( \mu h \frac{dV}{dx} \right) - \langle \tau_y^b \rangle + \tau_y^w = 0$$

where  $\rho$  is the water density,  $h$  is the water depth, and  $V$  is the longshore current. The first term on the left hand side is the radiation stress in the along shore direction exerted by waves on the water given by:

$$\tau_y^h = \langle \varepsilon_b \rangle \frac{\sin \theta}{c}$$

where  $\varepsilon_b$  is the dissipation function defined in the previous section,  $c$  is wave phase speed, and  $\theta$  is the angle of wave approach with respect to  $x$ . The second term is the horizontal mixing. The horizontal eddy viscosity  $\mu$  is modeled after Battjes (1975).

$$\mu = Mh \left( \frac{\varepsilon_b}{\rho} \right)^{\frac{1}{3}}$$

in which  $M$  is an empirical constant equal to 2. The third term is the mean stress due to bottom friction given by:

$$\tau_y^b = \rho c_f u V$$

where  $c_f$  is the bottom friction coefficient,  $u$  is the magnitude of the near-bottom horizontal wave orbital velocity, and  $V$  is the longshore current. Linear wave theory defines the near-bottom wave-induced orbital velocity as:

$$u = \frac{\pi H}{T \sinh(kh)}$$

where  $H$  is the wave height,  $T$  is the wave period and  $k$  is the wave number which can be calculated using the dispersion relation:

$$\sigma^2 = g k \tanh(kh)$$

where  $\sigma$  is the radian wave frequency and  $g$  is gravity. The longshore current equation is solved using a finite difference approach after wave heights, water depths, and wave dissipation values are calculated at each cross-shore grid point in the surf zone.

A major improvement to the longshore current calculation is included in Surf 3.1. Hsu et al. (2000) showed that using a variable bottom friction coefficient in the longshore current model provides more realistic distributions of longshore current velocities. The depth dependent bottom friction coefficient function is defined as



$$c_f(x) = \begin{cases} 0.003 & ; x \geq \frac{X_b}{2} \\ 0.003 \left( \frac{h \frac{X_b}{2}}{h(x)} \right) & ; x < \frac{X_b}{2} \end{cases}$$

where  $x$  is the offshore distance,  $h$  is the local water depth, and  $X_b$  is the distance from the shoreline to the location where ten percent of the waves are breaking. It should be noted that the variable bottom friction function reflects the shoreward increase in friction due to sediment sorting and compensates for the lack of vertical diffusivity in one-dimensional models.

#### 3.1.4 Directional Energy Spectra

SURF 3.1 allows users to generate surf forecasts using two different directional wave energy spectrum types. The user can choose from an internally generated wave spectrum or an external wave spectrum. If the internally generated spectrum is selected, a modified Pierson-Moskowitz (1964) spectrum is calculated based on sea and swell conditions defined in the surf model input file. A detailed description of the external wave spectrum format is available in section 6.0. Users can also examine the shoaled and refracted directional wave spectrum at specific depths by using options described in section 6.0.

#### 3.1.5 Differences Between Surf 3.0 and Surf 3.1

The transition from Surf 3.0 to Surf 3.1 includes several scientific and code improvements. Surf 3.1 includes a new longshore current model, based on the work of Hsu et al. (2000), which provides improved longshore current velocity distributions. Several error checking routines to examine the stability and usability of input depth profiles are used in Surf 3.1. The length of input file names was increased to 40 characters. The ability to output a shoaled and refracted shallow


water directional wave spectrum is now available to expert users. A description of the output directional wave spectrum file is available in section 6.0.

The input file for the new model is simplified and streamlined. The number of lines in the Surf 3.1 input file has been reduced and the method for modifying user options has changed. All of the options are still available, but normal operation of Surf 3.1 no longer requires the user to specify every option flag. To simplify the input file, a set of default options is implicitly included in the input file format. The changes to the input file are described in section 6.0.

#### **4.0 SURF 3.1 CSCI ARCHITECTURAL DESIGN**

The Architectural Design section shows the overall design and the calling sequence for all CSU's of the SURF 3.1 Model. Each CSU is shown in the calling sequence with the associated CSU related to each specific unit. Figure (1) presents the path in which each CSU is called and all associated CSU's, which in turn are called from the parent unit. Specific details concerning the criteria for each CSU being called are defined in the Section 5.0: SURF 3.1 CSU Detailed Design.

Figure 1. SURF CSCI Architectural Design

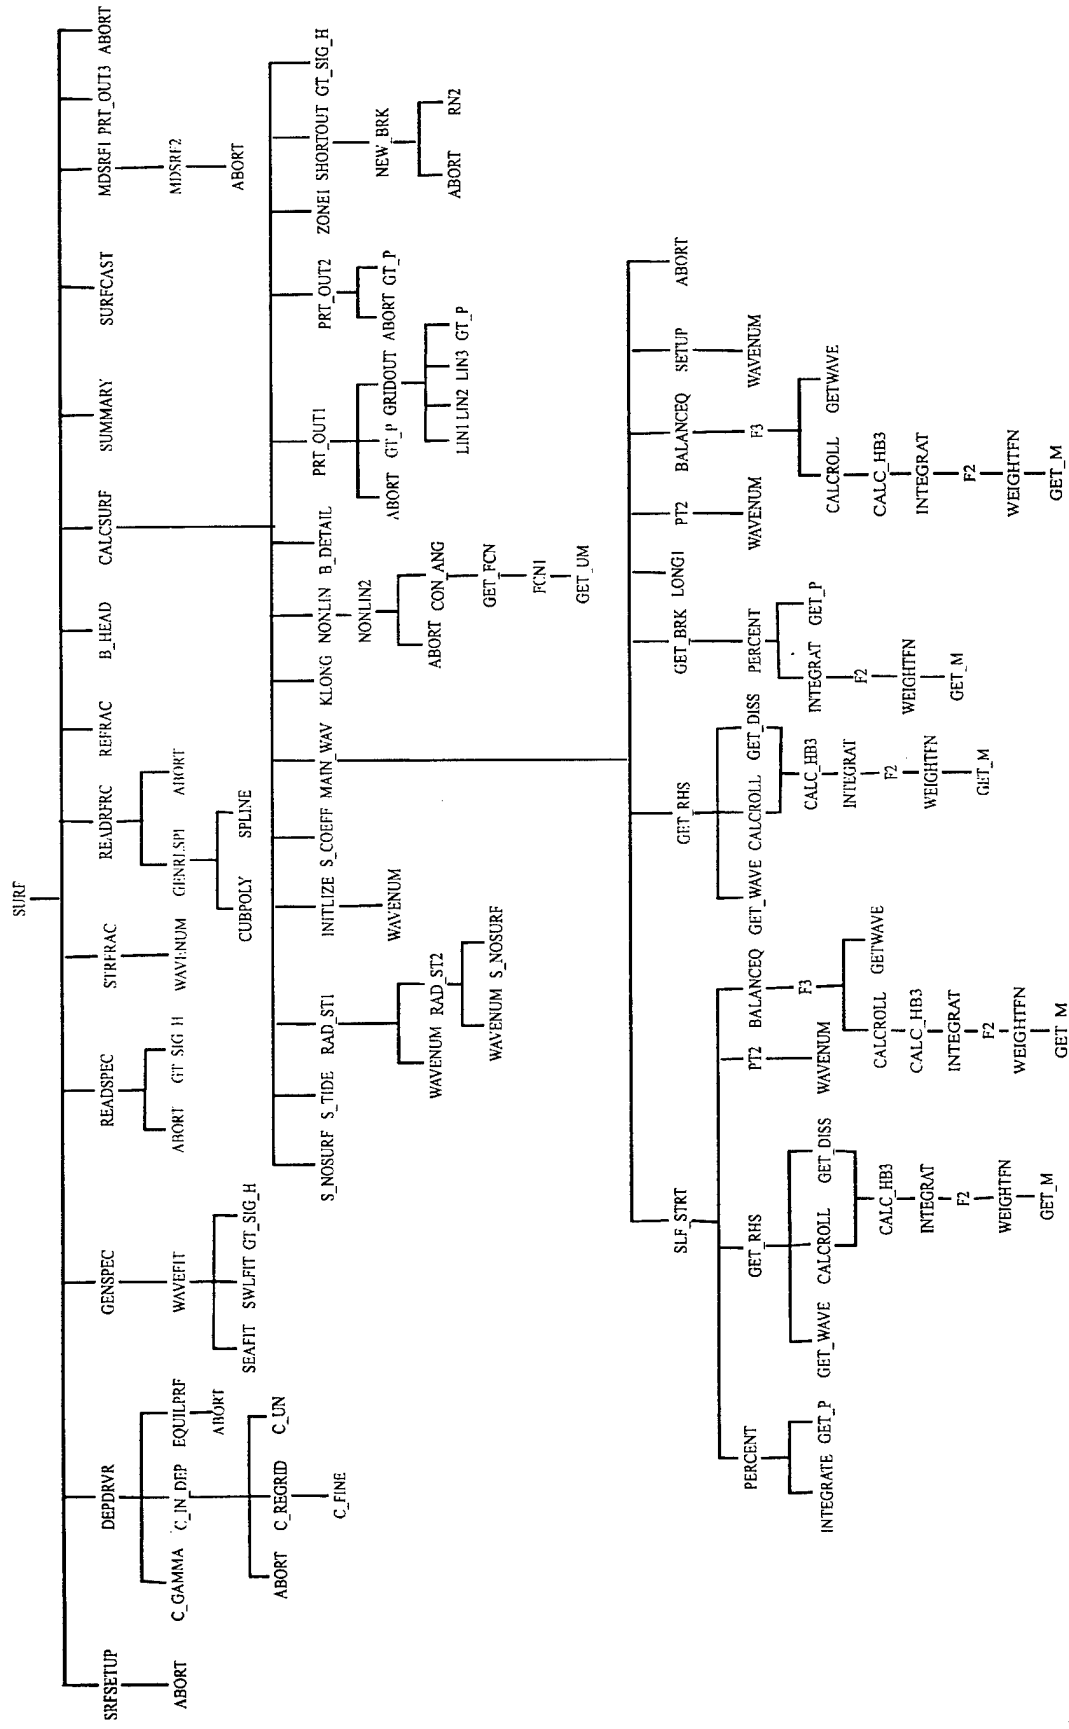

## 5.0 SURF 3.1 CSCI DETAILED DESIGN

### 5.1 Program SURF

#### Program Call:

SURF ( )

#### Summary:

The SURF routine is the starting point for executing SURF 3.1. The routine identifies the input type and controls the reading of data and user selected computation options. The routine calls the main wave parameter calculation routines and controls the output of the resulting data.

**Input Variables:** None.

**Output Variables:** None.

#### Local Variables:

alfa	Real	Significant Breaker Height
bravo	Real	Maximum Breaker Height
chrlie	Real	Dominant Breaker Period
dangle	Real	Angle Between Directional Bins
depname	Char*40	Depth Profile File Name
dsea	Real	Input Direction for Sea Contribution
dstart	Real	Input Starting Depth
dswell	Real	Input Swell Direction for Internally Generated Spectrum
dxy1 (points)	Real	Corresponding Depths with No Tide
echo	Real	Breaker Angle
ehsig	Real	Significant Wave Height from Directional Spectrum
esowm (dirNum,freqNum)	Real	Directional Wave Spectrum
file_dat	Char*40	Output File Name *.dat
file_in	Char*40	Input Filename
file_out	Char*40	Output File Name *.out
file_tmp	Char*40	Temporary File
foxtrt	Real	Longshore Current Speed and Direction
fracname	Char*40	Wave Refraction File Name
freq (freqNum)	Real	Input Wave Spectrum Center Frequencies
freq1 (freqNum)	Real	Beginning Frequency Bin Values
freq2 (freqNum)	Real	Ending Frequency Bin Values


gamma2	Real	Beach Orientation, Compass Heading Directly Toward Beach
golf1	Real	Number of Surf Lines
golf2	Real	Surf Zone Width
gt_frq	Integer	Spectrum Type
hsea	Real	Input Significant Wave Height for Sea Contribution to Pierson Moskowitz Spectrum
hswell	Real	Input Significant Wave Height for Internally Generated Spectrum
iday	Integer	Input Day
idirec	Integer	Number of Direction Bins in the Input Spectrum
ifreq	Integer	Number of Frequency Bands in the Input Spectrum
igamma	Integer	Beach Orientation Rotated 90° from Original Heading Toward Beach
ihour	Integer	Input Hour
ihl1	Real	Wind Speed Coded Surf Forecast Value
ihl2	Real	Wind Direction
imin	Integer	Input Minute
imonth	Integer	Input Month
iyear	Integer	Input Year
jgamma	Integer	Temporary Value Set to Beach Orientation
line	Char*80	Temporary Character Variable
lin_stress	Logical	Longshore Current Solution (True or False)
lndname	Char*40	Input Landing Zone Name
nmn	Integer	Number of Points in the Input Depth Array
pct (4)	Real	Percent of Different Breaker Types pct (1) = Spilling pct (2) = Plunging pct (3) = Surging pct (4) = Total
period (freqNum)	Real	Period Array (1/Frequency)
psea	Real	Input Wave Period for Sea Contribution to Pierson Moskowitz Spectrum
pswell	Real	Input Swell Period for Internally Generated Spectrum
roller	Logical	Roller Usage (True or False)
self_st	Char*1	Self Start Flag (Yes or No)
slope	Real	Bottom Slope
spectra	Logical	Does Input Spectra Exist? (True or False)
spefile	Char*40	Selected Wave Spectrum File Name
surfy	Logical	Significant Wave Heights Greater than 0.5 ft? (True or False)
tide	Real	Input Tide Level
wdir	Real	Input Wind Direction Compass Heading Wind

wspd	Real	Blows from
xcoeff (dirNum, freqNum)	Real	Input Wind Speed
xdelt	Real	Wave Height Refraction Coefficients
xdelt_gr	Real	Surf Zone Output Interval
xfrom (dirNum)	Real	Self Adjusting Cross-Shore Grid Step
		Direction Array, Direction Wave Energy Comes From
xtheta (dirNum,freqNum)	Real	Angle Refraction Coefficients
xx1(points)	Real	Adjusted Cross-Shore Distances from Depth Profile
ydepth	Char*1	Input Depth Profile Used? (Yes or No)
ydetail	Char*1	Detailed Output? (Yes or No)
yrefrac	Char*1	Is Refraction Considered in Analysis? (Yes or No)
ystr	Char*1	Is Straight Coast Refraction Used? (Yes or No)

#### Subroutines Called from SURF ( ):

ABORT  
 B\_HEAD  
 CALCSURF  
 DEPDRVR  
 GENSPEC  
 MDSRF1  
 PRT\_OUT3  
 READRFRC  
 READSPEC  
 REFRAC  
 SRFSETUP  
 STRFRAC  
 SUMMARY  
 SURFCAST

Figure 2. Program SURF Flowchart

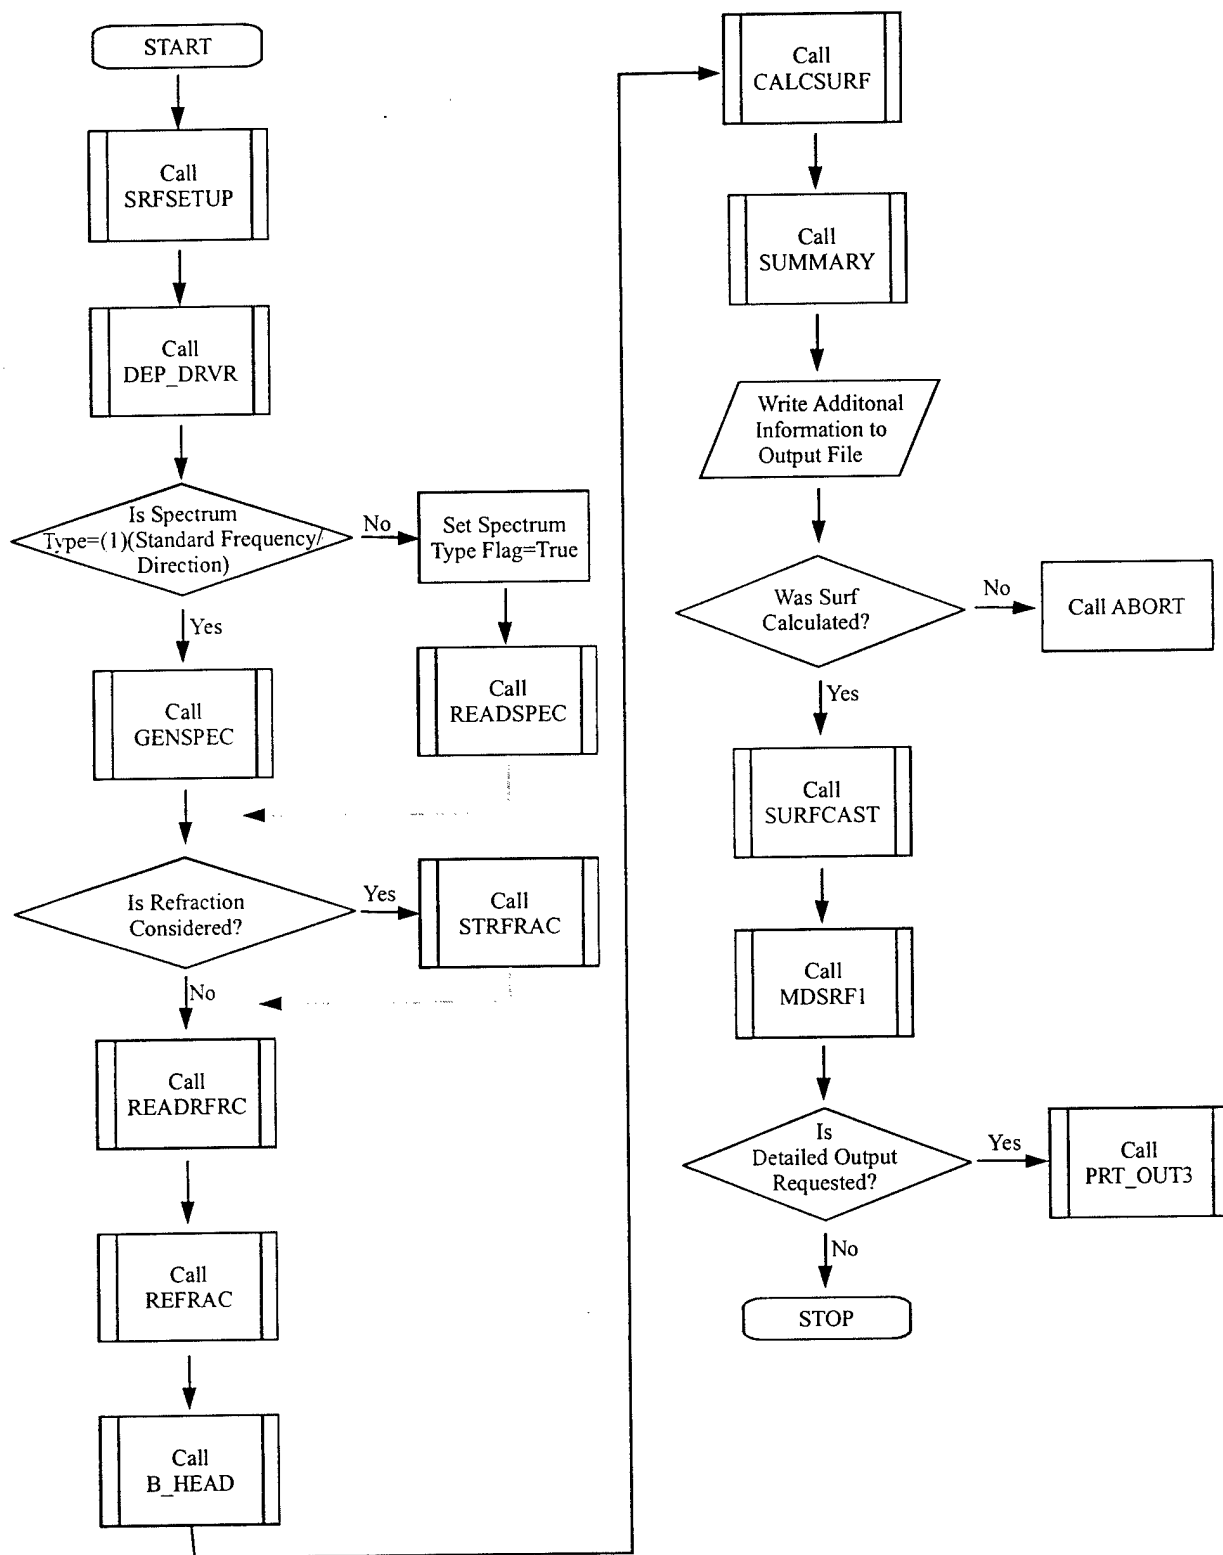



## 5.2 Subroutine ABORT

### Subroutine Call:

ABORT ( )

### Summary:

Subroutine ABORT acts as the single program termination routine. The subroutine handles normal program execution and error interrupt. ABORT is called to stop the execution of the program. If an error interrupt calls ABORT the error message is generated locally in the calling routine.

**Input Variables:** None.

**Output Variables:** None.


**Local Variables:** None.

**Subroutines Called from ABORT ( ):** None.

### ABORT ( ) Called from Subroutines:

C\_IN\_DEP  
EQUILPRF  
MAIN\_WAV  
MDSRF2  
NEW\_BRK  
NONLIN2  
PRT\_OUT1  
PRT\_OUT2  
READRFRC  
READSPEC  
SRFSETUP  
SURF

**Figure 3. Subroutine ABORT Flowchart**

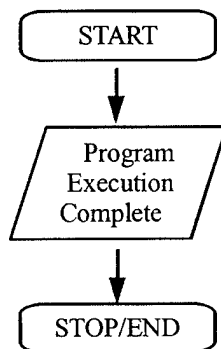

### 5.3 Subroutine B\_DETAIL

#### Subroutine Call:

B\_DETAIL ( iyear, imonth, iday, ihour, imin)

#### Summary:

Subroutine B\_DETAIL formats and writes the detailed surf model data output to the output text file. The file name is generated as "\*.out", where the "\*" is replaced with the prefix of the input file name.

#### Input Variables:

iday	Integer	Input Day
ihour	Integer	Input Hour
imin	Integer	Input Minute
imonth	Integer	Input Month
iyear	Integer	Input Year

**Output Variables:** None.


**Local Variables:** None.

**Subroutines Called from B\_DETAIL ( ):** None.

**B\_DETAIL ( ) Called from Subroutines:**

CALCSURF

**Figure 4. Subroutine B\_DETAIL Flowchart**

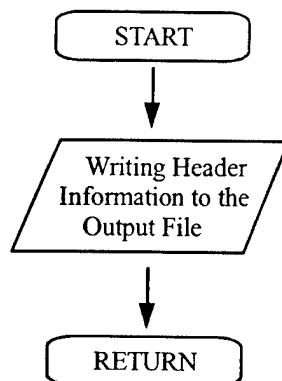

## 5.4 Subroutine B\_HEAD

### Subroutine Call:

B\_HEAD (gt\_frq, roller, lin\_stress)

### Summary:

Subroutine B\_HEAD writes header information and user selected model options to the output file.

### Input Variables:

gt_frq	Integer	Spectrum Type
lin_stress	Logical	Longshore Current Solution (True or False)
roller	Logical	Roller Option Flag (True or False)

**Output Variables:** None.


**Local Variables:** None.

**Subroutines Called from B\_HEAD ():** None.

**B\_HEAD () Called from Subroutines:**

SURF

**Figure 5. Subroutine B\_HEAD Flowchart**

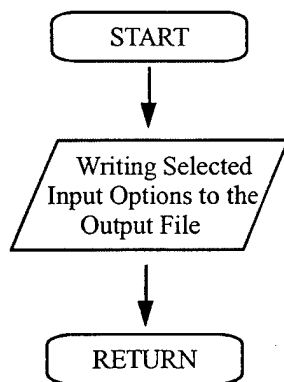

## 5.5 Subroutine BALANCEQ

### Subroutine Call:

BALANCEQ (roller, theta, Cg, rhs, hrms1, dp, mean\_freq, xk, hrms2, convg)

### Summary:

Subroutine BALANCEQ computes the new wave height value at the next onshore grid cell by performing an iterative solution to the energy equations.

### Input Variables:

Cg	Real	Wave Group Velocity
dp	Real	Offshore Water Depth
hrms1	Real	Root Mean Square Wave Height
mean_freq	Real	Wave Frequency
rhs	Real	Right Hand Side of Energy Balance Equation
roller	Logical	Roller Option Flag (True or False)
theta	Real	Wave Angle
xk	Real	Wave Number

### Output Variables:

convg	Logical	Convergence Flag (True or False)
hrms2	Real	Significant Wave Height at next Onshore Grid

### Local Variables:

avgh	Real	Average Wave Height
check	Real	Convergence Check
done	Logical	Flag indicating End of Loop
f3	Real	Function which Calculates Total Energy
kount	Integer	Loop Iteration Counter
lhs	Real	Left Hand Side of the Energy Equation
limit	Logical	Flag for Comparison of the Left & Right Side of the Energy Equation (True or False)
lowerh	Real	Lower Limit of Wave Height
max_kount	Integer	Maximum Number of Loop Iterations =1000
oldavgh	Real	Previous Average Wave Height Value
pct	Real	Convergence Step Value
tol	Real	Convergence Tolerance

upperh                      Real                      Upper Limit of the Wave Height

**Subroutines Called from BALANCEQ ():**None


**Functions Called from BALANCEQ ():**

F3

**BALANCEQ () Called from Subroutines:**

MAIN\_WAV  
SLF\_STRT

Figure 6. Subroutine BALANCEQ Flowchart

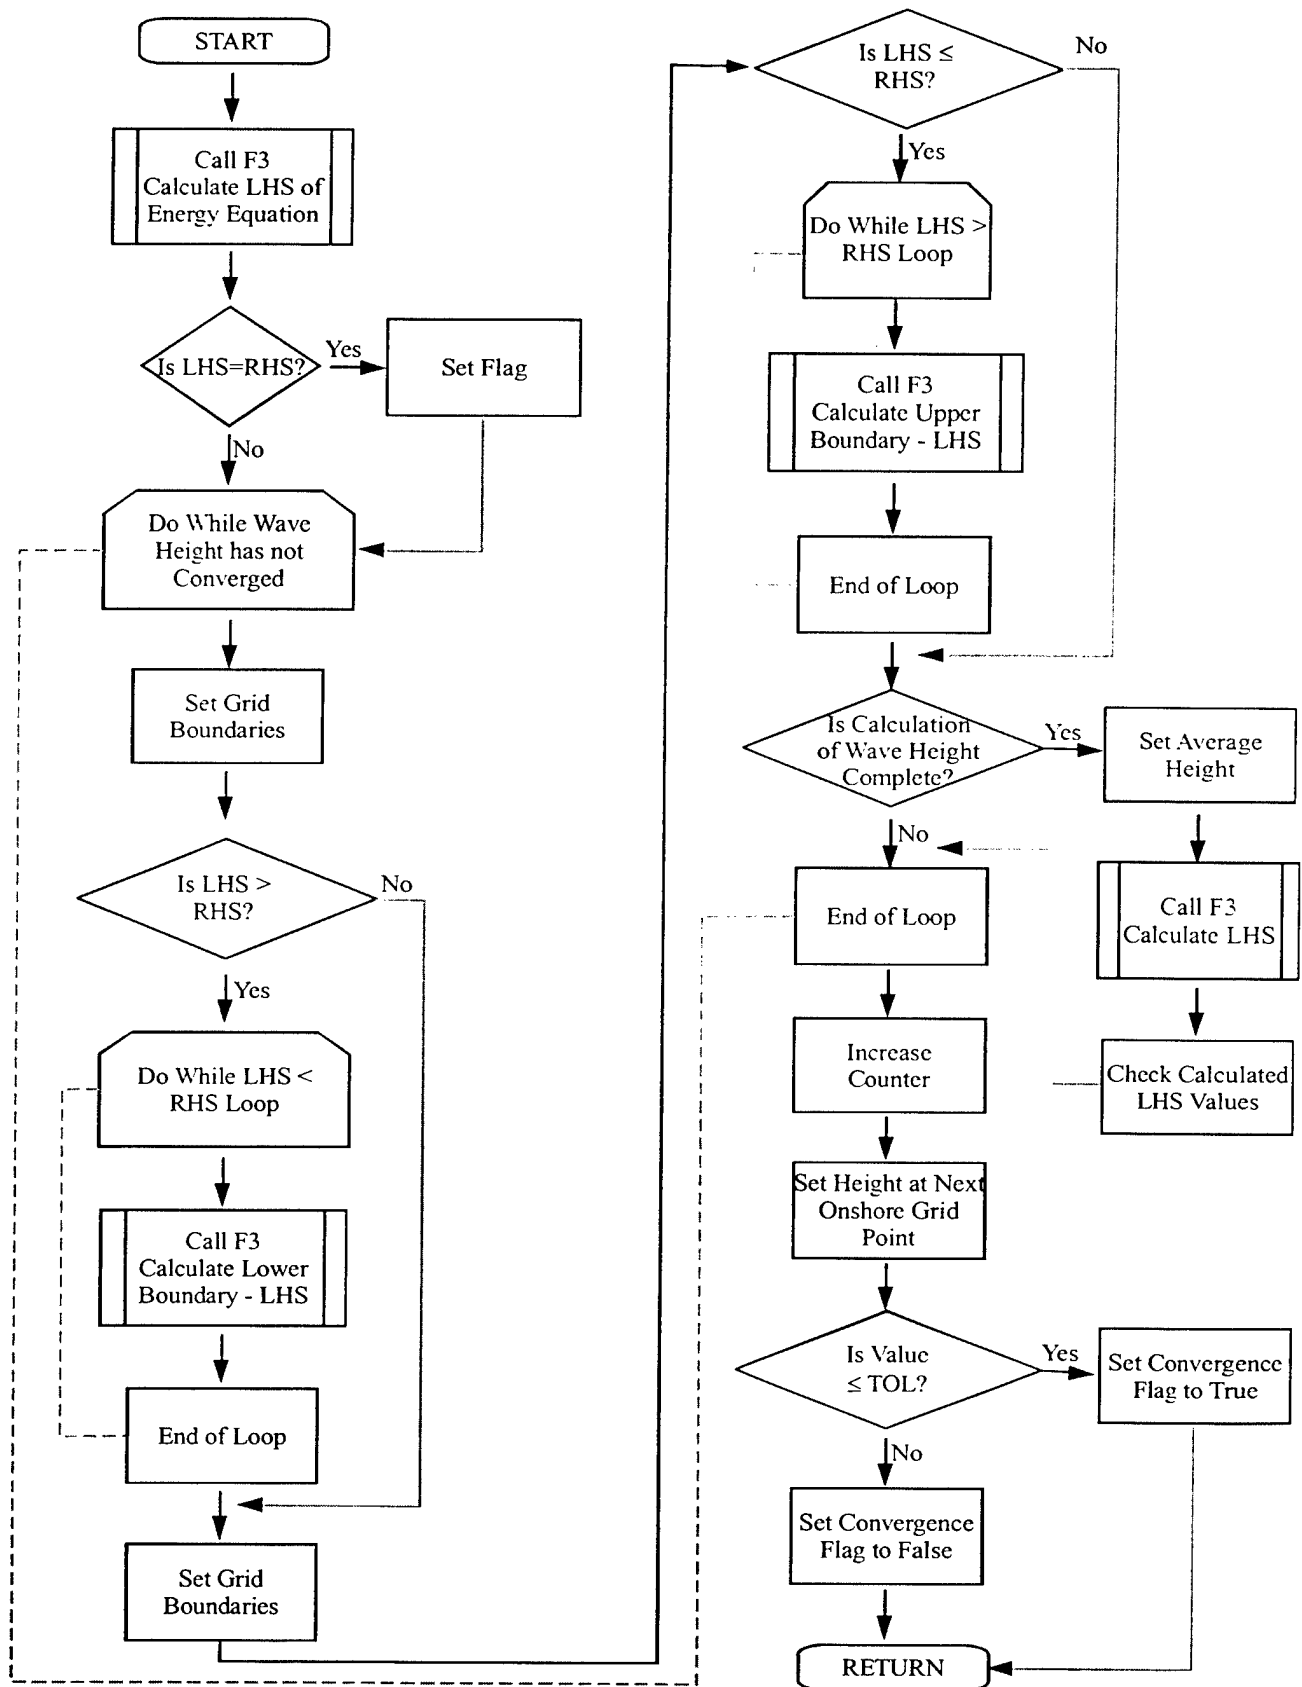

## 5.6 Subroutine C\_FINE

### Subroutine Call:

C\_FINE (ndepth, xxin, zzin, xdelt\_gr, nnn, xx1, dxy1)

### Summary:

Subroutine C\_FINE linearly interpolates the input water depths and offshore distances to an evenly spaced grid. The internally defined grid self-adjusts to maximize spatial resolution without exceeding the array dimensions.

### Input Variables:

ndepth	Integer	Number of Points in Input Depth Profile
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step
xxin (points)	Real	Cross-Shore Distances
zzin (points)	Real	Corresponding Depths

### Output Variables:

dxy1 (points)	Real	Corresponding Depths without Tide
nnn	Integer	Number of Points in the Input Depth Array
xx1 (points)	Real	Adjusted Cross-Shore Distances from Depth Profile

### Local Variables:

dx1	Real	Temporary Variable Used in Calculation of Next Grid Point Distance
dx2	Real	Temporary Variable Used in Calculation of Next Grid Point Distance
dxx	Real	Distance Quotient
dzz	Real	Difference Between Depth and Previous Depth
mm	Integer	Counter Variable
mm1	Integer	Counter Variable
mmm	Integer	Counter Variable
nn	Integer	Counter Variable
xlast	Real	Last Distance Offshore from Input Profile
xtemp	Real	Temporary Variable for Cross-Shore Values


Subroutines Called from C\_FINE (:): None.



**C\_FINE () Called from Subroutines:**

**C\_REGRID**

**Figure 7. Subroutine C\_FINE Flowchart**

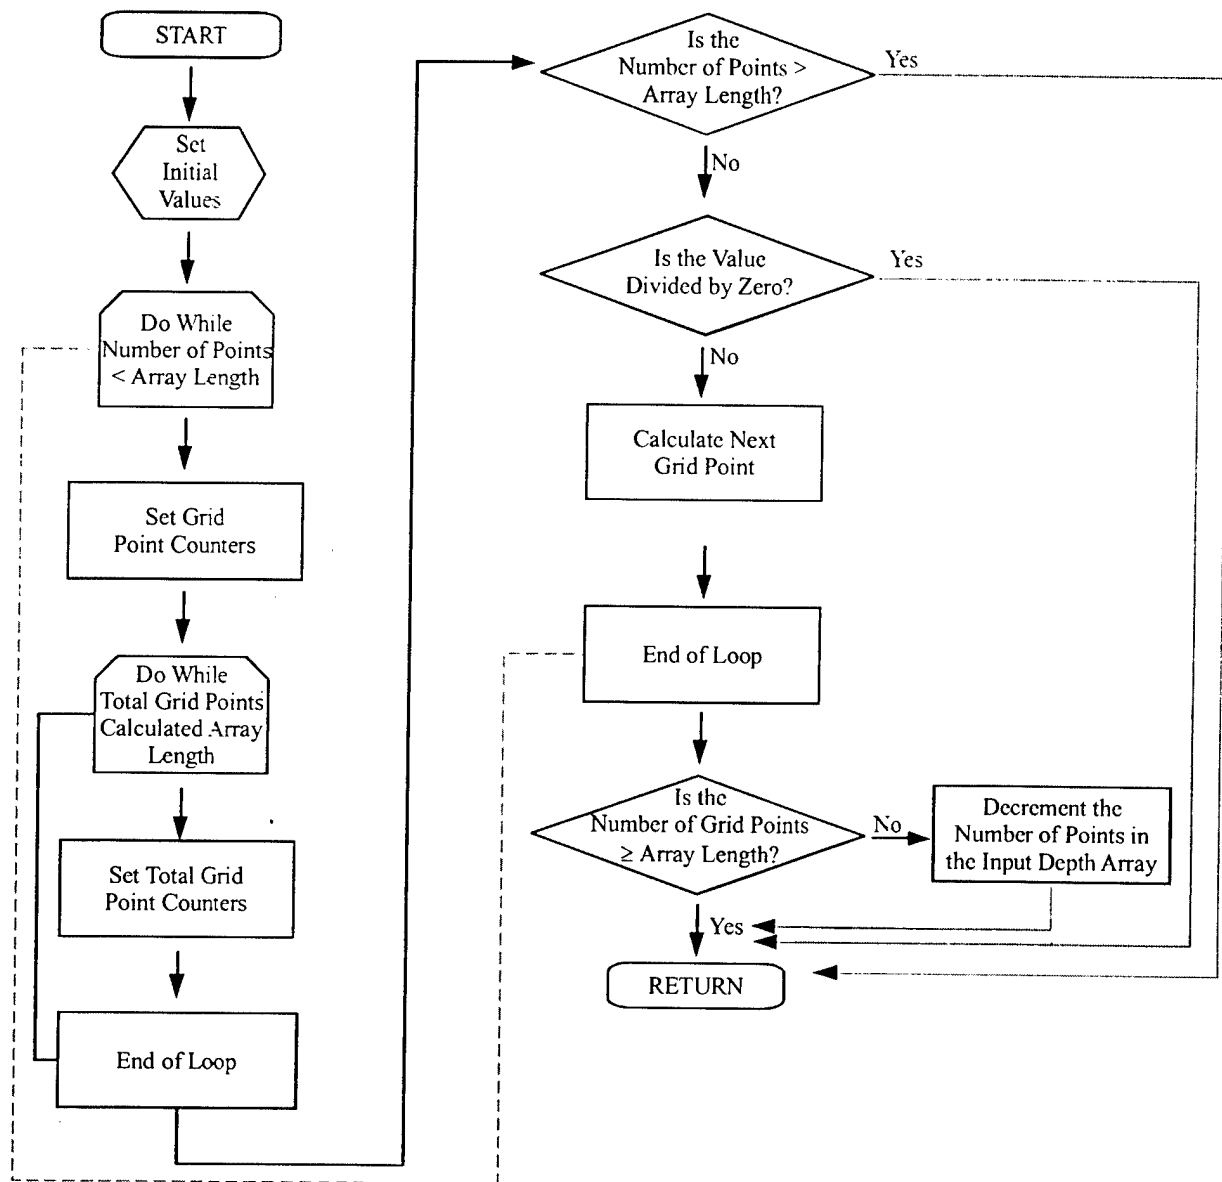

## 5.7 Subroutine C\_GAMMA

### Subroutine Call:

C\_GAMMA (gamma2, igamma)

### Summary:

Subroutine C\_GAMMA rotates the beach orientation data read from the input file. The user defines the beach orientation as the compass heading of a boat traveling directly toward the shore on a perpendicular line to the coast. The value is then rotated to reflect the orientation of the local coastline with respect to magnetic north.

### Input Variables:

gamma2	Real	Beach Orientation, Heading Directly Toward Beach
--------	------	--

### Output Variables:

igamma	Integer	Rotated Beach Orientation
--------	---------	---------------------------

### Local Variables:


gammatp	Real	Temporary Variable Used in Calculation
mtemp	Integer	Temporary Variable in Calculation

Subroutines Called from C\_GAMMA (): None.

C\_GAMMA () Called from Subroutines:

DEPDRVR

Figure 8. Subroutine C\_GAMMA Flowchart

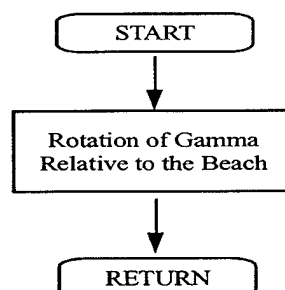

## 5.8 Subroutine C\_IN\_DEP

### Subroutine Call:

C\_IN\_DEP (depname, dstart, xdelt\_gr, nnn, xx1, dxy1)

### Summary:

Subroutine C\_IN\_DEP reads the depth profile and header information contained in the input data file. The routine identifies the units of measurement used to construct the depth profile and checks the order of the offshore distances. If the data is misaligned, the subroutine will sort and reorder the depths and offshore distances.

### Input Variables:

depname	Char*40	Depth Profile File Name
dstart	Real	Input Starting Depth
xdelt_gr	Real	Self Adjusting Cross-Shore Grid Step

### Output Variables:

dxy1 (points)	Real	Corresponding Depths without Tide
nnn	Integer	Number of Points in the Input Depth Array
xx1 (points)	Real	Adjusted Cross-Shore Distances from the Depth Profile

### Local Variables:

a1	Real	Temporary Variable
a2	Real	Temporary Variable
adum	Char*80	Temporary Variable, Character String in Input Field
dcal1	Real	Conversion Factor for Distance Offshore, Convert to Meters
dcal2	Real	Conversion Factor for Depths Offshore, Convert to Meters
dx	Real	Temporary Variable for Distance Offshore from Input File
dz	Real	Temporary Variable for Depths
I	Integer	Loop Variables

ical1	Integer	Input from Depth File, Units of Distance Offshore 1 = Feet 2 = Meters 3 = Yards
ical2	Integer	Depth Units Input from Depth File 1 = Feet 2 = Meters 3 = Fathoms
instat	Integer	File Open Status
j	Integer	Loop Variables
k	Integer	Temporary Variable for Number of Points
line	Integer	Counter for the Number of Lines in the Input Depth Profile
loop	Integer	Loop Counter
ndepth	Integer	Number of Points in Input Depth Profile
xxin (points)	Real	Cross-Shore Distances
zzin (points)	Real	Corresponding Depths


**Subroutines Called from C\_IN\_DEP ( ):**

ABORT  
C\_UN  
C\_REGRID

**C\_IN\_DEP ( ) Called from Subroutines:**

DEPDRVR

Figure 9. Subroutine C\_IN\_DEP Flowchart

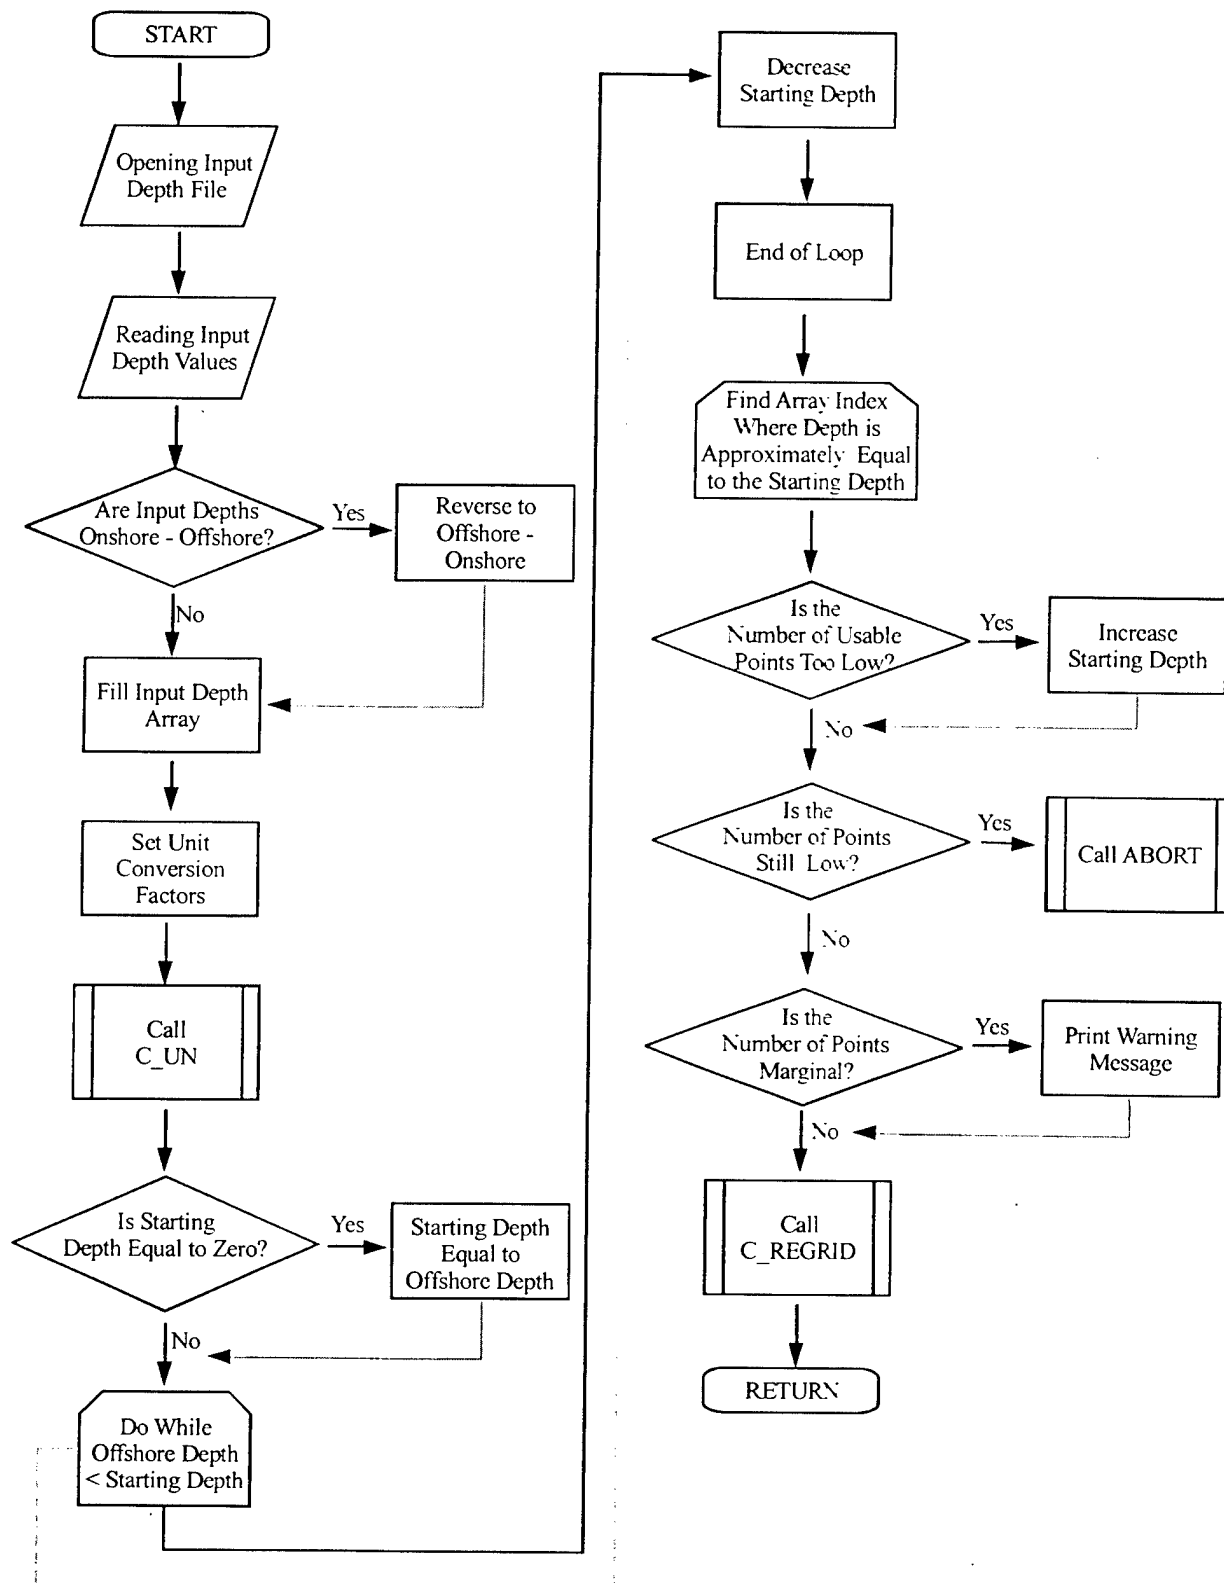

## 5.9 Subroutine C\_REGRID

### Subroutine Call:

C\_REGRID (ndepth, xxin, zzin, xdelt\_gr, nnn, xx1, dxy1)

### Summary:

Subroutine C\_REGRID examines the cross-shore step size ( $\Delta x$ ) of the input depth profile and selects a new step size to optimize the depth and cross-shore distance arrays. The step size is automatically adjusted and the arrays are constructed so the length does not exceed the dimension of the array.

### Input Variables:

ndepth	Integer	Number of Points in Depth Profile
xdelt_gr	Real	Self Adjusting Cross-Shore Grid Step
xxin (points)	Real	Cross-Shore Distances
zzin (points)	Real	Corresponding Depths

### Output Variables:

nnn	Integer	Number of Points in Input Depth Array
xdelt_gr	Real	Self Adjusting Cross-Shore Grid Step
xx1(points)	Real	Adjusted Cross-Shore Distances from Depth Profile
xxin (points)	Real	Adjusted Cross-Shore Distances
zzin (points)	Real	Corresponding Depths

**Local Variables:** None.


### Subroutines Called from C\_REGRID ():

C\_FINE

### C\_REGRID () Called from Subroutines:

C\_IN\_DEP

**Figure 10. Subroutine C\_REGRID Flowchart**

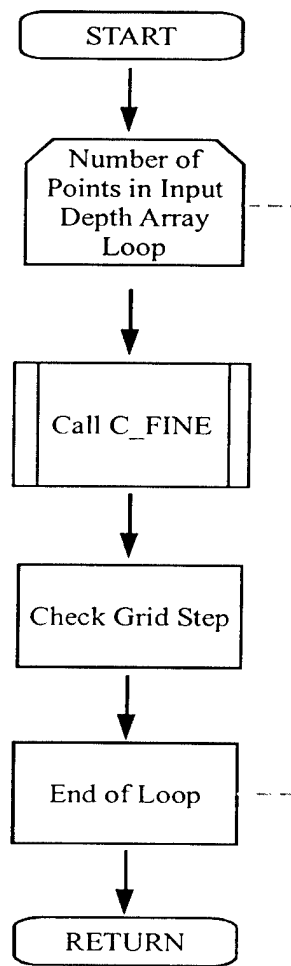

## 5.10 Subroutine C\_UN

### Subroutine Call:

C\_UN (dcal1, dcal2, ndepth, xxin, zzin, xdelt\_gr, dstart)

### Summary:

Subroutine C\_UN converts measurement units of input cross-shore distances, depth arrays, starting depth and the grid step size ( $\Delta x$ ) to meters for internal calculations.

### Input Variables:

dcal1	Real	Conversion Factor for Cross-Shore Distances
dcal2	Real	Conversion Factor for Water Depths
dstart	Real	Input Starting Depth
ndepth	Integer	Number of Points in Input Depth Profile
xdelt_gr	Real	Self Adjusting Cross-Shore Grid Step
xxin (points)	Real	Cross-Shore Distances
zzin (points)	Real	Corresponding Depths

### Output Variables:

dstart	Real	Input Starting Depth
xdelt_gr	Real	Self Adjusting Cross-Shore Grid Step
xxin (points)	Real	Cross-Shore Distances
zzin (points)	Real	Corresponding Depths

### Local Variables:

I	Integer	Loop Counter
---	---------	--------------


**Subroutines Called from C\_UN ( ):** None.

**C\_UN ( ) Called from Subroutines:**

C\_IN\_DEP



**Figure 11. Subroutine C\_UN Flowchart**

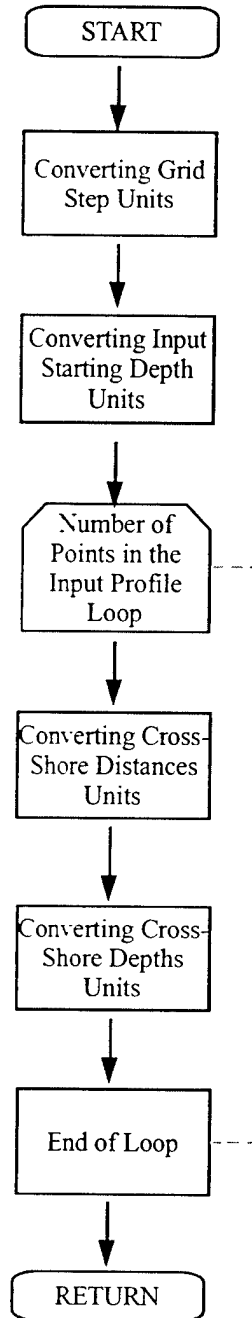

## 5.11 Subroutine CALC\_HB3

### Subroutine Call:

CALC\_HB3 (dp, hrms, p\_flag, hb3)

### Summary:

Subroutine CALC\_HB3 integrates the wave height distribution for a given root mean square wave height and calculates a term inherent to the roller dissipation function.

### Input Variables:

dp	Real	Offshore Water Depth
hrms	Real	Root Mean Square Wave Height Calculation
p_flag	Logical	Weighting Factor Flag (True or False)

### Output Variables:

hb3	Real	Weighting Function for Dissipation Term
-----	------	---

### Local Variables:

hhigh	Real	Maximum Wave Height
hlow	Real	Minimum Wave Height
integrat	Real	Wave Height Distribution Calculated for a Single Wave at a Specific Location


### Functions Called from CALC\_HB3 ( ):

INTEGRAT

### CALC\_HB3 ( ) Called from Subroutines:

CALCROLL  
GET\_DISS

**Figure 12. Subroutine CALC\_HB3 Flowchart**

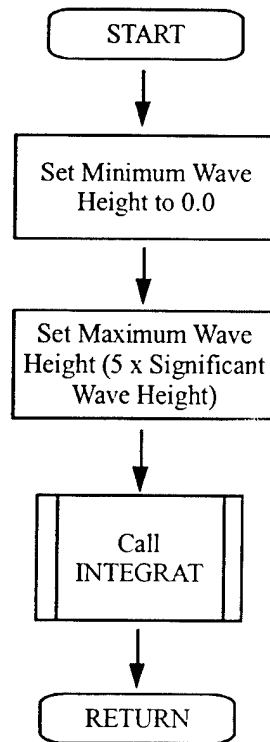

## 5.12 Subroutine CALCROLL

### Subroutine Call:

CALCROLL (roller, hrms, dp, fqz, theta, xk, e\_roller)

### Summary:

Subroutine CALCROLL calculates roller energy at a point in the surf zone based on water depth and Wave Height (hrms) at that location.

### Input Variables:

dp	Real	Offshore Water Depth
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
roller	Logical	Roller Option Flag (True or False)
theta	Real	Wave Angle, Representative of Radiation Stress Angle
xk	Real	Wave Number

### Output Variables:

e_roller	Real	Roller Contribution to Energy Equation
----------	------	--

### Local Variables:

c	Real	Wave Celerity
er	Real	Temporary Roller Variable
hb3	Real	Weighting Function for Dissipation Term
p_flag	Logical	Weighting Factor Flag (True or False)
z	Real	Roller Energy Multiplier

### Subroutines Called from CALCROLL():

CALC\_HB3


### CALCROLL() Called from Subroutines:

GET\_RHS

**CALCROLL() Called from Functions:**

F3

**Figure 13. Subroutine CALCROLL Flowchart**

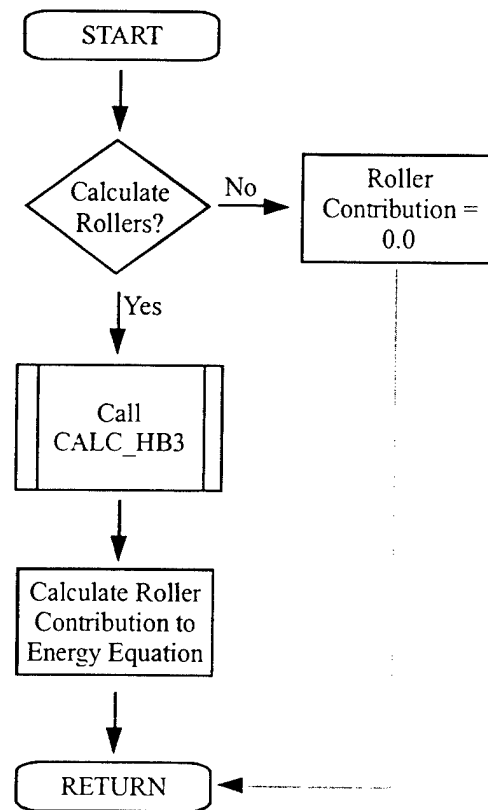

### 5.13 Subroutine CALCSURF

#### Subroutine Call:

CALCSURF ( roller, lin\_stress, ehsig, wspd, wdir, tide, ydepth, nnn, dxyl, xx1, ifreq, freq1, freq2, freq, idirec, xfrom, esowm, dstart, igamma, ydetail, iyear, imonth, iday, ihour, imin, xdelt, xdelt\_gr, self\_st, surf, pct, alfa, bravo, chrlic, echo, foxtrt, golf1, golf2, ihtl1, ihtl2, jgamma)

#### Summary:

Subroutine CALCSURF acts as the primary driver for the various subroutines, which calculate wave parameters and the longshore current across the surf zone.

#### Input Variables:

dstart	Real	Input Starting Depth
dxyl (points)	Real	Corresponding Depths without Tide
ehsig	Real	Significant Wave Height from Directional Spectrum
esowm (dirNum,freqNum)	Real	Directional Wave Spectrum
freq (freqNum)	Real	Input Wave Spectrum Center Frequency
freq1 (freqNum)	Real	Beginning Frequency Bin Value
freq2 (freqNum)	Real	Ending Frequency Bin Value
iday	Integer	Input Day
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequencies in Input Spectrum
igamma	Integer	Beach Orientation Rotated 90 Degrees from Original Heading Toward Beach
ihour	Integer	Input Hour
imin	Integer	Input Minute
imonth	Integer	Input Month
iyear	Integer	Input Year
lin_stress	Logical	Longshore Current Solution (True or False)
nnn	Integer	Number of Points in Input Depth Array
roller	Logical	Roller Option Flag (True or False)
self_st	Char*1	Self Start Flag (Yes or No)
tide	Real	Input Tide Level
wdir	Real	Input Wind Direction, Compass Heading Wind is Blowing From
wspd	Real	Input Wind Speed
xdelt	Real	Surf Zone Output Interval
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step
xfrom (dirNum)	Real	Direction Array, Direction Wave Energy Comes From

xx1(points)	Real	Adjusted Cross-Shore Distances from Depth Profile
ydepth	Char*1	Input Depth Profile Used? (Yes or No)
ydetail	Char*1	Detailed Output? (Yes or No)

#### Output Variables:

alfa	Real	Significant Breaker Height
bravo	Real	Maximum Breaker Height
chr1ie	Real	Dominant Breaker Period
echo	Real	Breaker Angle
foxtrt	Real	Longshore Current Speed and Direction
golfl	Real	Number of Surf Lines
golfl2	Real	Surf Zone Width
ih1l1	Real	Wind Speed
ih1l2	Real	Wind Direction
jgamma	Integer	Temporary Value Set to Beach Orientation
pct (4)	Real	Percent of Different Breaker Types: pct (1) = Spilling pct (2) = Plunging pct (3) = Surging pct (4) = Total
surf	Logical	Flag for Low/No Surf Conditions (True or False)

#### Local Variables:

along (points)	Real	Horizontal Mixing Parameter from Thornton & Whittord
b	Real	Empirical Factor in Thornton & Guza Wave Breaking Model (= 1.00)
b1 (points)	Real	Bottom Slope
blong (points)	Real	Bottom Friction for Deep & Shallow Water
c	Real	Wave Celerity at Input Starting Depth
c1	Real	Eddy Viscosity Coefficient
c2	Real	Bottom Friction Coefficient
c3	Real	Radiation Stress Coefficient - Multiple for Longshore Current Model
c4	Real	Longshore Wind Stress Coefficient - Multiple for Longshore Current Model
cf	Real	Coefficient of Bottom Friction
Cg	Real	Wave Group Velocity
clong (points)	Real	Wind Stress Contribution to Longshore Current
convg	Logical	Energy Equation Convergence Flag
df	Real	Difference Between Adjacent Frequency Bins

distmax	Real	Farthest Offshore Distance
dp	Real	Offshore Water Depth
dth	Real	Difference Between Adjacent Directional Bins
dws_stop	Integer	Flag for Shallow Water Directional Wave Spectrum Print Control
dxy (points)	Real	Pre-Tidal Depth with Tide
eb_last	Real	Roller Dissipation Term at Farthest Point Offshore
ebtemp (points)	Real	Temporary Roller Dissipation Term Across Transect
file_spc	Char*40	File Name of Shallow Water Directional Wave Spectrum
fqd	Real	Peak Frequency at the Center of the Frequency Band
fqz	Real	Zero Crossing Frequency
fts2msq	Real	Conversion Factor from Feet Squared to Meters Squared
h1max	Real	Largest Significant Wave Height in the Surf Zone
h2max	Real	Largest Maximum Wave Height in the Surf Zone
hrms	Real	Root Mean Square Wave Height
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
iimax	Integer	Number of Calculation Locations
irealf	Integer	Cutoff Index for Printing Shallow Water Directional Wave Spectrum
j	Real	Temporary Variable for Cross-Shore Values
j_ii	Integer	Index where Wave Probabilities come Above Threshold
j_ii2	Integer	Longshore Current Loop Variable for Outer Edge of Surf Zone
k	Real	Temporary Variable for Significant Wave Height
per	Real	Peak Period of Directional Wave Spectrum
print_spc	Integer	Flag to Print Shallow Water Wave Spectrum
ptemp (points)	Real	Percentage of Breaking Waves and Breaker Types
rk (points,4)	Real	Matrix of Percentage Breakers and Types Across the Transect
stringout	Character	Shallow Water Wave Spectrum Output String
stringsub	Character	Temporary String Variable
sum1	Real	Sum of Wave Length in the Surf Zone
temp	Real	Temporary Variable
theta	Real	Wave Angle
theta1	Real	Wave Angle at Input Starting Depth



theta2	Real	Wave Angle at Input Starting Depth
v (points)	Real	Longshore Current
vmax	Real	Maximum Positive Longshore Current
vmin	Real	Maximum Negative Longshore Current
vwind	Real	Group Wind Velocity
wdspd	Real	Wind Speed Conversion
		Knots to CM/S = 51.44
wid_ii	Integer	Array Location for Surf Zone Width
width	Real	Surf Zone Width
xk	Real	Wave Number
xktemp (points)	Real	Temporary Variable for Wave Number
xshift	Real	Horizontal Cross-Shore Location
xtemp (points)	Real	Temporary Variable for Cross-Shore Values


#### **Subroutines Called from CALCSURF ():**

B\_DETAIL  
 GT\_SIG\_H  
 INITLIZE  
 KLONG  
 MAIN\_WAV  
 NONLIN  
 PRT\_OUT1  
 PRT\_OUT2  
 RAD\_ST1  
 S\_COEFF  
 S\_NOSURF  
 S\_TIDE  
 SHORTOUT  
 ZONE1

#### **CALCSURF () Called from Subroutines:**

SURF

Figure 14. Subroutine CALCSURF Flowchart

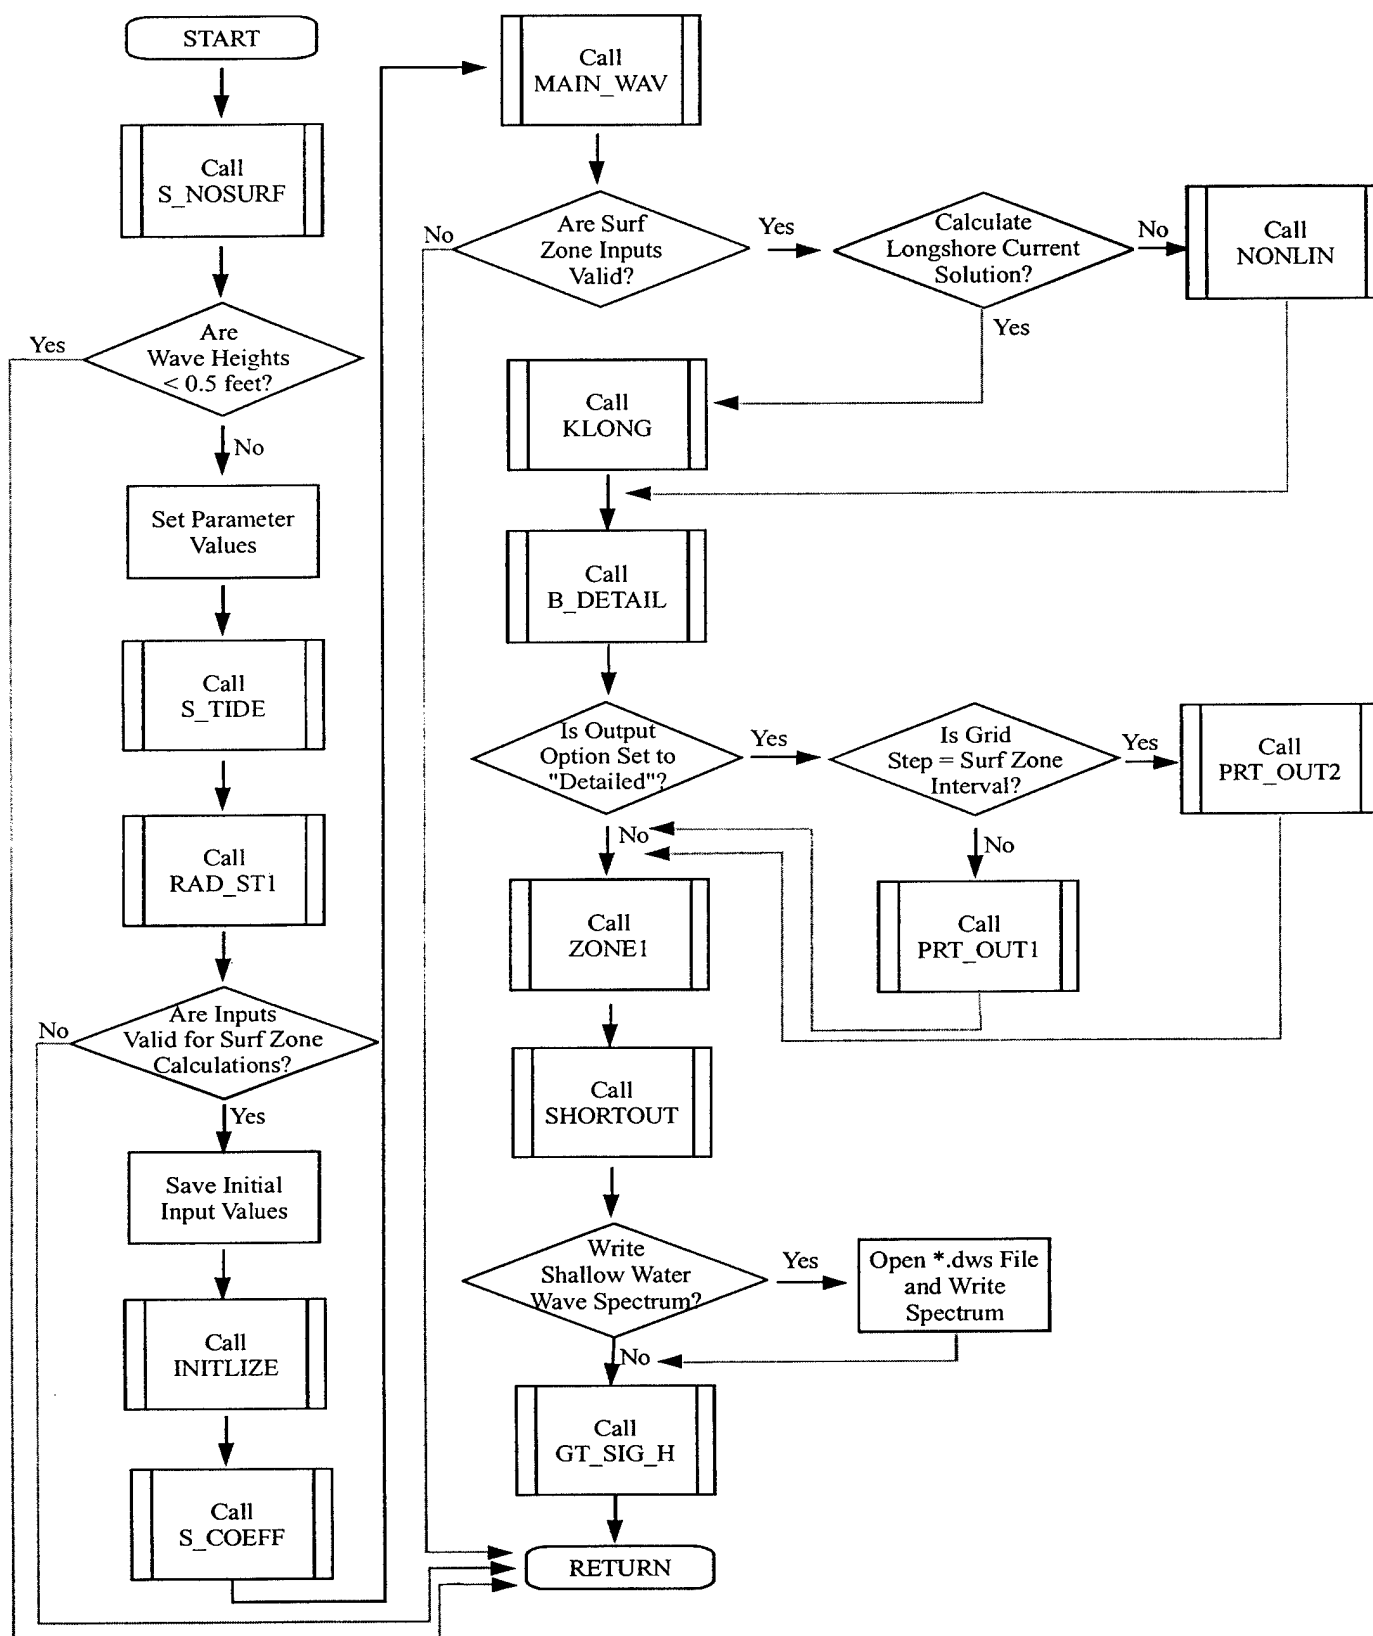

## 5.14 Subroutine CON\_ANG

### Subroutine Call:

CON\_ANG (t, h, l, dp, q, theta2, u, v, convg, kount)

### Summary:

Subroutine CON\_ANG calculates the longshore current velocity based on the flux of momentum in the longshore direction.

### Input Variables:

dp	Real	Offshore Water Depth
h	Real	Wave Height
l	Real	Wave Length
q	Real	Longshore Momentum Flux
t	Real	Wave Period
theta2	Real	Rotated Wind Direction
u	Real	Cross-Shore Current Velocity

### Output Variables:

convg	Logical	Convergence Flag (True or False)
kount	Integer	Counter
v	Real	Longshore Current Velocity

### Local Variables:

f1	Real	Wave Height Distribution Weighting Function
f2	Real	Wave Height Distribution Weighting Function
numit	Integer	Number Limitation - Set to 1000
tol	Real	Tolerance Check - Set to 1.0E-4
v_new	Real	Temporary Longshore Current Velocity


### Subroutines Called from CON\_ANG ( ):

GET\_FCN

**CON\_ANG ( ) Called from Subroutines:**

NONLIN2

**Figure 15. Subroutine CON\_ANG Flowchart**

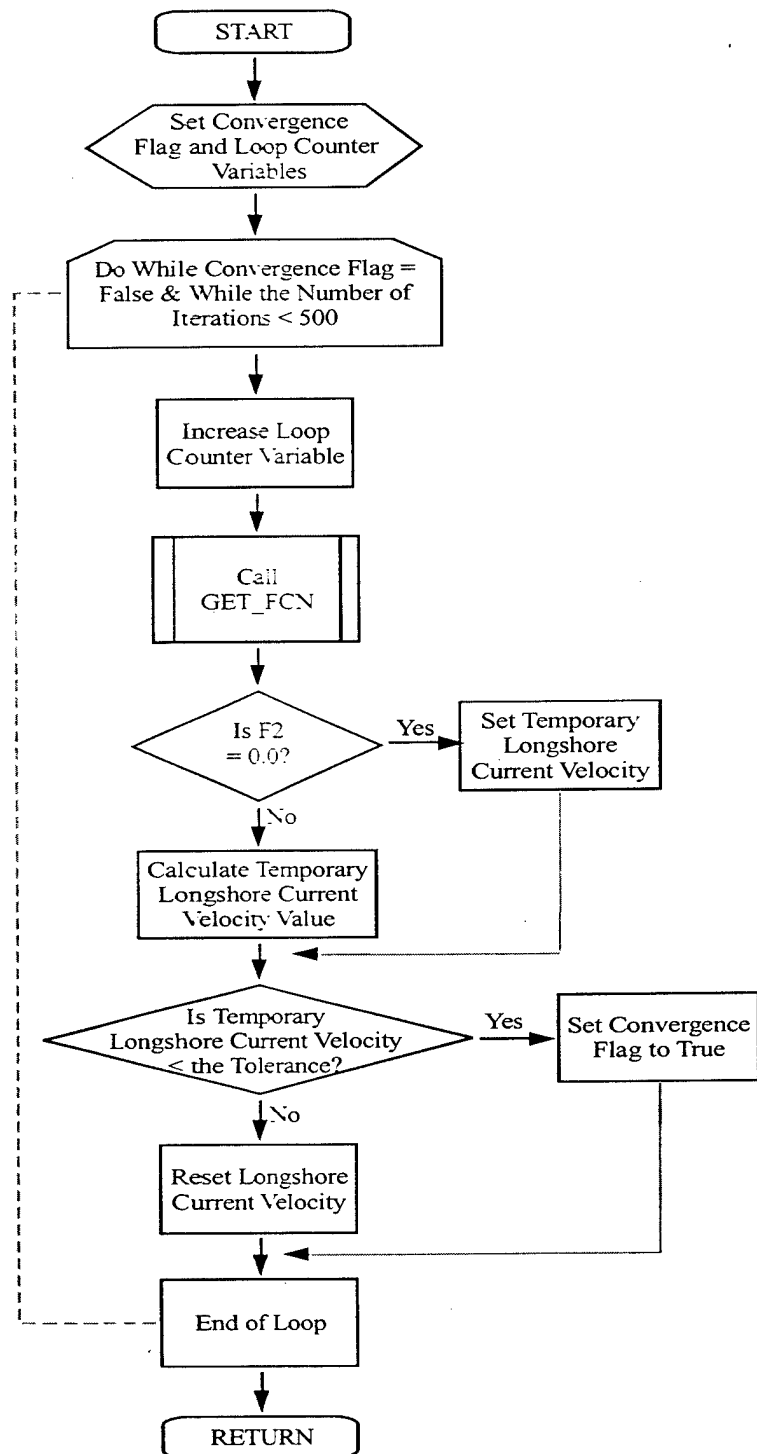

## 5.15 Subroutine DEPDRVR

### Subroutine Call:

DEPDRVR (depname, dstart, xdelt, ydepth, slope, gamma2, nnn, xx1, dxy1, igamma, xdelt\_gr)

### Summary:

Subroutine DEPDRVR is the driver routine for reconstructing the depth arrays in an optimized step size.

### Input Variables:

depname	Char*40	Depth Profile File Name
dstart	Real	Input Starting Depth
gamma2	Real	Beach Orientation Compass Heading Directly Toward Beach
slope	Real	Bottom Slope
xdelt	Real	Surf Zone Output Interval
ydepth	Char*1	Usage of Input Depth Profile (Yes or No)

### Output Variables:

dxy1 (points)	Real	Corresponding Depths without Tide
igamma	Integer	Beach Orientation Rotated 90 Degrees from the Original Heading Toward the Beach
nnn	Integer	Number of Points in the Input Depth Array
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step
xx1 (points)	Real	Adjusted Cross-Shore Distances from the Depth Profile

**Local Variables:** None.


### Subroutines Called from DEPDRVR ():

EQUILPRF  
C\_GAMMA  
C\_IN\_DEP

### DEPDRVR () Called from Subroutines:

SURF

**Figure 16. Subroutine DEPDRVR Flowchart**

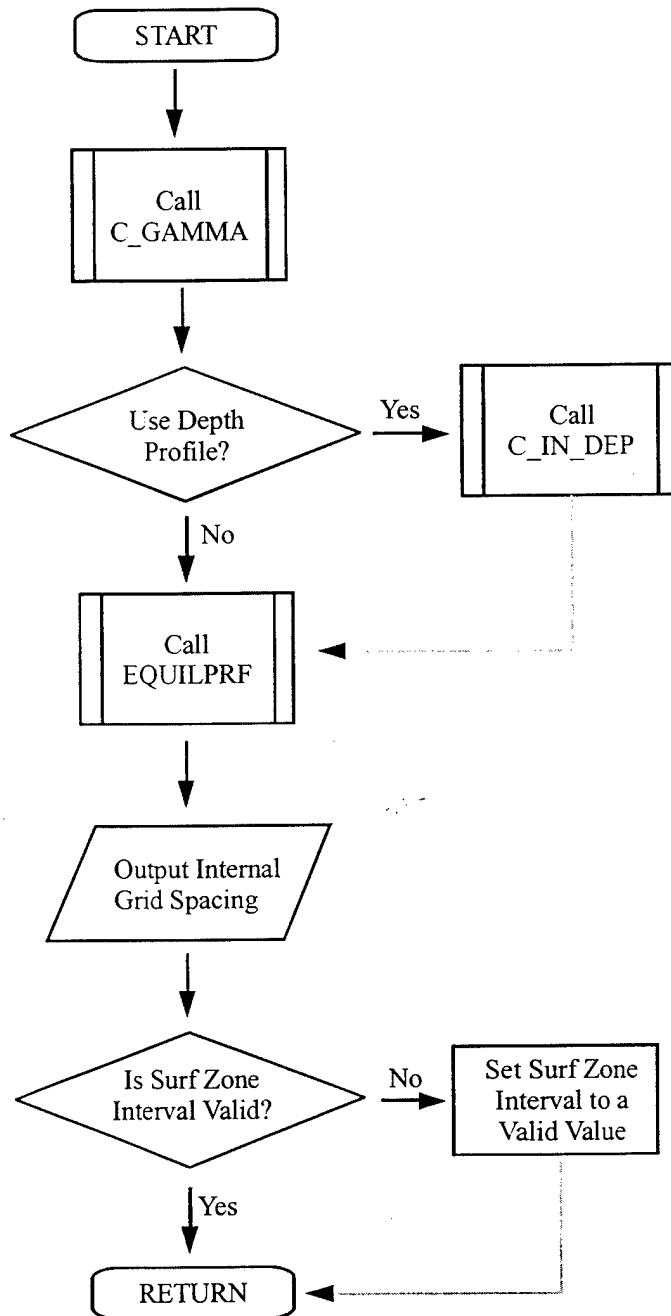

## 5.16 Subroutine EQUILPRF

### Subroutine Call:

EQUILPRF (rtype, dpthoff, xgrd, numstep, xx1, dxy1)

### Summary:

Subroutine EQUILPRF constructs a depth profile for surf calculations. This equilibrium profile is based on the equation:  $y = Ax^{(2/3)}$ , where A is a coefficient related to sediment grain size or frictional dissipation. This equation was developed by Dean (1977) from a study of more than 200 beach profiles. The "A" coefficient in the equilibrium equation has units of meters, calculations in feet require different values or conversion to feet after initial calculations. Sediment/grain types are denoted by the variable "rtype" which is the index for a value in the array of coefficients defining the following grain sizes:

- 1 = boulders
- 2 = cobble
- 3 = pebbles
- 4 = granules
- 5 = very coarse sand
- 6 = coarse sand
- 7 = medium sand
- 8 = fine sand
- 9 = very fine sand
- 10 = silt

### Input Variables:

dpthoff	Real	Input Starting Depth
numstep	Integer	Number of Points in the Input Depth Array
rtype	Real	Sediment/ Grain Type
xgrd	Real	Self-Adjusting Cross-Shore Grid Step

### Output Variables:

dxy1(points)	Real	Corresponding Depths with No Tide
xx1(points)	Real	Cross-Shore Distances

### Local Variables:

a(10)	Real	Array of Sediment Coefficients
ause	Real	Actual Sediment Type Coefficient for Profile
call	Real	Conversion Factor (Meters)
distance	Logical	Flag for Equilibrium Depth Bottom
diston	Real	Highest Onshore Distance
dpthon	Real	Highest Onshore Depth
I	Integer	Loop Counter
x	Real	Temporary Variable
xone	Real	Farthest Point Offshore
z	Real	Temporary Variable


**Subroutines Called from EQUILPRF ():** ABORT

**EQUILPRF () Called from Subroutines:**

DEPDRVR



Figure 17. Subroutine EQUILPRF Flowchart

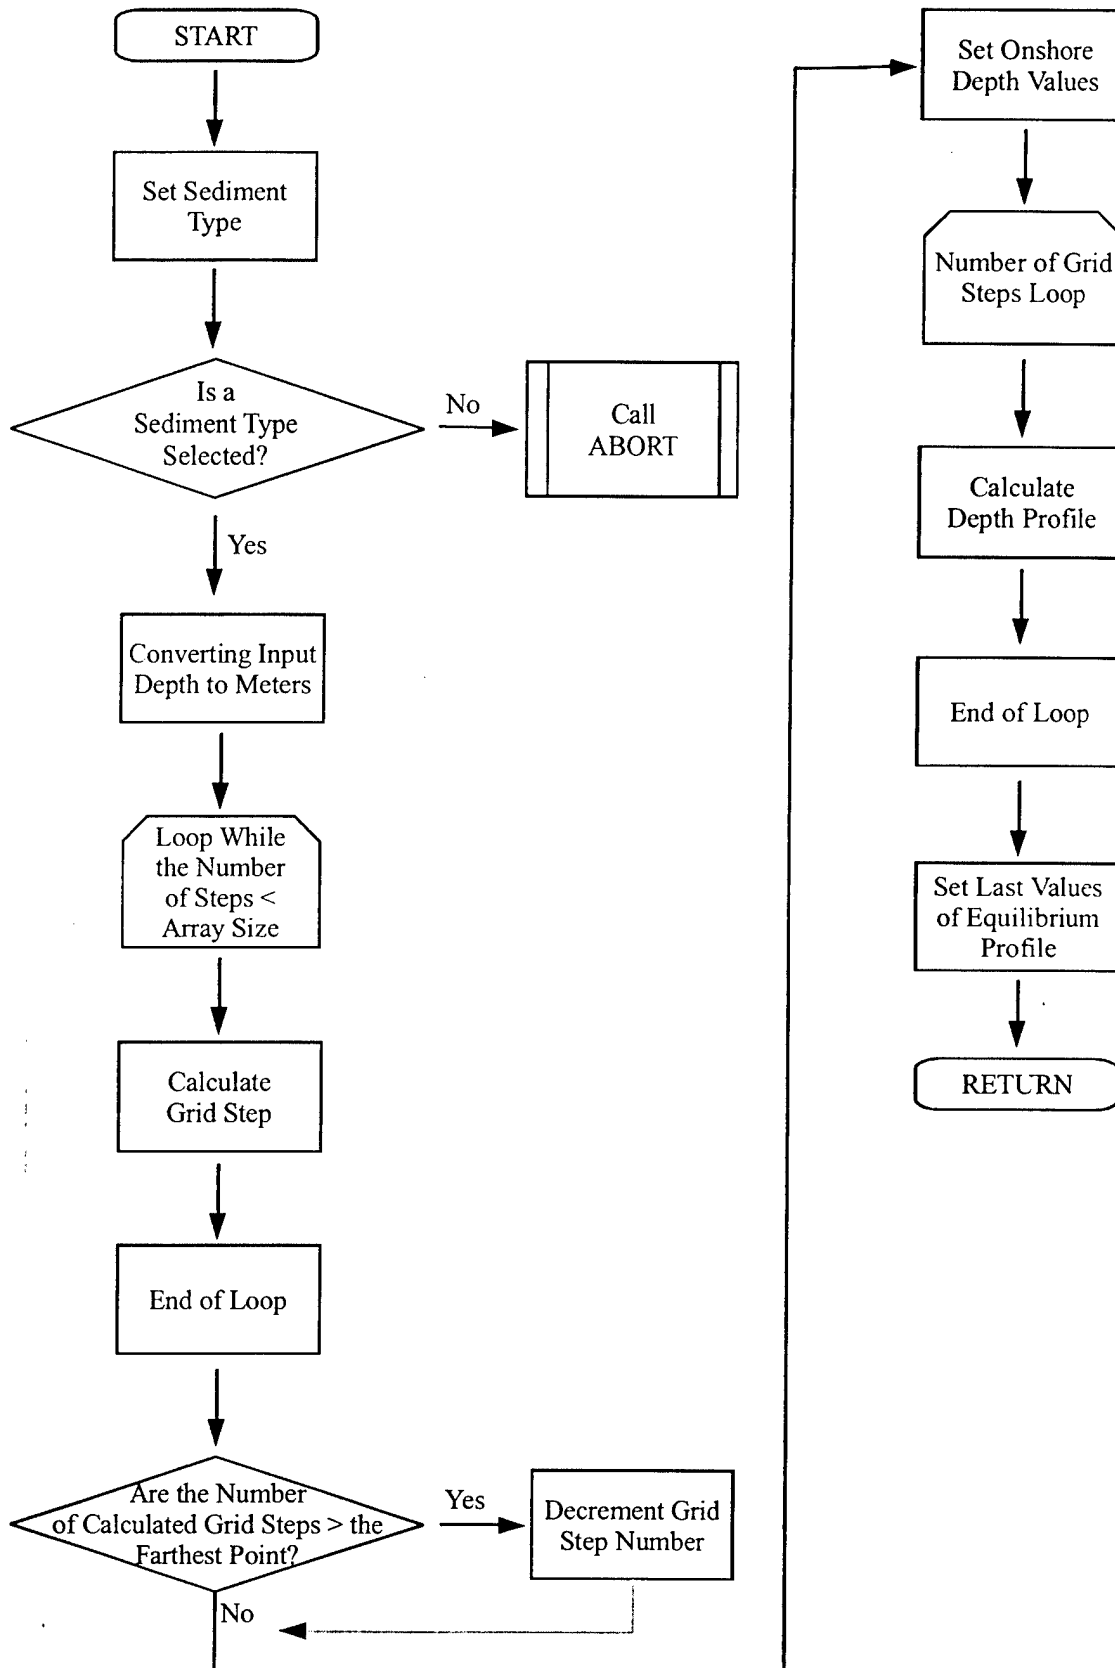

## 5.17 Subroutine GENRLSPL

### Subroutine Call:

GENRLSPL (xin, yin, inlen, xout, outlen, yout)

### Summary:

Subroutine GENRLSPL is the driver routine to interpolate an array of x and y values to a new set of x values using a cubic spline polynomial.

### Input Variables:

inlen	Integer	Number of input Coordinates
outlen	Integer	Number of Coordinates to Interpolate
xin (dirNum)	Real	X-Coordinates of known Values
xout (dirNum)	Real	Interpolated X-Coordinates
yin (dirNum)	Real	Y-Coordinates of known Values

### Output Variables:

yout (dirNum)	Real	Interpolated Y-Coordinates
---------------	------	----------------------------

### Local Variables:

coef (4,dirNum)	Real	Temporary Array of Interpolated Coefficients
cubpoly	Real	Value at the Interpolated Coordinate
I	Integer	Loop Counter

### Subroutines Called from GENRLSPL ():

SPLINE


### Functions Called from GENRLSPL ():

CUBPOLY

### GENRLSPL () Called from Subroutines:

READRFRC

**Figure 18. Subroutine GENRLSPL Flowchart**

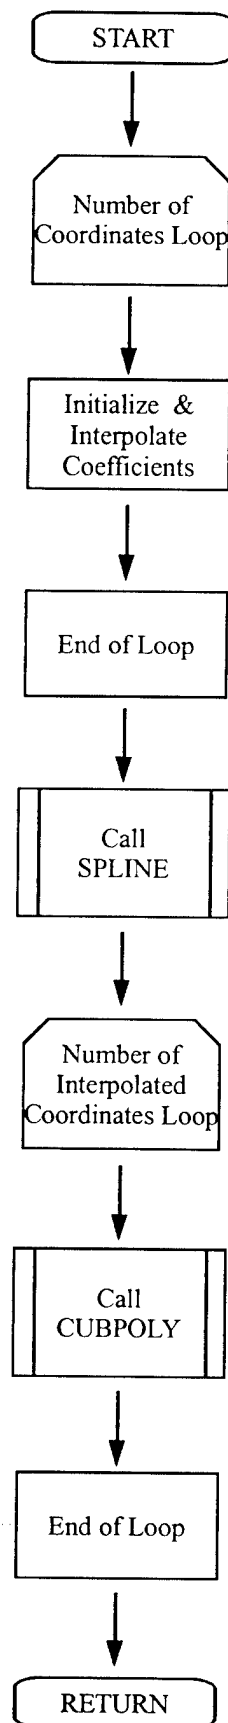

## 5.18 Subroutine GENSPEC

### Subroutine Call:

GENSPEC (hsea, psea, dsea, hswell, pswell, dswell, ifreq, idirec, freq, freq1, freq2, xfrom, esowm, period, ehsig, dangle)

### Summary:

Subroutine GENSPEC initializes matrices for the creation of an internally generated directional wave spectrum. This wave spectrum has 50 frequencies and 36 directions.

### Input Variables:

dsea	Real	Input Direction for Sea Contribution
dswell	Real	Input Swell Direction for Internally Generated Spectrum
hsea	Real	Input Significant Wave Height for Sea Contribution to Pierson Moskowitz Equation
hswell	Real	Input Significant Wave Height for Internally Generated Spectrum
psea	Real	Input Wave Period for Sea Contribution to Pierson Moskowitz Equation
pswell	Real	Input Swell Period for Internally Generated Spectrum

### Output Variables:

dangle	Real	Angle Between Directional Bins
ehsig	Real	Significant Wave Height from Directional Spectrum
esowm (dirNum,freqNum)	Real	Directional Spectrum
freq (freqNum)	Real	Input Wave Spectrum Center Frequencies
freq1 (freqNum)	Real	Beginning Frequency Bin Values
freq2 (freqNum)	Real	Ending Frequency Bin Values
idirec	Integer	Number of Direction Bins in the Input Spectrum
ifreq	Integer	Number of Frequencies in the Input Spectrum
period (freqNum)	Real	Period Array (1/Frequency)
xfrom (dirNum)	Real	Direction Array, Direction Wave Energy Comes From

### Local Variables:

df	Real	Difference between Frequency Bins
idir	Integer	Direction Loop Counter
ifrq	Integer	Frequency Loop Counter


### Subroutines Called from GENSPEC ():

WAVEFIT

### GENSPEC () Called from Subroutines:

SURF

Figure 19. Subroutine GENSPEC Flowchart

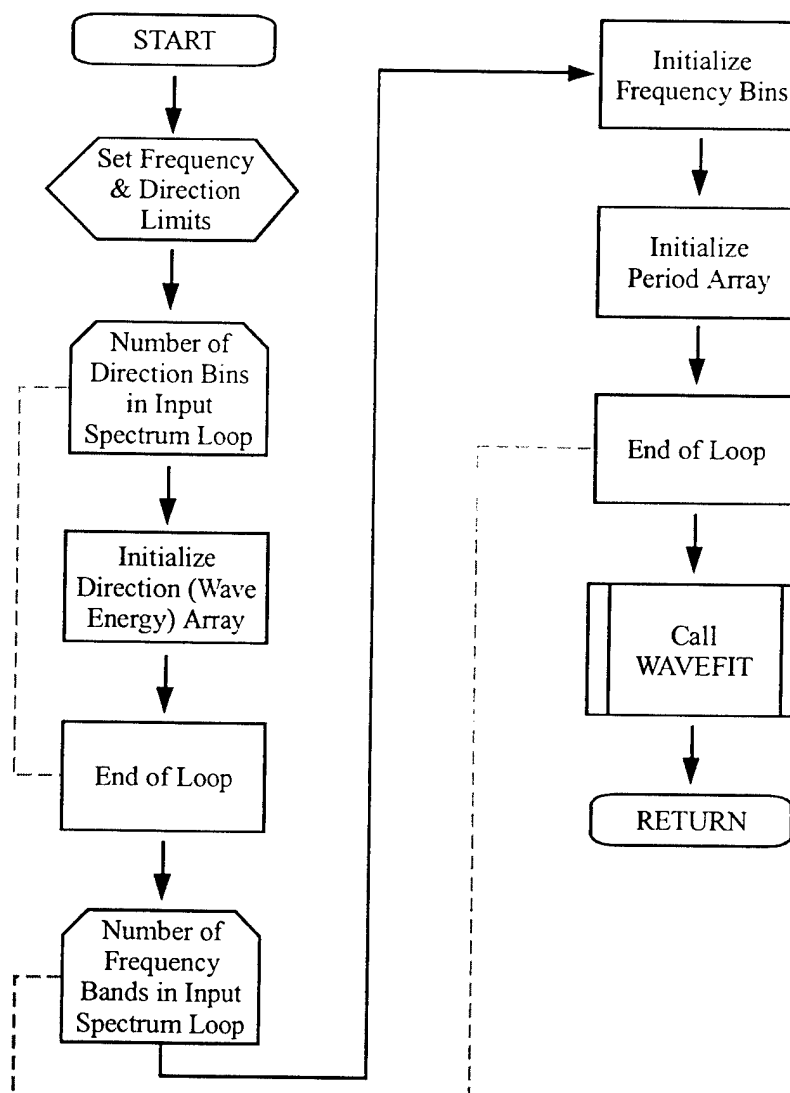

## 5.19 Subroutine GET\_BRK

### Subroutine Call:

GET\_BRK ( ii, dxy, xdelt\_gr, hrms, per, xoff, rk, b1, brk10, distmax, p)

### Summary:

Subroutine GET\_BRK calculates percentage of breakers and percent breaker type given at each point along the transect: p (1) = Spilling, p (2) = Plunging, p (3) = Surging, p (4) = 100\*Sum.

### Input Variables:

b1 (points)	Real	Bottom Slope
brk10	Logical	Flag for First Location where 10% of the Waves are Breaking (True or False)
distmax	Real	Farthest Offshore Distance
dxy (points)	Real	Adjusted Depths with Tide
hrms	Real	Root Mean Square Wave Height
ii	Integer	Index where Wave Probabilities Exceed Threshold
per	Real	Peak Period of Directional Wave Spectrum
rk (points,4)	Real	Matrix of Percentage Breakers and Types Across the Transect
xdelt_gr	Real	Self-Adjusting Cross-Shore Step
xoff	Real	Distance Offshore

### Output Variables:

b1 (points)	Real	Bottom Slope
brk10	Logical	Flag for First Location where 10% of the Waves are Breaking (True or False)
distmax	Real	Farthest Offshore Distance
p (4)	Real	Temporary Array for Breaker Percentage Totals
rk (points,4)	Real	Percent Breaker of Each Type

### Local Variables:

beta	Real	Temporary Variable for Bottom Slope
------	------	-------------------------------------


**Subroutines Called from GET\_BRK ():**

PERCENT

**GET\_BRK () Called from Subroutines:**

MAIN\_WAV

**Figure 20. Subroutine GET\_BRK Flowchart**

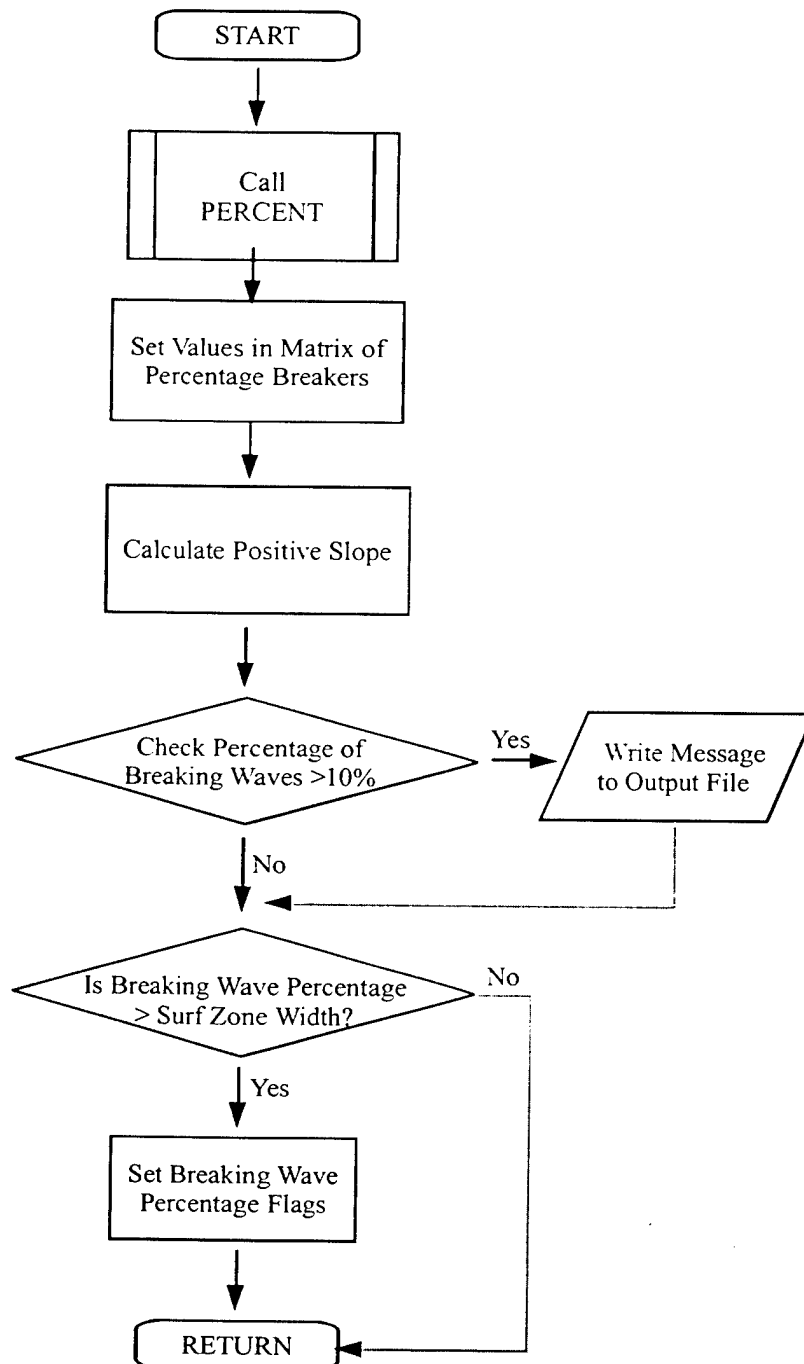

## 5.20 Subroutine GET\_DISS

### Subroutine Call:

GET\_DISS (roller, b, fqz, dp, hrms, p\_flag, diss)

### Summary:

Subroutine GET\_DISS returns the wave dissipation factor. This term is based on a Bore dissipation Model and can include roller dissipation if selected. The dissipation term is included in

$$\varepsilon_b = \frac{3 \varphi g f \sqrt{\pi}}{16h} H_{rms}^3 * M * B^3$$

the wave energy balance equation. The wave dissipation is given by:

Where  $\varphi$  is density,  $g$  is gravity,  $f$  is bottom friction,  $h$  is the water depth,  $M$  is a weighting function based on  $hrms$ , and  $B$  is an empirical factor.

### Input Variables:

b	Real	Empirical Factor in Thornton & Guza Wave Breaking Model = 1.00
dp	Real	Offshore Water Depth
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
p_flag	Logical	Weighting Factor Flag (True or False)
roller	Logical	Roller Option Flag (True or False)

### Output Variables:

diss	Real	Bore or Roller Dissipation Function
------	------	-------------------------------------



**Local Variables:**

hb3	Real	Weighting Function for Dissipation Term
z	Real	Dissipation Function


**Subroutines Called from GET\_DISS ():**

CALC\_HB3

**GET\_DISS () Called from Subroutines:**

GET\_RHS

**Figure 21. Subroutine GET\_DISS Flowchart**

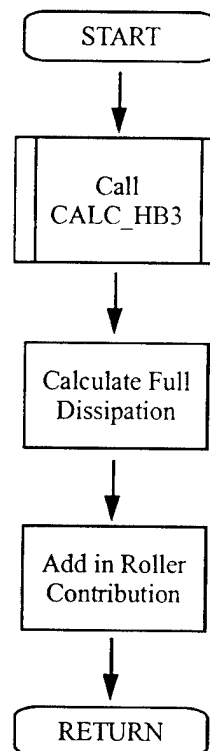

## 5.21 Subroutine GET\_FCN

### Subroutine Call:

GET\_FCN (t, h, l, dp, v, u, theta2, f1, f2)

### Summary:

Subroutine GET\_FCN performs a call to Function FCN1 to evaluate the nonlinear bottom stress at a specific time interval. This function integrates the bottom stress over time utilizing a trapezoidal integration method to provide the time-averaged bed stress at a certain location.

### Input Variables:

dp	Real	Offshore Water Depth
h	Real	Wave Height
l	Real	Wave Length
t	Real	Wave Period
theta2	Real	Wave Angle
u	Real	Cross-Shore Current Velocity
v	Real	Longshore Current Velocity

### Output Variables:

f1	Real	Wave Height Distribution Weighting Function
f2	Real	Wave Height Distribution Weighting Function

### Local Variables:

delt	Real	Time Step Interval
f_xo_1	Real	Integral Evaluated at the Lower Limit of Integration
f_xn_1	Real	Integral Evaluated at Upper Limit of Integration
fcn1	Real	Nonlinear Bottom Friction at a Specific Time
i	Integer	Loop Increment
numit	Integer	Set Equal to 100
sum_1	Real	Local Integration Variable
xi	Real	Integration Step Location
xn	Real	Upper Limit of Integration
xo	Real	Lower Limit of Integration


**Functions Called from GET\_FCN ():**

FCN1

**GET\_FCN () Called from Subroutines:**

CON\_ANG

**Figure 22. Subroutine GET\_FCN Flowchart**

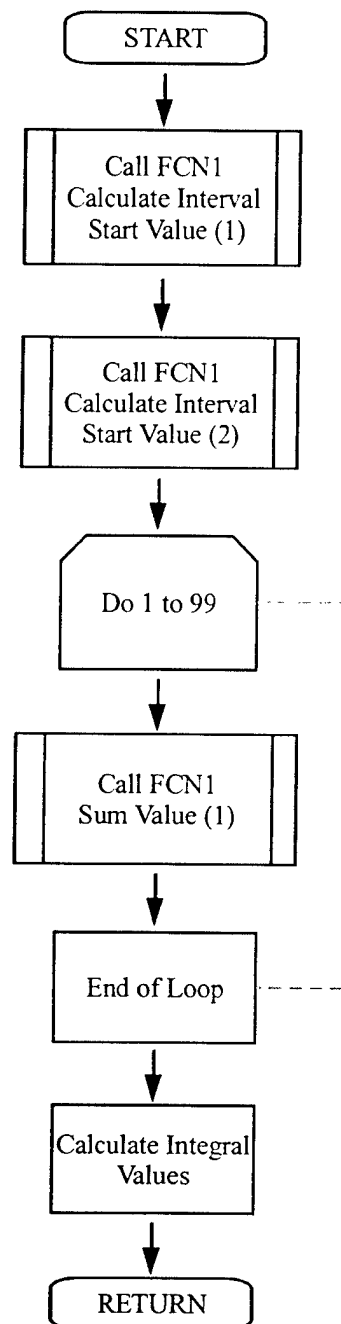

## 5.22 Subroutine GET\_M

### Subroutine Call:

GET\_M (dp, hrms, m)

### Summary:

Subroutine GET\_M calculates the weighting function multiplier.

### Input Variables:

dp	Real	Offshore Water Depth
hrms	Real	Root Mean Square Wave Height

### Output Variables:

m	Real	Multiplier
---	------	------------


Local Variables: None.

Subroutines Called from GET\_M (): None.

GET\_M () Called from Subroutines:

WEIGHTFN

Figure 23. Subroutine GET\_M Flowchart

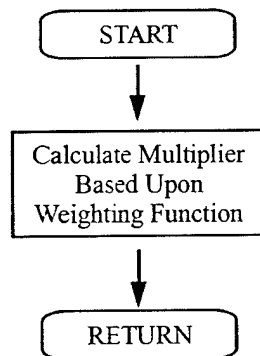

## 5.23 Subroutine GET\_P

### Subroutine Call:

GET\_P (frac, p)

### Summary:

Subroutine GET\_P calculates the percentage of each breaker type and fills the corresponding array elements.

### Input Variables:

frac (3)	Real	Temporary Array for Breaker Percentage Totals
----------	------	--

### Output Variables:

p (4)	Real	Percent of Different Breaker Types p (1) = Spilling p (2) = Plunging p (3) = Surging p (4) = Total
-------	------	--

### Local Variables:


sum	Real	Temporary Variable for Total of Percentage Breakers
-----	------	--

**Subroutines Called from GET\_P ():** None.

**GET\_P () Called from Subroutines:**

PERCENT

**Figure 24. Subroutine GET\_P Flowchart**

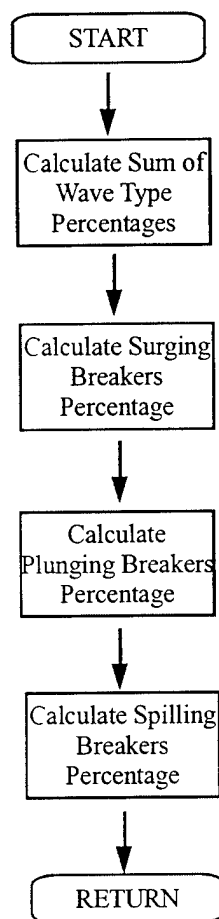

## 5.24 Subroutine GET\_RHS

### Subroutine Call:

GET\_RHS (roller, hrms, theta, Cg, dp, xk, b, fqz, xdelt\_gr, rhs, diss)

### Summary:

Subroutine GET\_RHS calculates the right hand side of the wave energy equation.

### Input Variables:

b	Real	Empirical Factor in Breaking Model = 1.0
Cg	Real	Wave Group Velocity
dp	Real	Offshore Water Depth
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
roller	Logical	Roller Option Flag (True or False)
theta	Real	Wave Angle, Representative of Radiation Stress Angle
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step
xk	Real	Wave Number

### Output Variables:

diss	Real	Bore or Roller Dissipation Function
rhs	Real	Right Hand Side of Energy Equation

### Local Variables:

e_roller	Real	Roller Contribution to the Energy Equation
e_wave	Real	Wave Contribution to the Energy Equation
p_flag	Logical	Weighting Factor Flag (True or False)


### Subroutines Called from GET\_RHS ():

CALCROLL  
GET\_DISS  
GET\_WAVE

### GET\_RHS () Called from Subroutines:

MAIN\_WAV

**Figure 25. Subroutine GET\_RHS Flowchart**

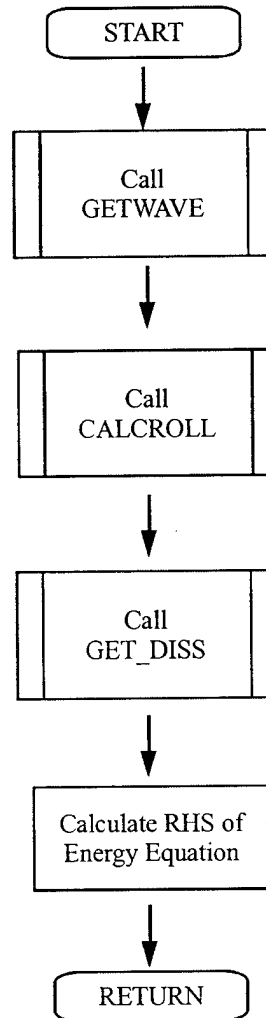



## 5.25 Subroutine GET\_UM

### Subroutine Call:

GET\_UM (h, t, l, dp, um)

### Summary:

Subroutine GET\_UM uses linear wave theory to calculate the wave-induced orbital velocity.

The wave induced orbital velocity is calculated where:

$$u_m = \frac{g H T}{2 L \cosh \left( \frac{2\pi}{L} \right) h}$$

g is gravity, H is wave height, T is wave period, L is wave length, and h is water depth.

### Input Variables:

dp	Real	Offshore Water Depth
h	Real	Wave Height
l	Real	Wave Length
t	Real	Wave Period

### Output Variables:

um	Real	Wave Induced Orbital Velocity
----	------	-------------------------------


**Local Variables:** None.

**Subroutines Called from GET\_UM ():** None.

**GET\_UM () Called from Functions:**

FCN1

**Figure 26. Subroutine GET\_UM Flowchart**

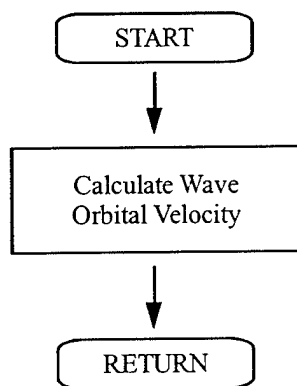

## 5.26 Subroutine GET\_WAVE

### Subroutine Call:

GET\_WAVE (hrms, theta, Cg, e\_wave)

### Summary:

Subroutine GET\_WAVE calculates wave energy flux using linear wave theory. The wave energy flux is:

$$E = \frac{\varphi g H^2}{8} C_g \cos \theta$$

where  $\varphi$  is water density,  $g$  is gravity,  $H$  is wave height,  $C_g$  is group velocity, and  $\theta$  is the wave angle.

### Input Variables:

Cg	Real	Wave Group Velocity
hrms	Real	Root Mean Square Wave Height
theta	Real	Wave Angle

### Output Variables:

e_wave	Real	Energy Flux
--------	------	-------------

### Local Variables:


ew	Real	Wave Energy
----	------	-------------

Subroutines Called from GET\_WAVE (): None.

GET\_WAVE () Called from Subroutines:

F3  
GET\_RHS

**Figure 27. Subroutine GET\_WAVE Flowchart**

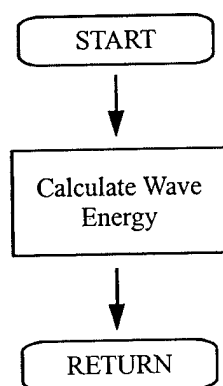

## 5.27 Subroutine GRIDOUT

### Subroutine Call:

GRIDOUT (ii, xoffl, xtemp, dxy, htemp, ptemp, xktemp, v, dp1, hout1, hmax, pbreak, wlen, vlng1)

### Summary:

Subroutine GRIDOUT linearly interpolates parameters for final output using the user defined cross-shore step width.

### Input Variables:

dxy (points)	Real	Corresponding Depths with Tide
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
ii	Integer	Index where Wave Probabilities Exceed Threshold
ptemp (points)	Real	Percentage of Breaking Waves and Breaker Types
xktemp	Real	Temporary Variable for Wave Number
xoffl	Real	Distance Offshore
xtemp (points)	Real	Temporary Variable for Cross-Shore Values
v (points)	Real	Longshore Current

### Output Variables:

dp1	Real	Offshore Depth
hmax	Real	Maximum Wave Height / 10.00
hout1	Real	Significant Wave Height
pbreak	Real	Percentage Breaking Waves
vlng1	Real	Longshore Current Velocity
wlen	Real	Wave Length

### Local Variables:

hrmsl	Real	Root Mean Square Wave Height
-------	------	------------------------------


**Subroutines Called from GRIDOUT ():**

GT\_P  
LIN\_1  
LIN\_2  
LIN\_3

**GRIDOUT () Called from Subroutines:**

PRT\_OUT1

**Figure 28. Subroutine GRIDOUT Flowchart**

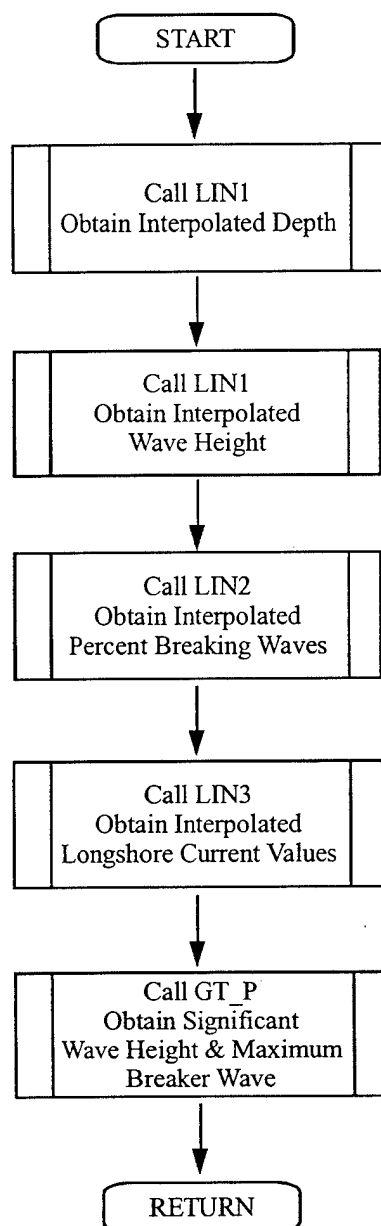

## 5.28 Subroutine GT\_P

### Subroutine Call:

GT\_P (ii, hrms1, dp1, xktemp, hout1, hmax, wlen)

### Summary:

Subroutine GT\_P initializes matrices for the creation of an internally generated directional wave spectrum. This wave spectrum has 50 frequencies and 36 directions.

### Input Variables:

dp1	Real	Offshore Depth
ii	Integer	Index where Wave Probabilities Exceed Threshold
hrms1	Real	Root Mean Square Wave Height
xktemp (points)	Real	Temporary Variable for Wave Number

### Output Variables:

hmax	Real	Maximum Wave Height / 10.00
hout1	Real	Significant Wave Height
wlen	Real	Wave Length

### Local Variables:


hdep	Real	Breaking Wave Height at Specific Depth
------	------	--

**Subroutines Called from GT\_P ():** None.

**GT\_P () Called from Subroutines:**

GRIDOUT  
PRT\_OUT1  
PRT\_OUT2

**Figure 29. Subroutine GT\_P Flowchart**

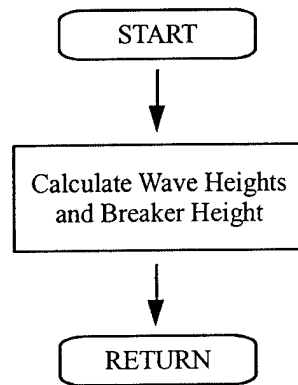



## 5.29 Subroutine GT\_SIG\_H

### Subroutine Call:

GT\_SIG\_H (ifreq, idirec, esowm, ehsig)

### Summary:

Subroutine GT\_SIG\_H sums the energy present in the directional wave spectrum and

$$4 \sqrt{\sum e(f, \theta)}$$

calculates the significant wave height. The significant wave height is defined as:

Where,  $e$  is the directional wave spectrum.

### Input Variables:

esowm (dirNum,freqNum)	Real	Directional Wave Spectrum
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequencies in Input Spectrum

### Output Variables:

ehsig	Real	Significant Wave Height from Directional Spectrum
-------	------	---

### Local Variables:


idir	Integer	Direction Loop Counter
ifrq	Integer	Frequency Loop Counter
sum1	Real	Summing Variable for Wave Height
sum2	Real	Summing Variable for Wave Height

**Subroutines Called from GT\_SIG\_H ():** None.

**GT\_SIG\_H () Called from Subroutines:**

CALCSURF  
READSPEC  
WAVEFIT

Figure 30. Subroutine GT\_SIG\_H Flowchart

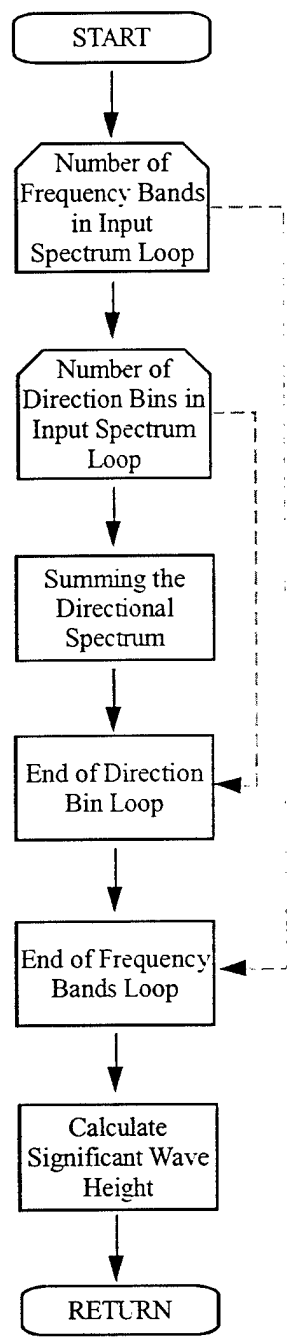

### 5.30 Subroutine INITLIZE

#### Subroutine Call:

INITLIZE (dp, fqd, Cg, xk, c)

#### Summary:

Subroutine INITLIZE calculates wave parameters at the farthest offshore point. Wave celerity

$$\sigma^2 = g k \tanh(k h)$$

(velocity) is calculated from the dispersion relation given by:

where,  $\sigma$  is the angular frequency of the wave ( $2\pi/T$ ),  $g$  is gravity,  $k$  is wave number, and  $h$  is the local

$$C_g = 0.5C \left( 1 + \frac{2kh}{\sinh kh} \right)$$

water depth. Wave group velocity is calculated from the linear wave theory relation given by:

where,  $C$  is the wave celerity.

#### Input Variables:

dp	Real	Offshore Water Depth
fqd	Real	Peak Frequency

#### Output Variables:

c	Real	Wave Celerity at Input Depth & Frequency
Cg	Real	Group Velocity at Input Depth & Frequency
xk	Real	Wave Number at Input Depth & Frequency

**Local Variables:**

xkd                      Real                      Deep Water Wave Number


**Subroutines Called from INITLIZE ():**

WAVENUM

**INITLIZE () Called from Subroutines:**

CALCSURF

**Figure 31. Subroutine INITLIZE Flowchart**

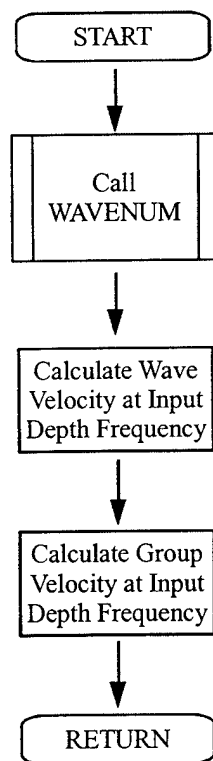

### 5.31 Subroutine KLONG

#### Subroutine Call:

KLONG (j\_ii, xdelt\_gr, eb\_last, along, blong, clong, c3, iimax, vwind, v)

#### Summary:

Subroutine KLONG calculates longshore current velocity using an implicit double sweep method (Tridiagonal Method) based on the work of Kraus and Larson (1991). The central difference

$$a_i V_{i-1} + b_i V_i - c_i V_{i+1} = r_i$$

equation is of the form:

where,  $V$  is the longshore current velocity. The coefficients  $a$ ,  $b$ , and  $c$  are calculated from wave parameters.

#### Input Variables:

along (points)	Real	Horizontal Mixing Parameter
blong (points)	Real	Bottom Friction
c3	Real	Radiation Stress Factor for Longshore Current Velocity
clong (points)	Real	Wind Stress Contribution to Longshore Current
eb_last	Real	Roller Dissipation Term Farthest Offshore
iimax	Integer	Number of Calculation Locations
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
vwind	Real	Wind Driven Longshore Current Velocity
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step

#### Output Variables:

v (points)	Real	Longshore Current Velocity
------------	------	----------------------------

**Local Variables:**


ah	Real	Temporary Variable Used in Longshore Current Calculation
bh	Real	Temporary Variables
ch	Real	Temporary Variables
dn	Real	Temporary Variables
ee (points)	Real	Array of Longshore Driving Terms
ff (points)	Real	Array of Longshore Bottom Friction
ieeff	Integer	Array Index
ii	Integer	Loop Variable
iuse	Integer	Array Index / Loop Variable
xdel2	Real	Self-Adjusting Cross-Shore Grid Step

**Subroutines Called from KLONG ():** None.

**KLONG () Called from Subroutines:**

CALCSURF

**Figure 32. Subroutine KLONG Flowchart**

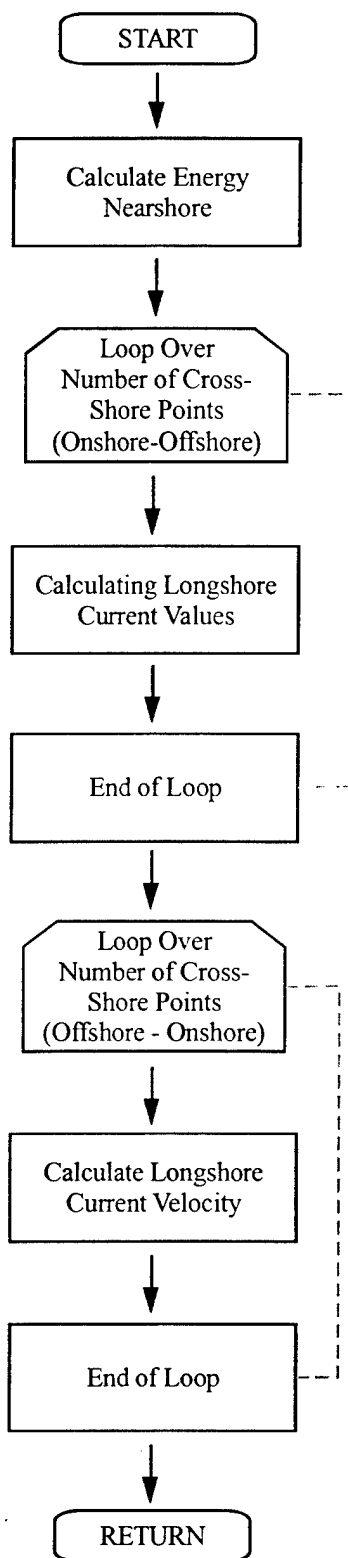

### 5.32 Subroutines LIN\_1

#### Subroutine Call:

LIN\_1 (ii, dx, dy, x, y)

#### Summary:

Linear interpolation routine used to scale root mean square wave height and water depth to user-defined grid step for output to the summary text file.

#### Input Variables:

dx (points)	Real	Input X Value
dy (points)	Real	Input Y Value
ii	Integer	Index where Wave Probabilities Exceed Threshold
x	Real	Offshore Point

#### Output Variables:

y	Real	Interpolated Variable
---	------	-----------------------

#### Local Variables:

b1	Real	Intercept
m	Real	Slope
x1	Real	Cross-Shore Value
x2	Real	Previous Cross-Shore Value
y1	Real	Height Value
y2	Real	Previous Height Value


Subroutines Called from LIN\_1 (:): None.

LIN\_1 ( ) Called from Subroutines:

GRIDOUT



**Figure 33. Subroutine LIN\_1 Flowchart**

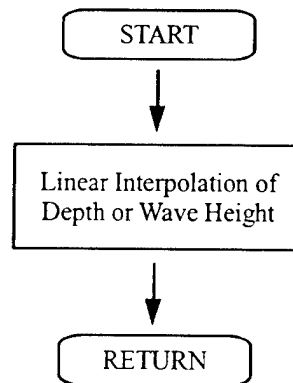

### 5.33 Subroutines LIN\_2

#### Subroutine Call:

LIN\_2 (ii, dx, dy, x, y)

#### Summary:

Linear interpolation routine used to scale percent breaking waves to user-defined grid step for output to the summary text file.

#### Input Variables:

dx (points)	Real	Input X Value
dy (points)	Real	Input Y Value
ii	Integer	Index where Wave Probabilities Exceed Threshold
x	Real	Offshore Point

#### Output Variables:

y	Real	Interpolated Variable
---	------	-----------------------

#### Local Variables:


b1	Real	Intercept
m	Real	Slope
x1	Real	Cross-Shore Value
x2	Real	Previous Cross-Shore Value
y1	Real	Height Value
y2	Real	Previous Height Value

Subroutines Called from LIN\_2 (): None.

LIN\_2 () Called from Subroutines:

GRIDOUT

**Figure 34. Subroutine LIN\_2 Flowchart**

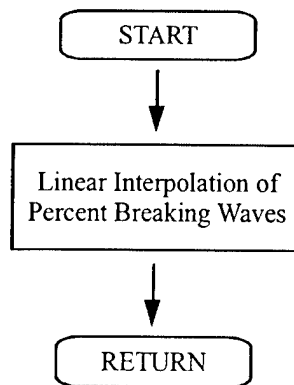

### 5.34 Subroutine LIN\_3

#### Subroutine Call:

LIN\_3 (ii, dx, dy, x, y)

#### Summary:

Linear interpolation routine used to scale longshore current velocity distribution to user-defined grid step for output to the summary text file.

#### Input Variables:

dx (points)	Real	Input X Value
dy (points)	Real	Input Y Value
ii	Integer	Index where Wave Probabilities Exceed Threshold
x	Real	Offshore Point

#### Output Variables:

y	Real	Interpolated Variable
---	------	-----------------------

#### Local Variables:


b1	Real	Intercept
m	Real	Slope
x1	Real	Cross-Shore Value
x2	Real	Previous Cross-Shore Value
y1	Real	Height Value
y2	Real	Previous Height Value

Subroutines Called from LIN\_3 (): None.

LIN\_3 () Called from Subroutines:

GRIDOUT

**Figure 35. Subroutine LIN\_3 Flowchart**

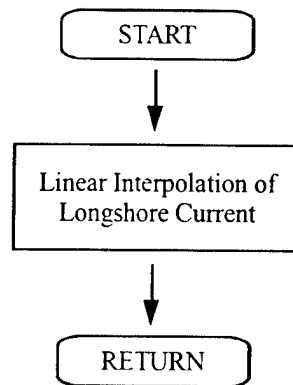

### 5.35 Subroutine LONG1

#### Subroutine Call:

LONG1 (ii, c1, c2, c3, c4, dp, ebn, hrms, xk, along, blong, clong)

#### Summary:

Subroutine LONG1 calculates and outputs longshore current equation coefficients.

#### Input Variables:

c1	Real	Eddy Viscosity Coefficient
c2	Real	Bottom Friction Coefficient
c3	Real	Radiation Stress Coefficient
c4	Real	Longshore Wind Stress Coefficient
dp	Real	Offshore Water Depth
ebn	Real	Roller or Bore Term
ii	Integer	Index where Wave Probabilities Exceed Threshold
hrms	Integer	Root Mean Square Wave Height
xk	Integer	Wave Number

#### Output Variables:

along (points)	Real	Horizontal Mixing Parameter
blong (points)	Real	Bottom Friction Parameter
clong (points)	Real	Wave and Wind Parameters


**Local Variables:** None.

**Subroutines Called from LONG1 ():** None.

**LONG1 () Called from Subroutines:**

MAIN\_WAV

**Figure 36. Subroutine LONG1 Flowchart**

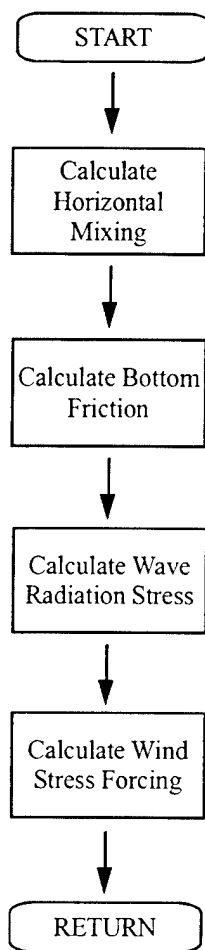

### 5.36 Subroutine MAIN\_WAV

#### Subroutine Call:

MAIN\_WAV (roller, dxy, xx1, xshift, b, c1, c2, c3, c4, hrms, xdelt\_gr, fqz, nnn, per, xk, fqd, Cg, self\_st, theta, theta2, xtemp, xktemp, eb\_last, htemp, ptemp, ebtemp, iimax, along, blong, clong, convg, distmax, rk, b1, surf, j\_ii, dstart)

#### Summary:

Subroutine MAIN\_WAV is the main driver for coordinating the iterative solution method applied to solve for the wave and current parameters. This approach is necessary because several of the parameters including wave height, wave length, wave celerity, longshore current velocity, and wave induced setup are interdependent, as well as depth dependent.

#### Input Variables:

b	Real	Empirical Factor in Breaking Model = 1.0
c1	Real	Mixing/Eddy Viscosity Coefficient
c2	Real	Bottom Friction Coefficient
c3	Real	Factor for Radiation Stress
c4	Real	Friction Coefficient = 0.007
Cg	Real	Wave Group Velocity
dstart	Real	Starting Depth from Input File
dxy (points)	Real	Corresponding Depths with Tide
fqd	Real	Peak Frequency at the Center of the Frequency Band
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
nnn	Integer	Number of Points in Input Depth Array
per	Real	Peak Period of Directional Wave Spectrum
roller	Logical	Roller Option Flag (True or False)
self_st	Char*1	Self Start Flag (Yes or No)
theta	Real	Wave Angle
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step
xk	Real	Wave Number
xshift	Real	Horizontal Cross-Shore Location
xx1 (points)	Real	Adjusted Cross-Shore Distances from Depth Profile



**Output Variables:**

along (points)	Real	Horizontal Mixing Parameter
b1 (points)	Real	Bottom Slope
blong (points)	Real	Bottom Friction for Deep & Shallow Water
clong (points)	Real	Wind Stress Contribution to Longshore Current
convg	Logical	Energy Equation Convergence Flag (True or False)
distmax	Real	Farthest Offshore Distance
eb_last	Real	Roller Dissipation Term at Farthest Point Offshore
ebtemp (points)	Real	Temporary Roller Dissipation Term Across Transect
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
iimax	Integer	Number of Calculation Locations
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
ptemp (points)	Real	Percentage of Breaking Waves & Breaking Types
rk (points,4)	Real	Matrix of Percentage Breakers and Types Across the Transect
surf	Logical	Flag for Low/No Surf Conditions (True or False)
theta	Real	Wave Angle
theta2	Real	Wave Angle at Input Starting Depth
xktemp (points)	Real	Temporary Variable for Wave Number
xtemp (points)	Real	Temporary Variable for Cross-Shore Values

**Local Variables:**

brk10	Logical	Flag Variable to Find First Location Where 10% of Waves Are Breaking (True or False)
cg2	Real	Additional Wave Group Velocity
check	Real	Difference Between Wave Induced Setup Calculations
conv_count	Integer	Number of Convergence Iterations
done	Logical	Loop Control Variable for Main Wave Calculation Loop (True or False)
dp	Real	Offshore Water Depth
eb	Real	Temporary Roller Dissipation Term Across Transect

etanew (points)	Real	Wave Induced Setup Estimated at New Location
etaold (points)	Real	Wave Induced Setup Estimated at Previous Location
hrms2	Real	Wave Height for Next Onshore Grid Location
ii	Integer	Index where Wave Probabilities Exceed Threshold
ll	Real	Wave Length at Next Onshore Grid Location
l0	Real	Wave Length at Grid Cell (1) Offshore
p (4)	Real	Array for Breaker Percentage Totals
pct (4)	Real	Percent of Different Breaker Types: pct (1) = Spilling pct (2) = Plunging pct (3) = Surging pct (4) = Total
rhs	Real	Right Hand Side of Energy Balance Equation
theta0	Real	Wave Angle at Grid (1) Offshore
xoff	Real	Distance Offshore


#### **Subroutines Called from MAIN\_WAV ():**

ABORT  
 BALANCEQ  
 GET\_BRK  
 GET\_RHS  
 LONG1  
 PT\_2  
 SLF\_STRT  
 SETUP

#### **MAIN\_WAV () Called from Subroutines:**

CALCSURF

Figure 37. Subroutine MAIN\_WAV Flowchart

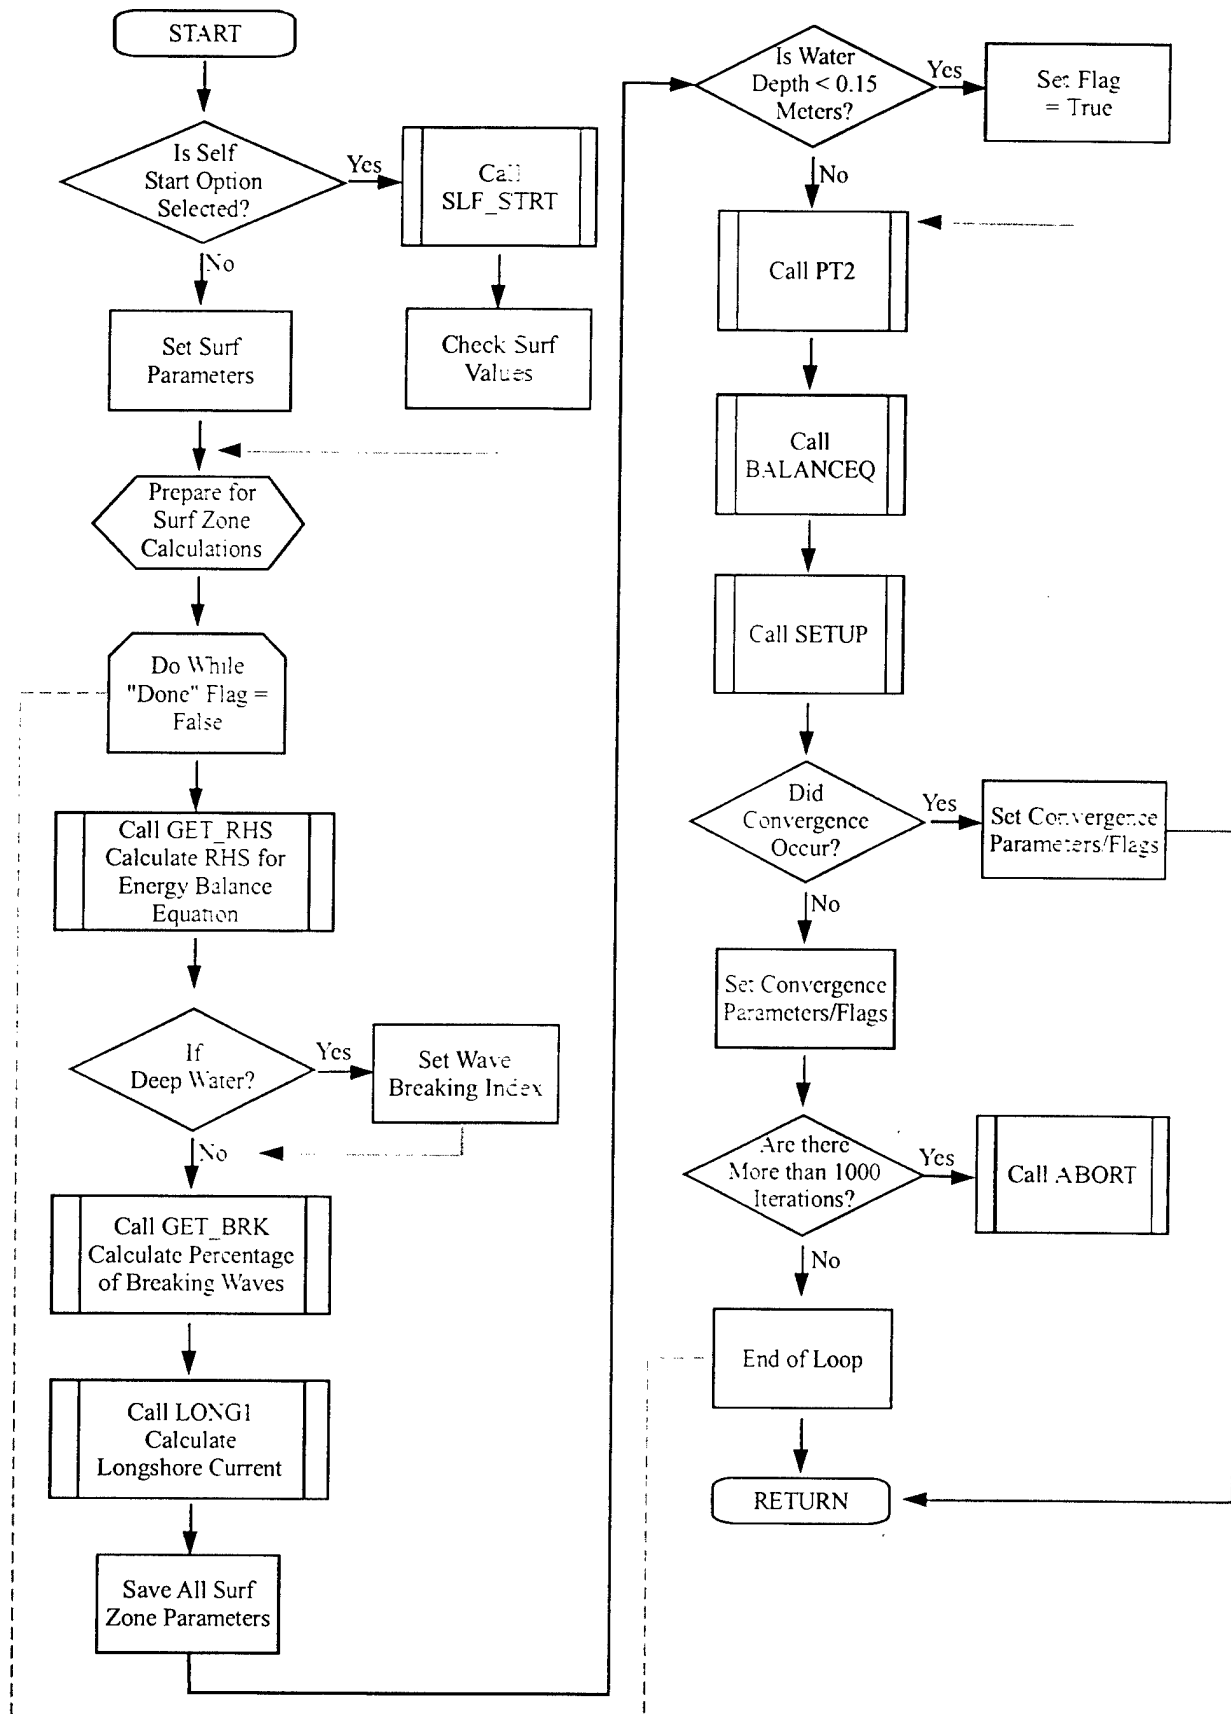

### 5.37 Subroutine MDSRF1

#### Subroutine Call:

MDSRF1 (alfa, chrlic, pct, echo, foxtrt, jgamma, ihtl1, ihtl2, file\_out)

#### Summary:

Subroutine MDSRF1 calculates and prints the modified surf index number to the output file.

#### Input Variables:

alfa	Real	Significant Breaker Height
chrlic	Real	Dominant Breaker Period
echo	Real	Breaker Angle
foxtrt	Real	Longshore Current Speed and Direction
ihtl1	Real	Wind Speed
ihtl2	Real	Wind Direction
jgamma	Integer	Temporary Variable set to Beach Orientation
pct (4)	Real	Percent of Different Breaker Types: pct (1) = Spilling pct (2) = Plunging pct (3) = Surging pct (4) = Total
file_out	Char*40	Output File Name

**Output Variables:** None.

#### Local Variables:

idir	Integer	Index for Surf Index Wind Direction
index	Integer	Breaker Type Indicator for Surf Index
ispd	Integer	Index for Surf Index Wind Speed Lookup in Modification Table
m	Integer	Temporary Variable to Rotate Direction
percent	Real	Breaker Type Percentage
srfmod	Real	Modified Surf Index from Sum of Values Resulting from Navy Modification Tables in MDSRF2 ( )
sum	Real	Running Total of Surf Index
sum1	Real	Modified Surf Index Value for Wave Angle
sum2	Real	Value for Longshore Current
temp	Real	Temporary Wave Angle Variable
theta2	Real	Rotated Wind Direction
value	Real	Modification Number

wind (3,3,8)

Real

Surf Index Wind Modification Table


**Subroutines Called from MDSRF1 ():**

MDSRF2

**MDSRF1 () Called from Subroutines:**

SURF

**Figure 38. Subroutine MDSRF1 Flowchart**

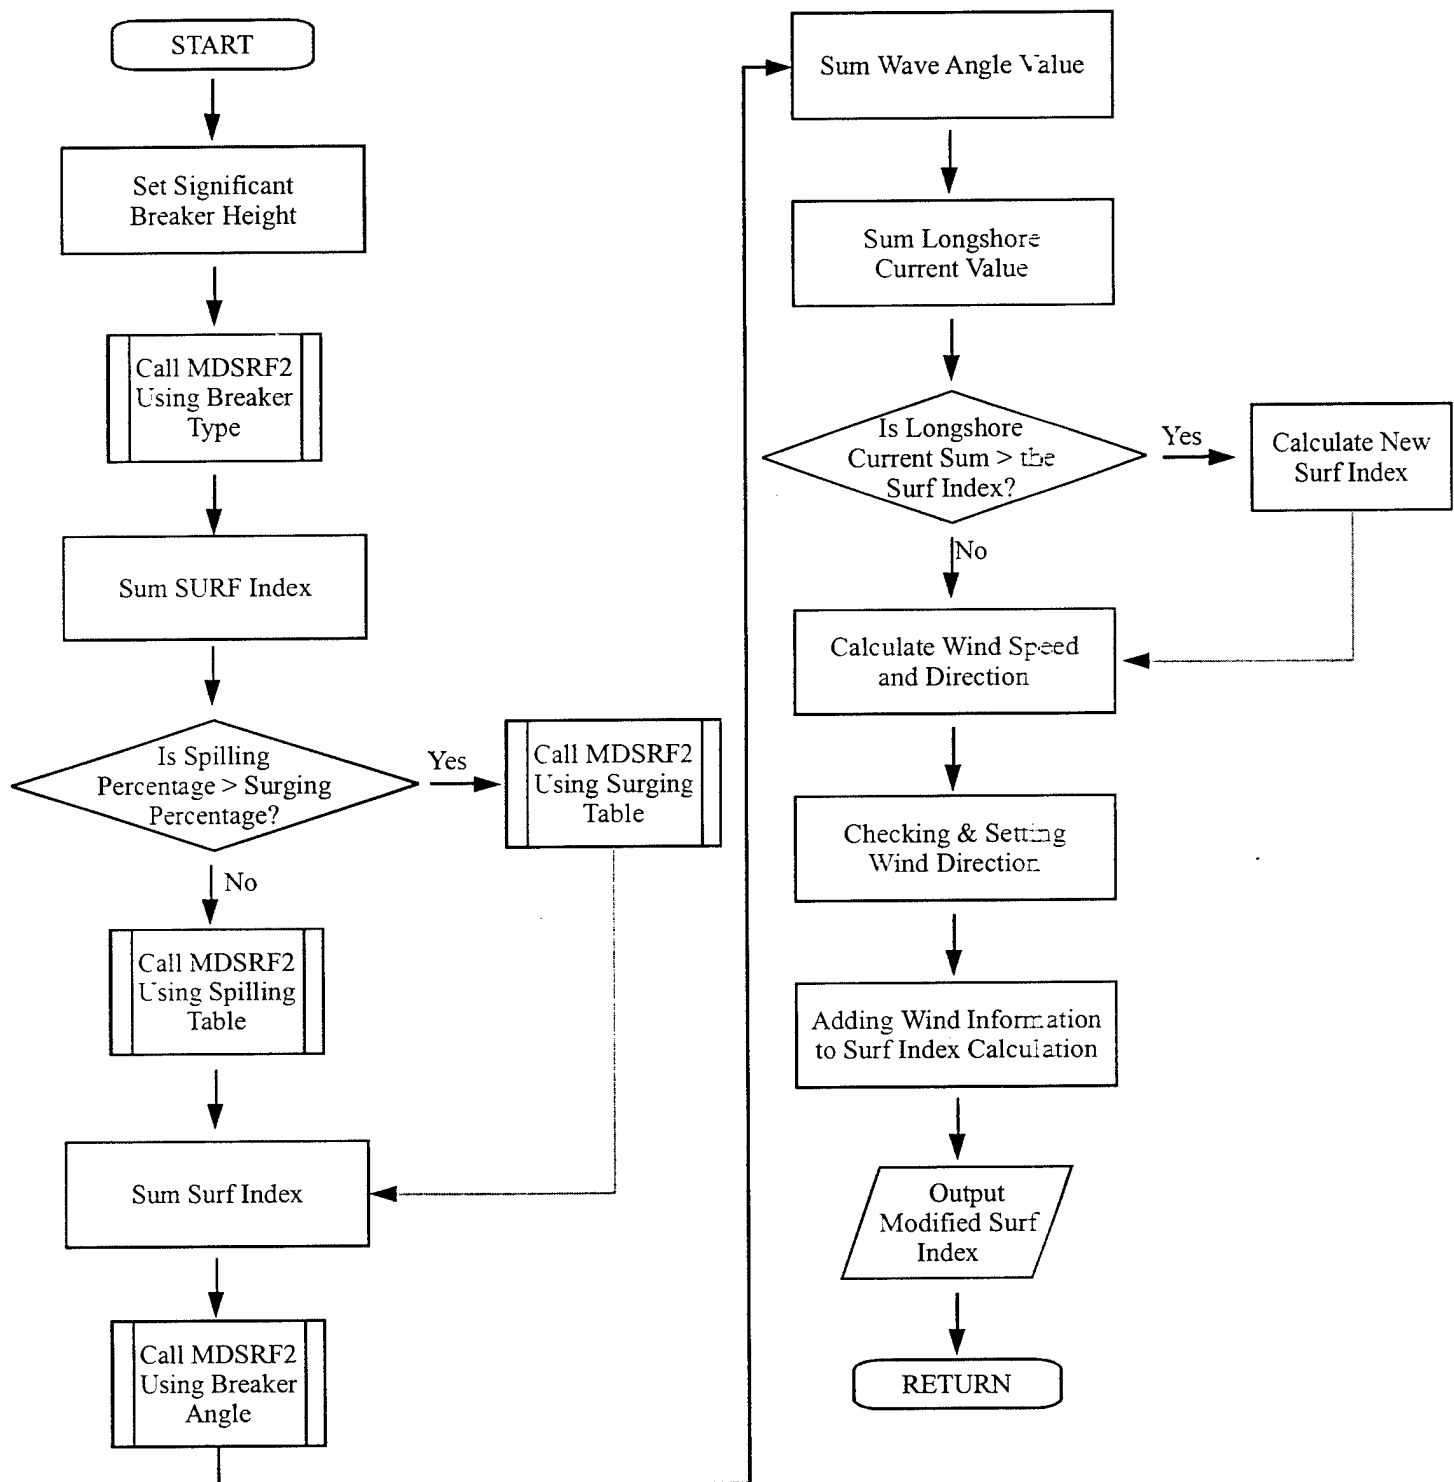

### 5.38 Subroutine MDSRF2

#### Subroutine Call:

MDSRF2 (index, xin, yin, value)

#### Summary:

Subroutine MDSRF2 contains the modified surf index (MSI) tables. The MSI number is calculated using a two dimensional linear interpolation by areas.

#### Input Variables:

index	Integer	Indicator of Breaker Type
xin	Real	X-Coordination for Surf Index Modification Matrix
yin	Real	Y-Coordination for Surf Index Modification Matrix

#### Output Variables:

value	Real	Returns Modified Surf Index Number
-------	------	------------------------------------

#### Local Variables:

i	Integer	Loop Counter or Array Index
i1	Integer	Loop Counter or Array Index
i2	Integer	Loop Counter or Array Index
ii	Integer	Loop Counter or Array Index
ix (4)	Real	All Values Set to 11.00
jy (4)	Real	Values Set to 10.0, 11.0, 11.0, 9.0
j	Integer	Loop Counter or Array Index
j1	Integer	Loop Counter or Array Index
j2	Integer	Loop Counter or Array Index
jj	Integer	Loop Counter or Array Index
temp1	Real	Temporary Variable Used for Interpolation
x (11)	Real	MSI Indices
x0 (4,11)	Real	Breaker Period Modification table
xdata	Real	Temporary Index
y (11)	Real	MSI Indices
y0 (4,11)	Real	Wave Angle Modification table
ydata	Real	Temporary Index
z (11,11)	Real	Breaker Modification Matrix
z0 (4,11,11)	Real	Whole Breaker Modification Matrix
z1 (40)-z11(40)	Real	Partial Breaker Modification Arrays


z12 (44)	Real	Partial Breaker Modification Array
zz0 (484)	Real	Equivalent to z0 (1,1,1) zz0 (1)

Subroutines Called from MDSRF2 ( ): None.

MDSRF2 ( ) Called from Subroutines:

MDSRF1

Figure 39. Subroutine MDSRF2 Flowchart

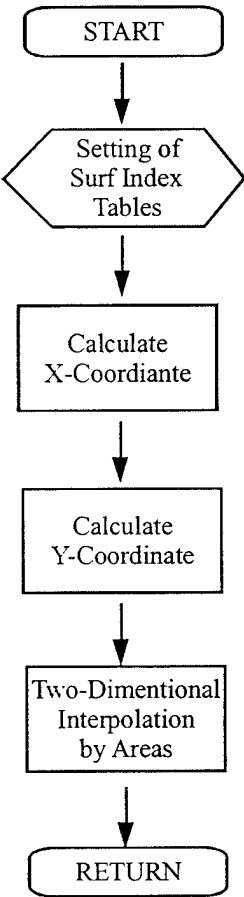



### 5.39 Subroutine NEW\_BRK

#### Subroutine Call:

NEW\_BRK (iimax, b1, rk, htemp, wid\_ii, p2)

#### Summary:

Subroutine NEW\_BRK calculates a new percentage of breaker types from the highest 10% of the wave heights (hrms) when the bottom slope is positive.

#### Input Variables:

b1 (points)	Real	Bottom Slope
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
iimax	Integer	Number of Calculation Locations
rk (points,4)	Real	Matrix of Percentage Breakers and Types Across the Transect
wid_ii	Integer	Offshore Location for Surf Zone Width

#### Output Variables:

p2 (4)	Real	Percent of Different Breaker Types - Equivalent to pct (4)
		p2 (1) = Spilling
		p2 (2) = Plunging
		p2 (3) = Surging
		p2 (4) = Total

#### Local Variables:

ak1 (points)	Real	Temporary Array for Wave Height
bk1 (points)	Real	Temporary Array Breaker Type = 1 Spilling
bk2 (points)	Real	Temporary Array Breaker Type = 2 Plunging
bk3 (points)	Real	Temporary Array Breaker Type = 3 Surging
bk4 (points)	Real	Temporary Array Breaker Type = 4 Total
		Total Percentage of Breakers
i	Integer	Loop Counter
ii	Integer	Loop Counter
nval	Integer	Number of Positive Slope Occurrences
x1	Real	0.1 % of Highest Breakers to Examine for Type

x2

Integer

Loop Limit - Set to Top Percentage of Significant  
Wave Height Values

**Subroutines Called from NEW\_BRK ():**


ABORT

RN2

**NEW\_BRK () Called from Subroutines:**

SHORTOUT

Figure 40. Subroutine NEW\_BRK Flowchart

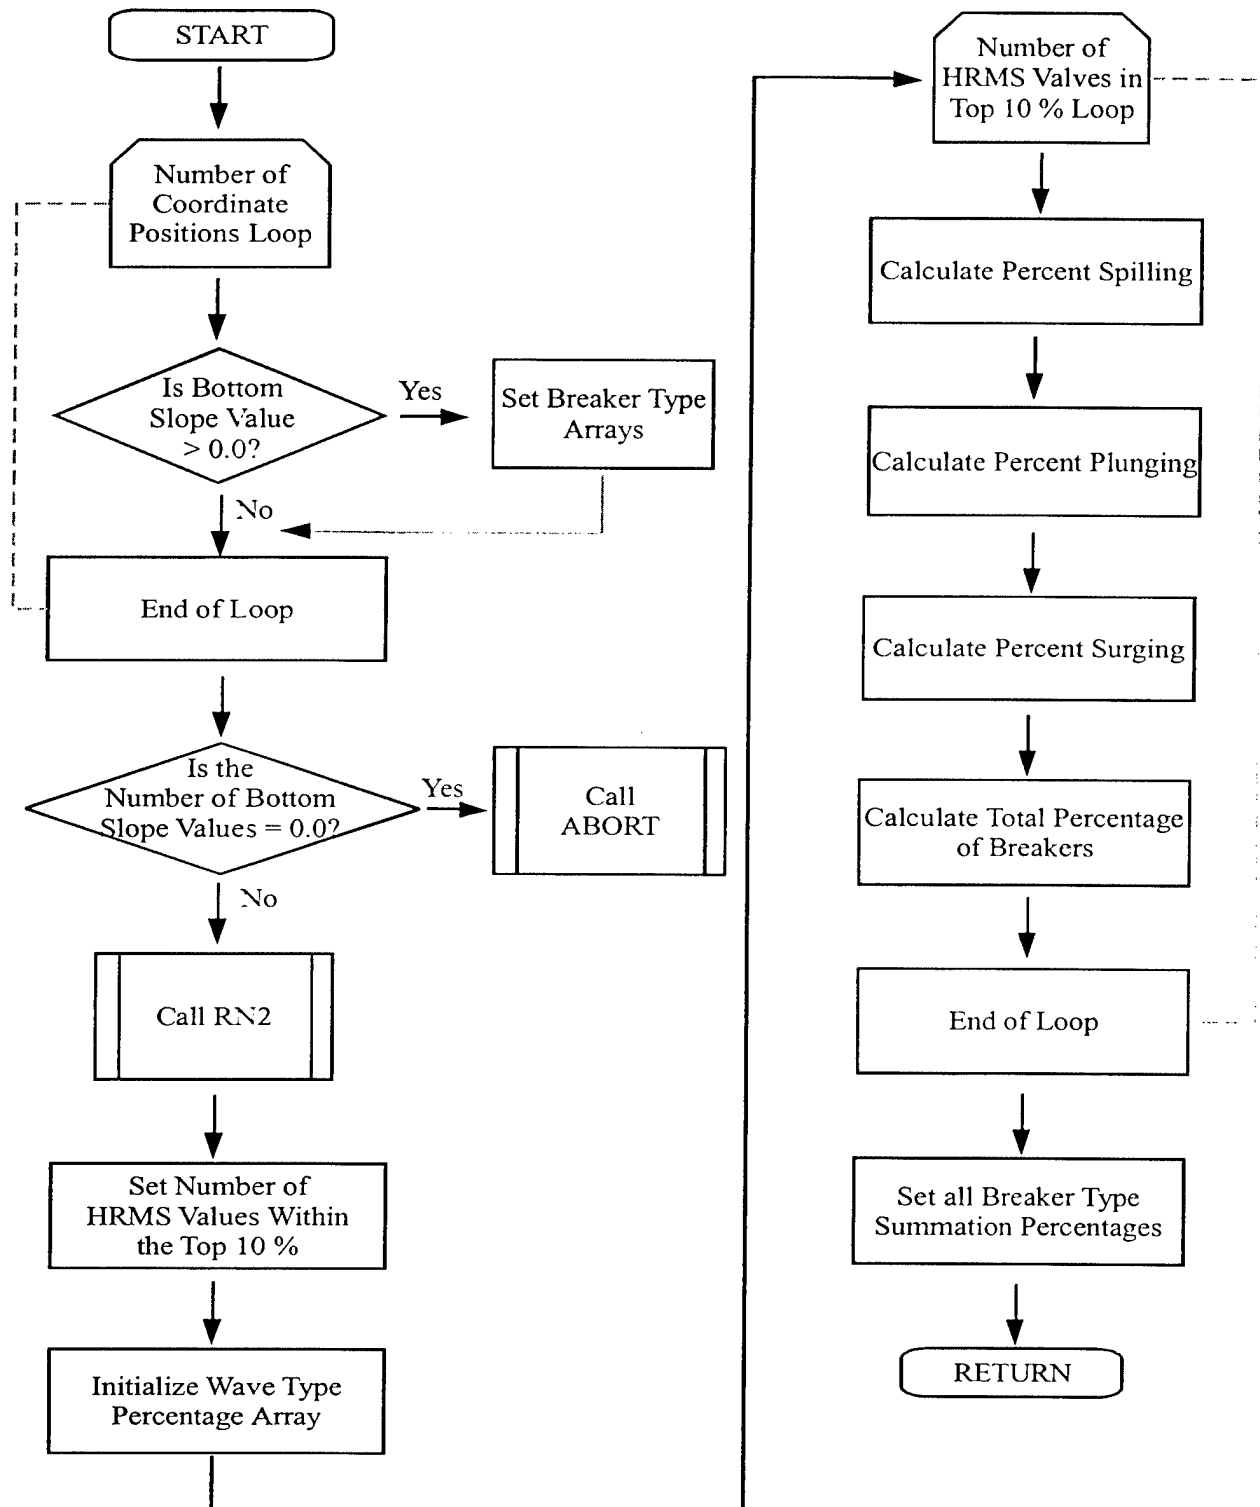

## 5.40 Subroutine NONLIN

### Subroutine Call:

NONLIN (j\_ii, xktemp, htemp, dxy, ebtemp, theta2, cf, iimax, v)

### Summary:

Subroutine NONLIN calculates the cross-shore distribution of the longshore current using a nonlinear bed stress as the restoring force in the momentum equation.

### Input Variables:

cf	Real	Coefficient of Friction for the Bottom Stress
dxy (points)	Real	Corresponding Depths with Tide
ebtemp (points)	Real	Roller Dissipation Term Across Transect
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
iimax	Integer	Number of Calculation Locations
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
theta2	Real	Wave Angle at Input Starting Depth
xktemp (points)	Real	Array for Wave Number

### Output Variables:

v (points)	Real	Longshore Current Velocity Distribution
------------	------	---

### Local Variables:

c	Real	Temporary Variable Used for Longshore Current Calculation
c3	Real	Refraction Coefficient Based upon Farthest Offshore Wave Angle
dp	Real	Offshore Water Depth
ebn	Real	Temporary Roller Dissipation Term
grd_pt	Integer	Loop Counter
hrms	Real	Root Mean Square Wave Height
q	Real	Longshore Current Momentum Flux
vtmp	Real	Temporary Longshore Current Velocity
xk	Real	Wave Number


**Subroutines Called from NONLIN ():**

NONLIN2

**NONLIN () Called from Subroutines:**

CALCSURF

**Figure 41. Subroutine NONLIN Flowchart**

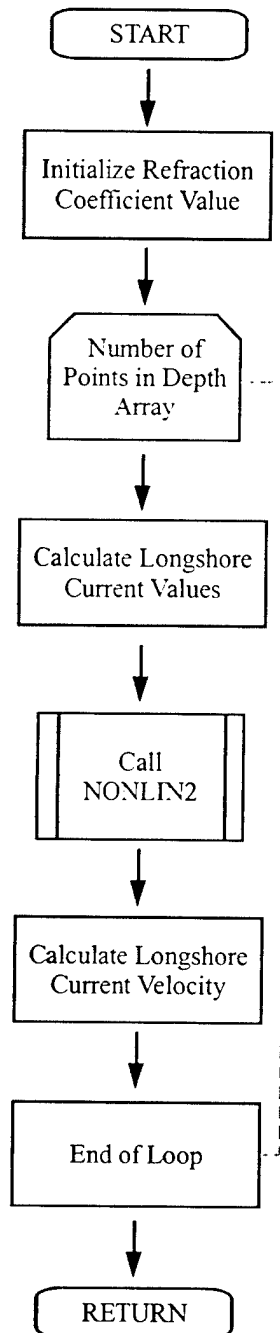

## 5.41 Subroutine NONLIN2

### Subroutine Call:

NONLIN2 (xk, hrms, dp, theta2, q, v)

### Summary:

Subroutine NONLIN2 initializes variables in the longshore momentum equation and checks for convergence of the iterative solution method.

### Input Variables:

dp	Real	Offshore Water Depth
hrms	Real	Root Mean Square Wave Height
q	Real	Longshore Current Momentum Flux
theta2	Real	Wave Angle at Input Starting Depth
xk	Real	Wave Number

### Output Variables:

v	Real	Longshore Current Velocity
---	------	----------------------------

### Local Variables:

convg	Logical	Convergence Flag (True or False)
freq	Real	Wave Frequency
h	Real	Wave Height
kount	Integer	Counter
l	Real	Wave Length
t	Real	Wave Period
u	Real	Mean Cross-Shore Current Velocity


### Subroutines Called from NONLIN2 ():

ABORT  
CON\_ANG

### NONLIN2 () Called from Subroutines:

NONLIN

**Figure 42. Subroutine NONLIN2 Flowchart**

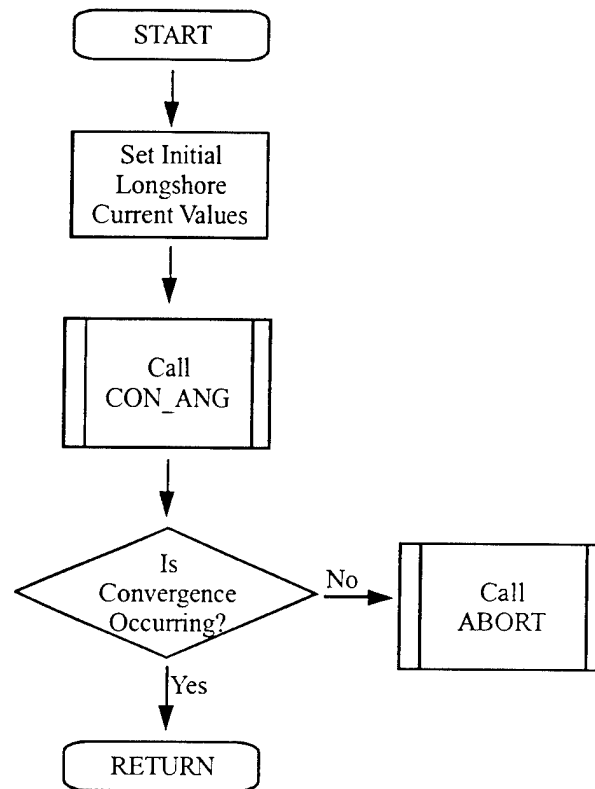

## 5.42 Subroutine PERCENT

### Subroutine Call:

PERCENT (hrms, period, dp, slope, p)

### Summary:

Subroutine PERCENT calculates the percentage of each type of breaking wave in the surf zone.

### Input Variables:

dp	Real	Offshore Water Depth
hrms	Real	Root Mean Square Wave Height
period	Real	Peak Period
slope	Real	Bottom Slope

### Output Variables:

p (4)	Real	Array of Percentage of Breaker Types
		pct (1) - Spilling
		pct (2) - Plunging
		pct (3) - Surging
		pct (4) - Total Percentage

### Local Variables:

frac (3)	Real	Array for Percentage Breaker Totals
gtemp	Real	Gravity
hhigh	Real	Upper Bound of Integration
hlow	Real	Lower Bound of Integration
integrat	Real	Wave Height Distribution Calculated at a Specific Location
p_flag	Logical	Weighting Factor Flag (True or False)
param	Real	Integral Multiplier

### Subroutines Called from PERCENT ():

GET\_P



**Functions Called from PERCENT ():**


INTEGRAT

**PERCENT () Called from Subroutines:**

GET\_BRK

SLF\_STRT

**Figure 43. Subroutine PERCENT Flowchart**

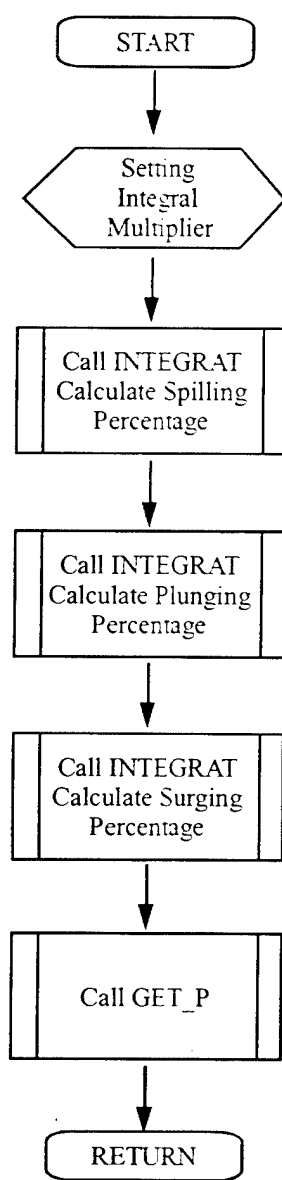

### 5.43 Subroutine PRT\_OUT1

#### Subroutine Call:

PRT\_OUT1 (j\_ii, xdelt, iimax, dxy, xtemp, xktemp, htemp, ptemp, v)

#### Summary:

Subroutine PRT\_OUT1 prints columnar data, cross-shore distributions of wave and surf parameters, to the detailed SURF 3.1 output file when requested by the user. This data is interpolated to the user defined grid step, if possible.

#### Input Variables:

dxy (points)	Real	Corresponding Depths with Tide
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
iimax	Integer	Number of Calculation Locations
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
ptemp (points)	Real	Percentage of Breaking Waves & Breaker Types
v (points)	Real	Longshore Current Velocity
xdelt	Real	Surf Zone Output Interval
xktemp (points)	Real	Temporary Wave Number Array
xtemp (points)	Real	Temporary Variable for Cross-Shore Values

**Output Variables:** None.

#### Local Variables:

dpl	Real	Offshore Depth
hmax	Real	Maximum Wave Height
houtl	Real	Significant Wave Height
hrmsl	Real	Root Mean Square Wave Height
ii	Integer	Array Index Number
jj	Integer	Iteration Count
pbreak	Real	Percentage Breaking Waves
vlngl	Real	Longshore Current Velocity
wlen	Real	Wave Length
xoffl	Real	Distance Offshore


**Subroutines Called from PRT\_OUT1 ():**

ABORT  
GT\_P  
GRIDOUT

**PRT\_OUT1 () Called from Subroutines:**

CALCSURF

**Figure 44. Subroutine PRT\_OUT1 Flowchart**

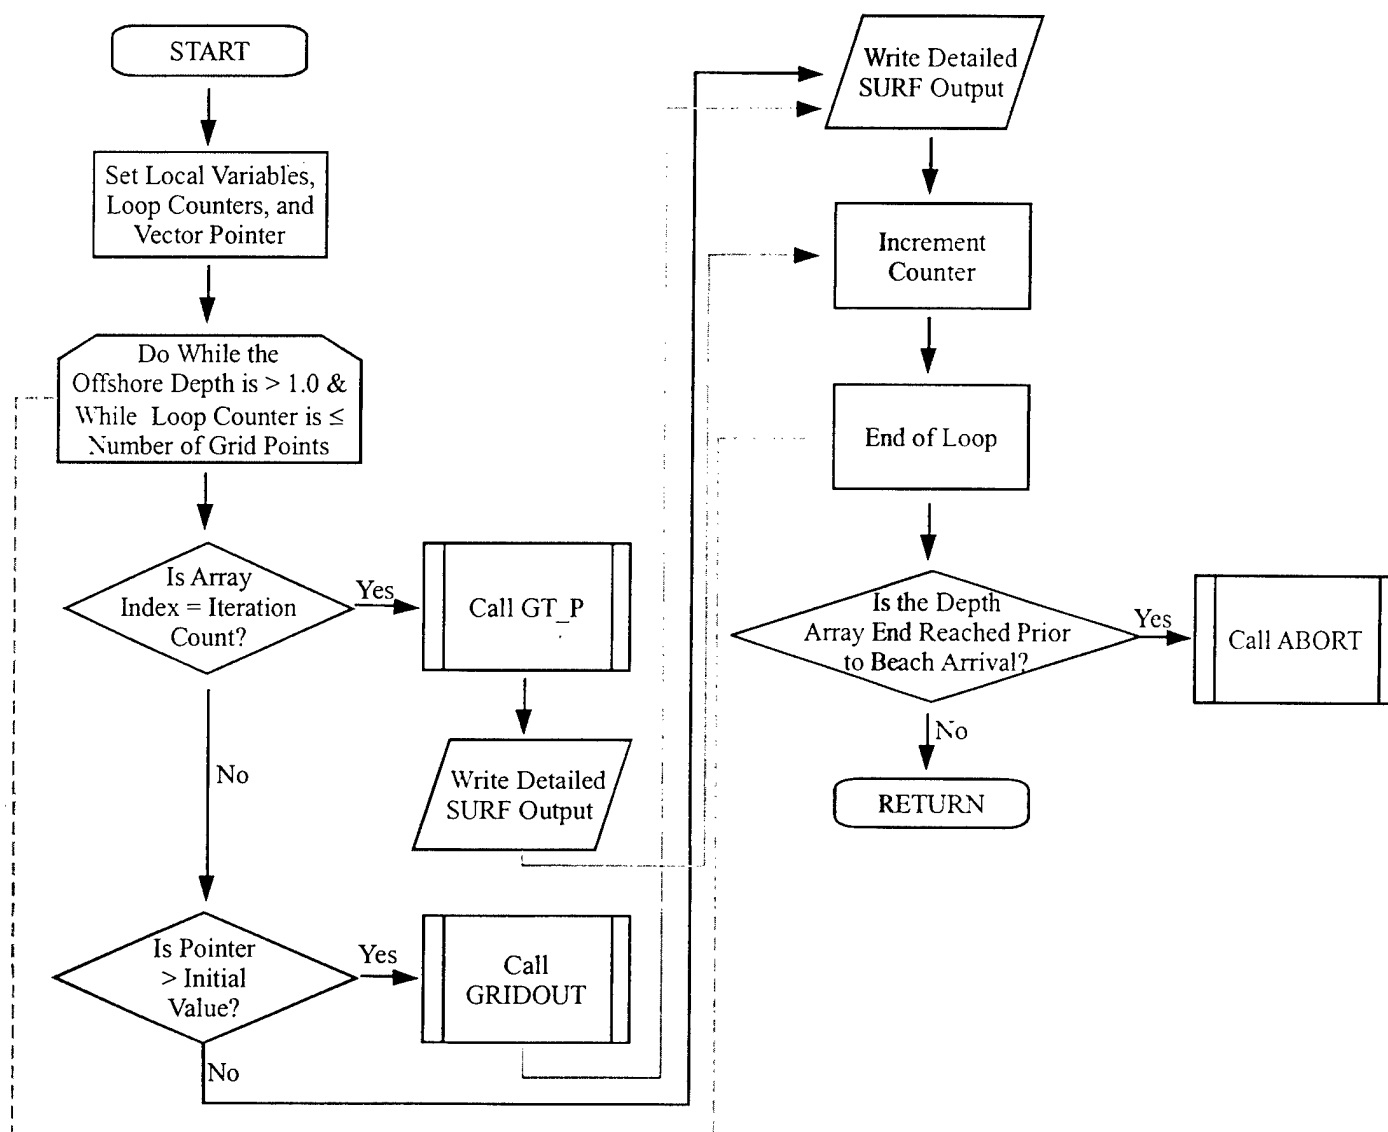

## 5.44 Subroutine PRT\_OUT2

### Subroutine Call:

PRT\_OUT2 (j\_ii, xdelt, iimax, dxy, xtemp, xktemp, htemp, ptemp, v)

### Summary:

Subroutine PRT\_OUT2 writes the detailed surf output.

### Input Variables:

dxy (points)	Real	Corresponding Depths with Tide
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
iimax	Integer	Number of Calculation Locations
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
ptemp (points)	Real	Percentage of Breaking Waves and Breaker Types
v (points)	Real	Longshore Current Velocity
xdelt	Real	Surf Zone Output Interval
xktemp (points)	Real	Temporary Wave Number Array
xtemp (points)	Real	Temporary Variable for Cross-Shore Values

**Output Variables:** None.

### Local Variables:

dp1	Real	Offshore Depth
hmax	Real	Maximum Wave Height
hout1	Real	Significant Wave Height
hrms1	Real	Root Mean Square Wave Height
ii	Integer	Array Index Number
jj	Integer	Iteration Counter
pbreak	Real	Percentage Breaking Waves
vlng	Real	Longshore Current Velocity
wlen	Real	Wave Length
xoff1	Real	Distance Offshore


### Subroutines Called from PRT\_OUT2 ():

GT\_P  
ABORT

**PRT\_OUT2 ( ) Called from Subroutines:**

CALCSURF

**Figure 45. Subroutine PRT\_OUT2 Flowchart**

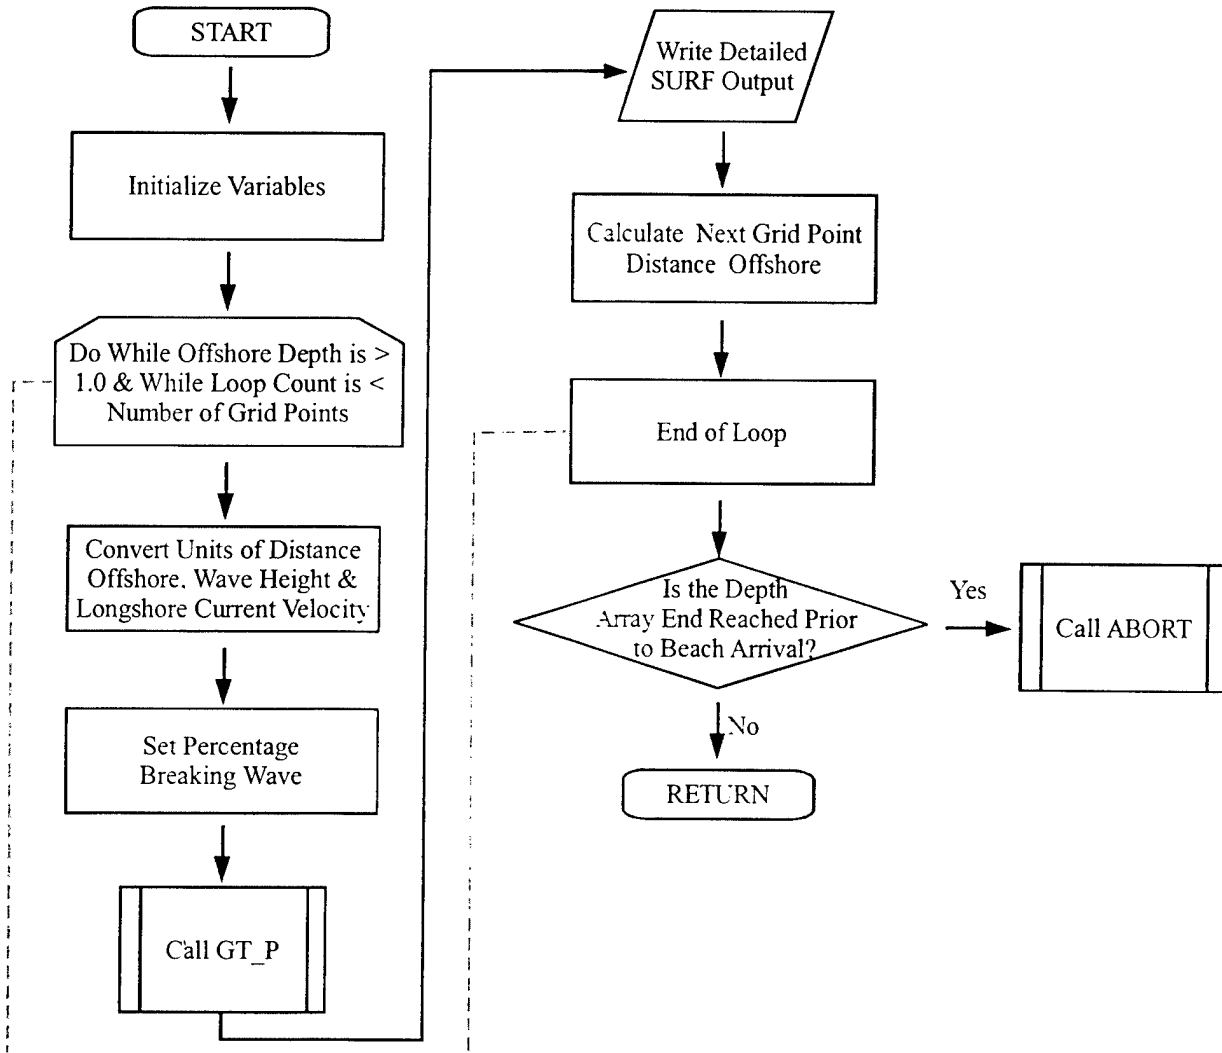

## 5.45 Subroutine PRT\_OUT3

### Subroutine Call:

PRT\_OUT3 (file\_dat)

### Summary:

Subroutine PRT\_OUT3 writes out the detailed output from the model.

### Input Variables:

file_dat	Char*40	Output File name *.dat
----------	---------	------------------------

**Output Variables:** None.

### Local Variables:


line	Char*80	Temporary String
------	---------	------------------

**Subroutines Called from PRT\_OUT3 ():** None.

**PRT\_OUT3 ( ) Called from Subroutines:**

SURF

**Figure 46. Subroutine PRT\_OUT3 Flowchart**

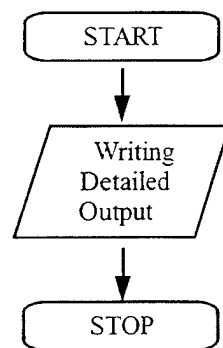

## 5.46 Subroutine PT2

### Subroutine Call:

PT2 (l0, theta0, fqd, dp, theta, xk, l, Cg)

### Summary:

Subroutine PT2 calculates wave parameters from linear theory relations.

$$C_g = nC$$

Group Velocity

$$n = \frac{l}{2} \left[ 1 + \frac{2kh}{\sinh 2kh} \right]$$

$$\frac{\sin \theta}{C} = \frac{\sin \theta_0}{C_0}$$

Wave angle from Snell's law

### Input Variables:

dp	Real	Offshore Water Depth
fqd	Real	Peak Frequency
l0	Real	Wave Length at Offshore Point
theta0	Real	Wave Angle at Offshore Point
xk	Real	Wave Number

### Output Variables:

Cg	Real	Group Velocity
l	Real	Wave Length
theta	Real	Wave Angle
xk	Real	Wave Number

### Local Variables:

c	Real	Temporary Variable
---	------	--------------------


### Subroutines Called from PT2 ( ):

WAVENUM

### PT2 ( ) Called from Subroutines:

MAIN\_WAV  
SLF\_STRT

Figure 47. Subroutine PT2 Flowchart

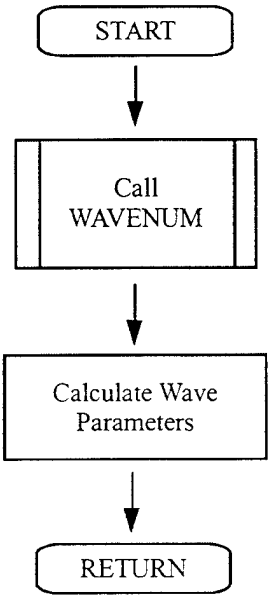



## 5.47 Subroutine RAD\_ST1

### Subroutine Call:

RAD\_ST1 (ifreq, freq, idirec, xfrom, esowm, freq1, freq2, dstart, igamma, theta, hrms, surf, fqd, per, fqz)

### Summary:

Subroutine RAD\_ST1 searches the directional wave spectrum to identify the dominant wave frequency and sums the wave energy directed toward shore. The flux of momentum or Radiation Stress, which contributes to driving the longshore current, is calculated following Thornton and Guza

$$S_{xy}(\theta, f) = E(\theta, f) n(f) \sin \alpha(f) \cos \alpha(f)$$

(1986).

In the above equation  $S_{xy}$  is the Radiation Stress,  $E$  is the total energy in the directional wave spectrum,  $n$  is the ratio of wave group velocity to wave velocity, and  $\alpha$  is the wave angle. The ratio

$$n = \frac{C_g}{C} = 0.5 \left( 1 + \frac{2kh}{\sinh kh} \right)$$

$n$  from linear wave theory is given by:

where,  $C_g$  is the group velocity,  $C$  is the wave velocity or celerity,  $k$  is the wave number and  $h$  is the local water depth.

### Input Variables:

dstart	Real	Input Starting Depth
esowm (dirNum,freqNum)	Real	Directional Wave Spectrum
freq (freqNum)	Real	Input Wave Spectrum Center Frequencies
freq1(freqNum)	Real	Beginning Frequency Bin Values

freq2 (freqNum)	Real	Ending Frequency Bin Values
idirec	Integer	Number of Directions in Input Spectrum
ifreq	Integer	Number of Frequencies in Input Spectrum
igamma	Integer	Beach Orientation Rotated 90 Degrees from Original Heading Toward Beach
xfrom (freqNum)	Real	Direction Array, Direction Wave Energy Comes From

### Output Variables:

fqd	Real	Peak Frequency at the Center of the Frequency Band
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
per	Real	Peak Period of Directional Wave Spectrum
surf	Logical	Flag for Low or No Surf Conditions (True or False)
theta	Real	Wave Angle

### Local Variables:

direc	Real	Wave Direction
ees	Real	Spectral Density at a Particular Frequency and Direction
esum	Real	Sum of Energy in One Frequency Band Over all Directions
esumm	Real	Sum of All Energy in Directional Spectrum
frd	Real	Wave Frequency
idir	Integer	Loop Counter
ifrq	Integer	Loop Counter
m	Integer	Temporary Variable for Rotating Wave Angle
maxfrq	Integer	Frequency at Maximum Spectral Density
summax	Real	Frequency Band with Maximum Energy
sumzero	Real	Summation of Zero-Crossing Frequency Energy
sxy	Real	Radiation Stress
sxysum	Real	Sum of Radiation Stress Energy
temp	Real	Temporary Variable in Radiation Stress Calculation
temp2	Real	Temporary Variable for Frequency Band with Maximum Energy
theta2	Real	Angle Between Wave Ray and Beach Perpendicular Projection
xk	Real	Wave Number
xkd	Real	Wave Number Multiplied by the Local Water Depth


**Subroutines Called from RAD\_ST1 ():**

RAD\_ST2  
WAVENUM

**RAD\_ST1 () Called from Subroutines:**

CALCSURF

Figure 48. Subroutine RAD\_ST1 Flowchart

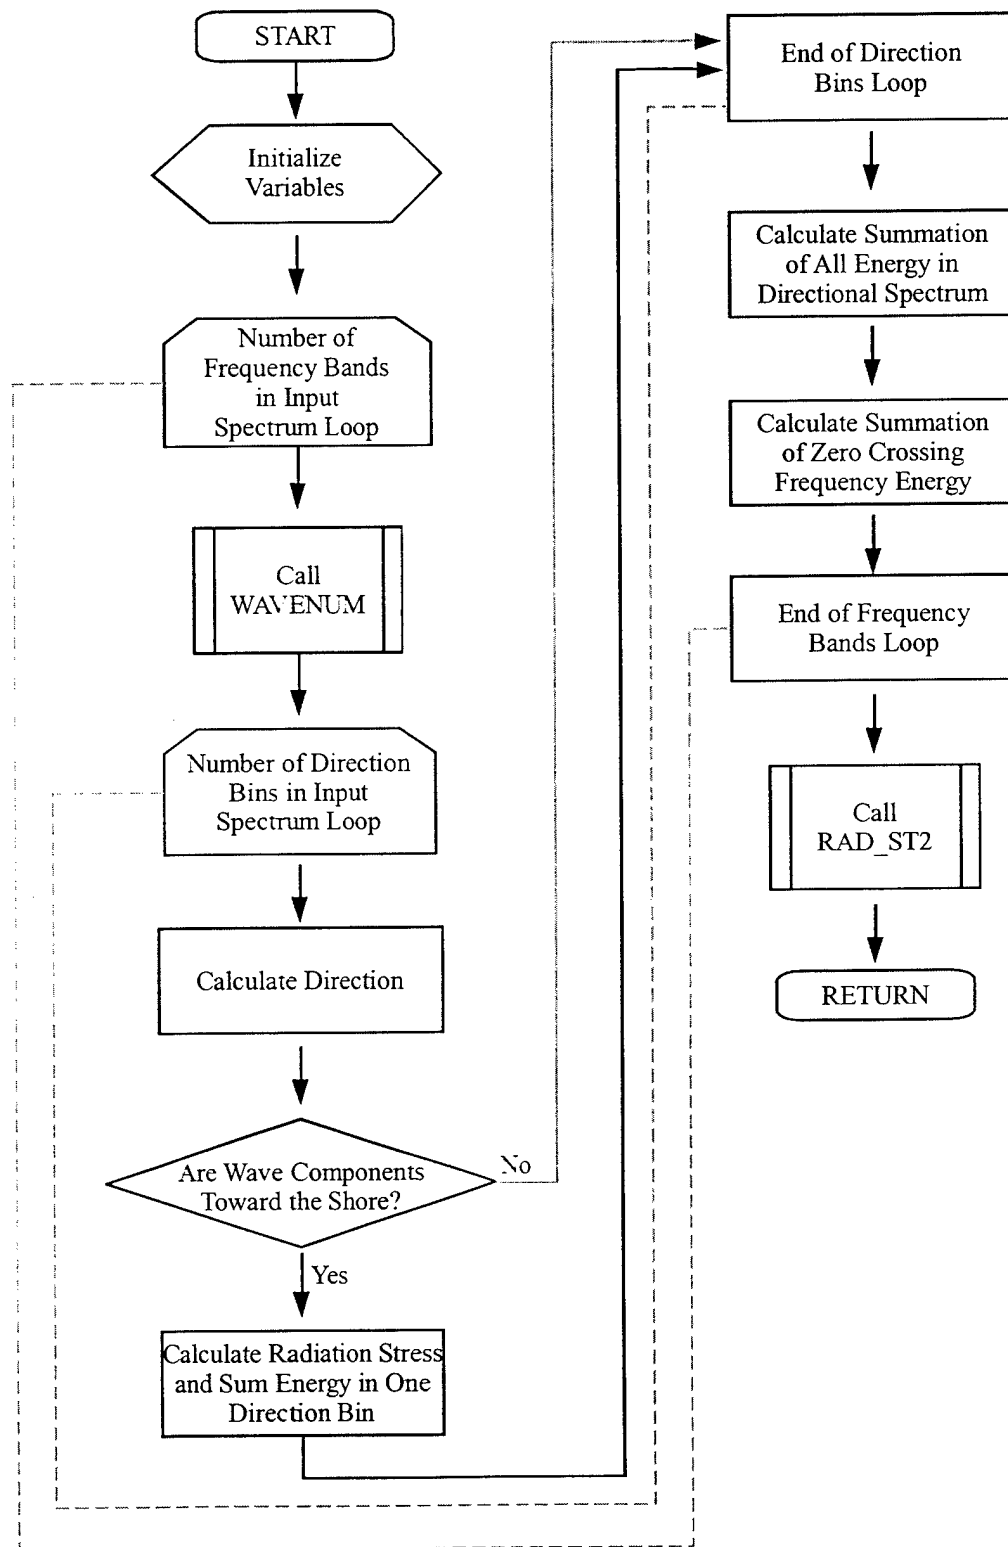

## 5.48 Subroutine RAD\_ST2

### Subroutine Call:

RAD\_ST2 (freq, sxysum, sumzero, esumm, maxfrq, dstart, theta, hrms, surf, fqd, per, fqz)

### Summary:

Subroutine RAD\_ST2 calculates several parameters based on the total energy in the directional wave spectrum. A check is performed to confirm that wave energy is directed onshore before writing summary information to the output file.

### Input Variables:

dstart	Real	Input Starting Depth
esumm	Real	Sum of All Energy in Directional Spectrum
freq (freqNum)	Real	Input Wave Spectrum Center Frequencies
maxfrq	Integer	Frequency at Maximum Spectral Density
sumzero	Real	Summation of Zero-Crossing Frequency Energy
sxysum	Real	Sum of Radiation Stress energy

### Output Variables:

fqd	Real	Peak Frequency
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
per	Real	Peak Period of Directional Wave Spectrum
surf	Logical	Logical Flag for Low/No Surf Conditions (True or False)
theta	Real	Wave Angle

### Local Variables:

hs	Real	Significant Wave Height
sxy2	Real	Temporary Wave Energy
temp	Real	Temporary Variable for Energy
theta3	Real	Wave Angle in Degrees
xk	Real	Wave Number Calculated at Peak Frequency and Input Starting Depth
xkd	Real	Wave Number * Water Depth


**Subroutines Called from RAD\_ST2 ():**

S\_NOSURF  
WAVENUM

**RAD\_ST2 () Called from Subroutines:**

RAD\_ST1

**Figure 49. Subroutine RAD\_ST2 Flowchart**

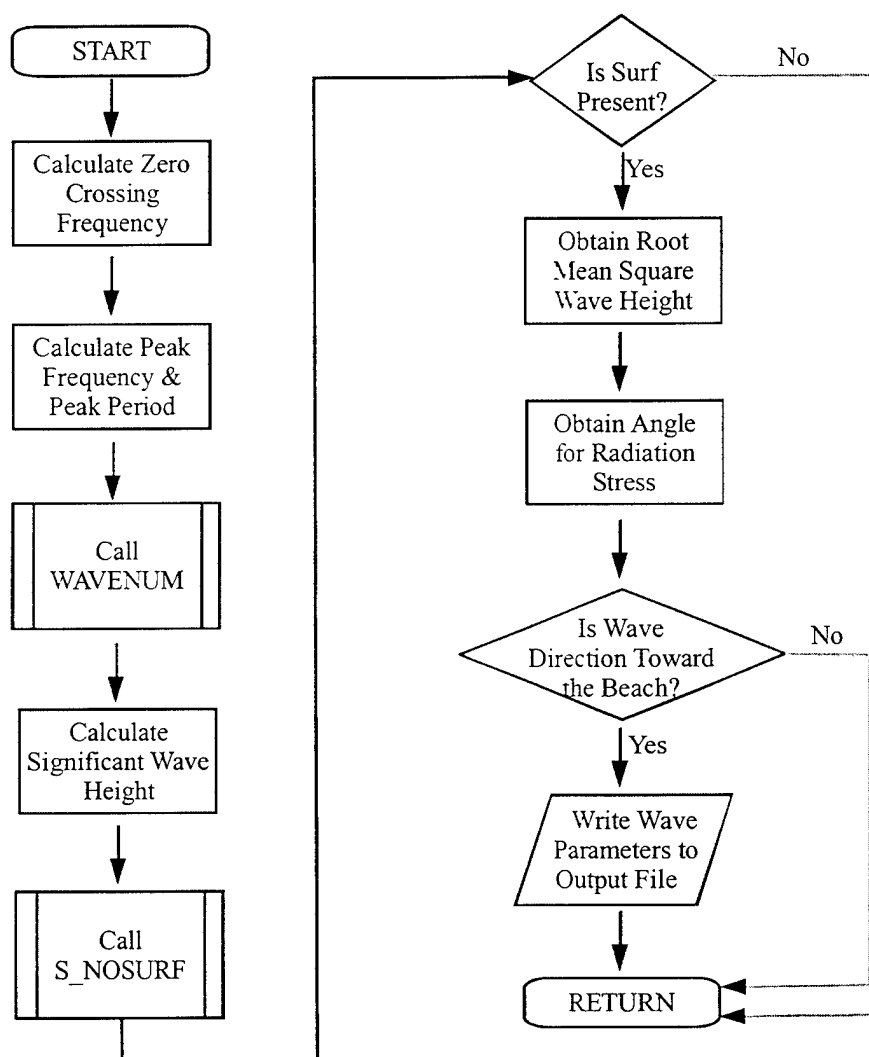

## 5.49 Subroutine READRFRC

### Subroutine Call:

READRFRC (fracname, idwsfreq, idwsdirec, xcoeff, xtheta, sfreq, sdir)

### Summary:

Subroutine READRFRC reads refraction information from a formatted input file. The matrices contained in these files are used to shoal and refract a directional wave spectrum from an offshore point to a location where depth information is available. The number of frequency bins must not exceed 50 and the number of direction bins must not exceed 180. The directional coverage of the refraction and shoaling coefficients must range from 0 to 360 degrees. Partial coverage over a fraction of the compass (e.g. 180 degree sector) will introduce errors.

### Input Variables:

fracname	Char*40	Wave Refraction File
----------	---------	----------------------

### Output Variables:

idwsdirec	Integer	Number of rows (Directions) in the Directional Wave Spectrum Matrix
idwsfreq	Integer	Number of columns (Frequencies) in the Directional Wave Spectrum Matrix
sdirec (dirNum)	Real	Direction Array for each bin in the Directional Wave Spectrum
sfreq (freqNum)	Real	Center Frequency of each Directional Wave Spectrum
xcoeff (dirNum,freqNum)	Real	Wave Height Refraction Coefficients
xtheta (dirNum,freqNum)	Real	Angle Refraction Coefficients

### Local Variables:

cfmatch	Logical	Flag for Center Frequency Match
cfreq (freqNum)	Real	Center Frequency of each Bin
col	Real	Number of Columns
dangle	Real	Angle Between Directional Bins
dir	Real	Number of Angles
dirin	Integer	X-Coordinates of known values
dirord	Integer	Direction of Waves

dirouts (dirNum)	Real	1 - Direction Waves are coming from
dirs (dirNum)	Real	2 - Direction Waves are going to
dmatch	Logical	Interpolated X-Coordinates
dots	Integer	Temporary Direction Wave Energy Comes From
dr1	Real	Flag for Directional Match
dth	Real	Y-Coordinates of known values
dum	Real	Initial Direction Bin
dumstr	Char*80	Temporary Angle Between Directional Bins
fmatch	Logical	Temporary Variable
fnum	Integer	Temporary Variable
found	Integer	Flag for Frequency Match
frchk	Integer	Bin Number
frq	Real	Flag Indicator
I	Integer	Total Number of Frequencies
ii	Integer	Number of Frequencies
icol	Integer	Loop Counter
idir	Integer	Counter
idirec	Integer	Number of Columns
		Loop Counter
		Number of Rows (Directions) in the
		Refraction Shoaling Matrix
ifreq	Integer	Number of Columns (Frequencies) in the
		Refraction Shoaling Matrix
ifrq	Integer	Loop Counter
instat	Integer	Error Status
irow	Integer	Number of Rows
j	Integer	Loop Counter
jj	Integer	Counter
k	Integer	Counter
kk	Integer	Counter
lfreq	Real	Lower Frequency Bin Limit
lowcut	Integer	Lower Cut Off Limit
mpnt	Integer	Number of Rows divided by 2
refs (dirNum)	Real	Temporary Array
rfrtmp (dirNum,freqNum)	Real	Temporary Matrix for Reversing Wave
		Direction
row	Real	Number of Rows
rtmpout (dirNum)	Real	Interpolated Coordinates
sfreqin (dirNum)	Real	Temporary Frequency Array
shltmp (dirNum,freqNum)	Real	Temporary Matrix for Reversing Wave
		Direction
splout (dirNum)	Real	interpolated Y-Coordinates
stmpout (dirNum)	Real	Interpolated Coordinates
temp (dirNum,freqNum)	Real	Temporary Variable
temp2 (dirNum,freqNum)	Real	Temporary Variable
tmpinr (dirNum)	Real	Temporary Variable



tmpins (dirNum)	Real	Temporary Variable
ufreq	Real	Upper Frequency Bin Limit
upcut	Integer	Upper Cut Off Limit
xfrom (dirNum)	Real	Direction Wave Energy Comes From


**Subroutines Called from READRFRC ():**


ABORT  
GENRLSPL

**READRFRC () Called from Subroutines:**

SURF

Figure 50. Subroutine READRFRC Flowchart

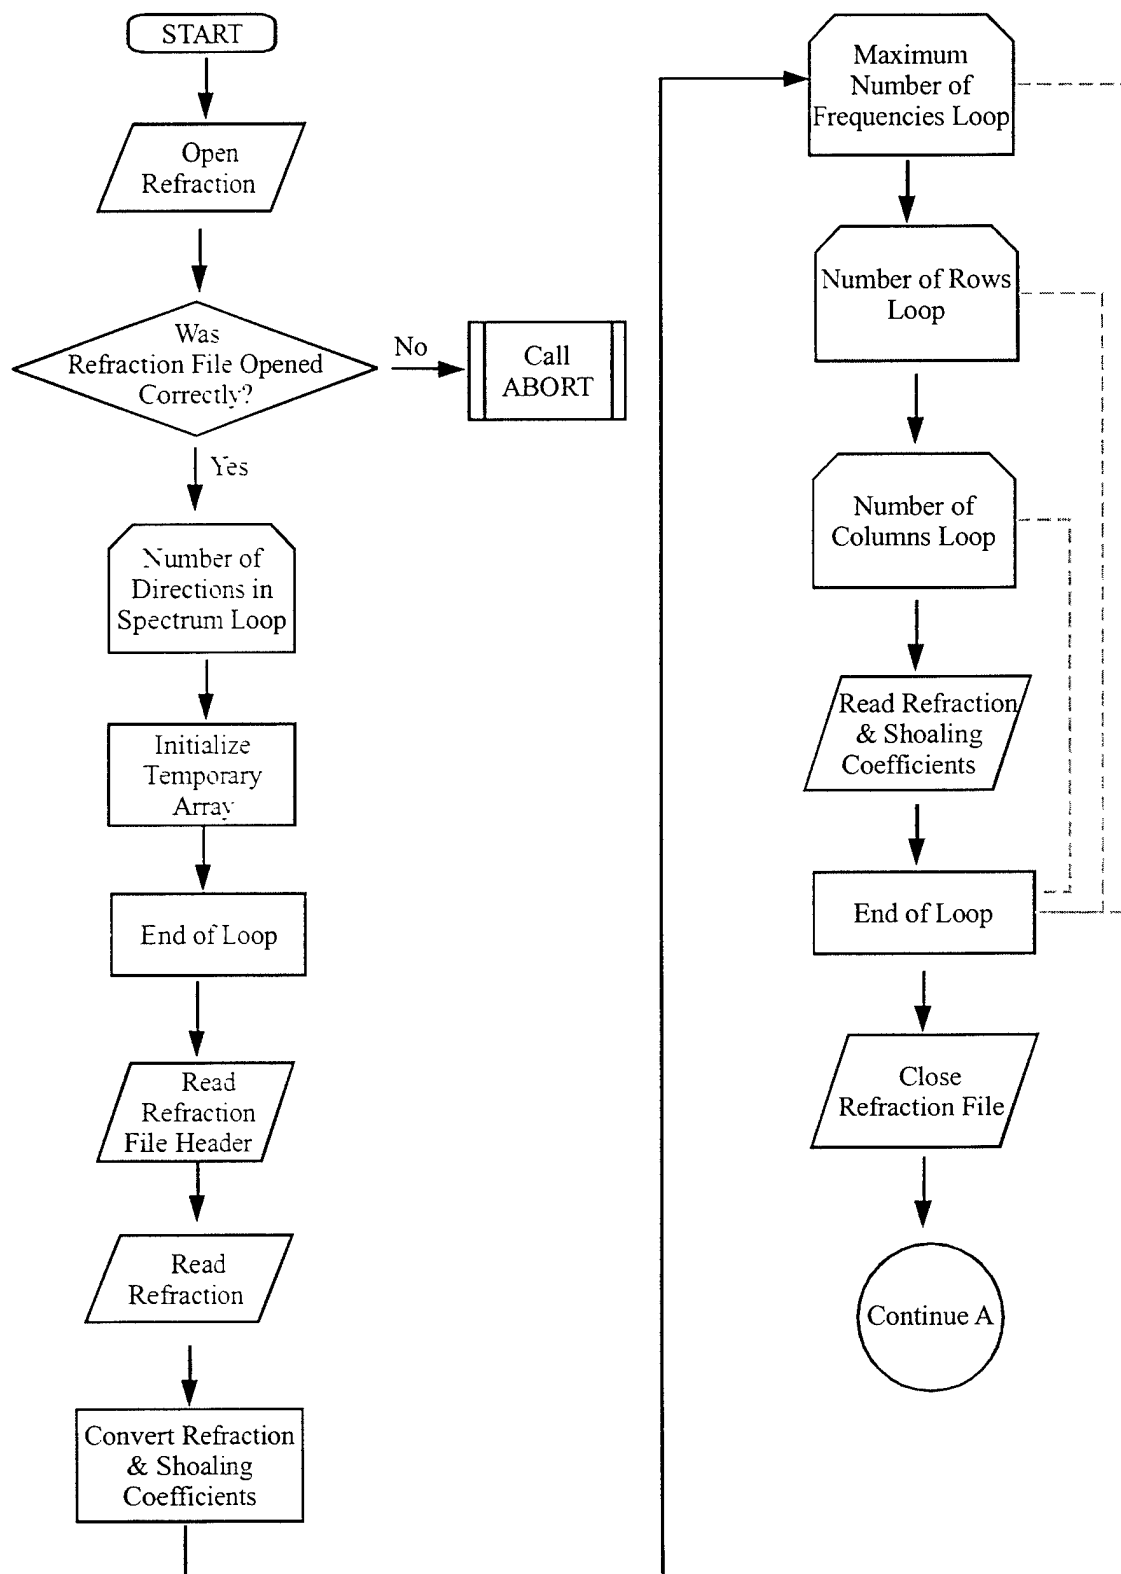

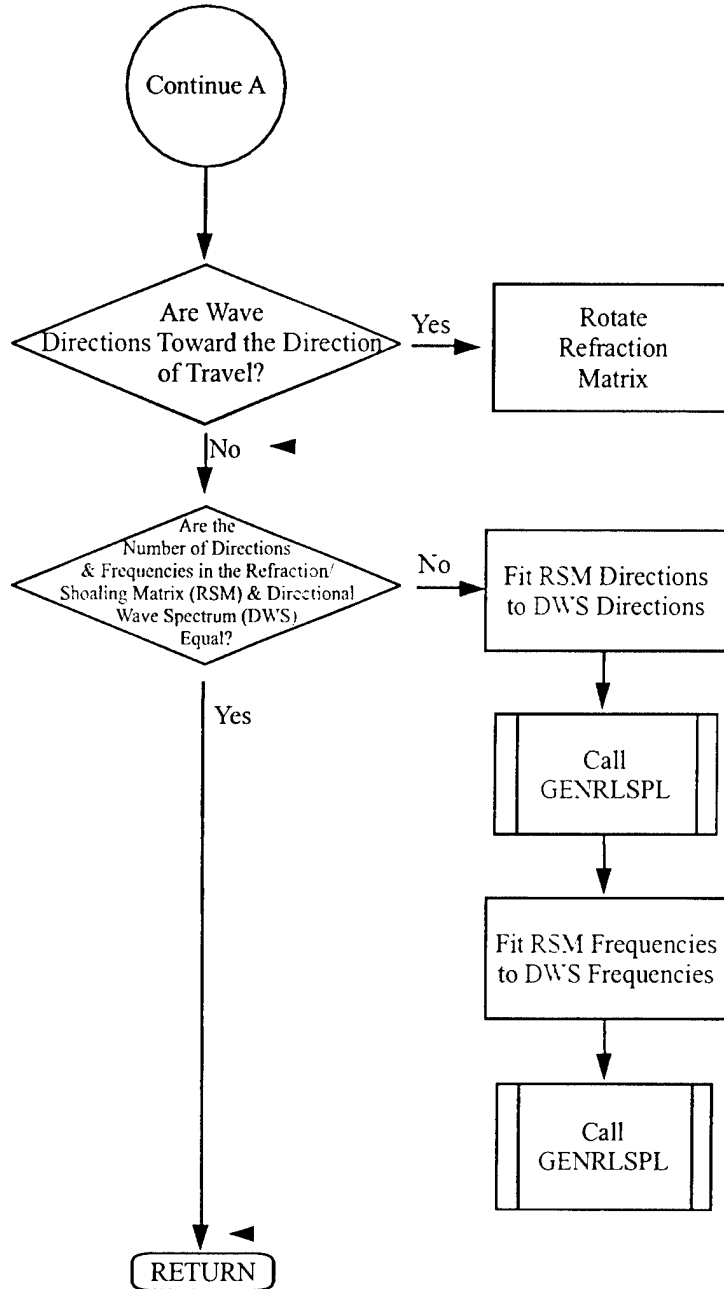

## 5.50 Subroutine READSPEC

### Subroutine Call:

READSPEC (ifreq, idirec, Cfreq, Lfreq, Ufreq, xfrom, esowm, period, ehsig, dangle, spefile)

### Summary:

Subroutine READSPEC opens and reads a directional wave spectrum file, which must conform to a specific format, but the number of frequencies and directions can vary. The maximum number of directions is 180 and the maximum number of frequencies is 50. The directions should be evenly spaced, and the frequency bins can be fixed or variable width with units of energy density ( $\text{m}^2/(\text{Hz} \cdot \text{radians})$ ). This energy density matrix is initialized, filled, and converted to units of feet squared inside this subroutine. Also, the direction of wave energy can be the direction FROM which waves are coming or TO which waves are going as denoted in the tenth header line by a 1 or 2 respectively. The directional wave spectrum must be defined from 0 to 360 degrees. Use of partial directional sectors (e.g. 0 to 180 degrees) will cause errors.

**Input Variables:** None.

### Output Variables:

Cfreq (freqNum)	Real	Center Frequency Bin Limit
dangle	Real	Angle Between Directional Bins
ehsig	Real	Significant Wave Height from Directional Spectrum
esowm (dirNum, freqNum)	Real	Directional Wave Spectrum
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequency Bins in Input Spectrum
Lfreq (freqNum)	Real	Lower Frequency Bin Limit
period (freqNum)	Real	Period Array (1/Frequency)
spefile	Char*40	Wave Spectrum File Name
Ufreq (freqNum)	Real	Upper Frequency Bin Limit
xfrom (dirNum)	Real	Direction Array, Direction Wave Energy Comes From

### Local Variables:

col	Real	Number of Columns
df	Real	Difference between Upper & Lower Bins
dir	Real	Number of Angles
dirord	Integer	Direction of Waves 1 - Direction Waves are coming from 2 - Direction Waves are going to
dth	Real	Width of Direction Bin
dum	Char*1	Temporary Variable
dr1	Real	Initial Direction Bin
fnum	Integer	Bin Number
frq	Real	Number of Frequencies
fts2msg	Real	Conversion Factor
I	Integer	Loop Counter
icol	Integer	Number of Columns
idir	Integer	Direction Loop Counter
ifrq	Integer	Loop Counter
instat	Integer	Error Status
irow	Integer	Number of Rows
j	Integer	Loop Counter
mpnt	Integer	Number of Rows divided by 2
mult	Real	Temporary Calculation Variable
row	Real	Number of Rows
temp (dirNum.dirNum)	Real	Temporary Array


### Subroutines Called from READSPEC ():

ABORT  
GT\_SIG\_H

### READSPEC () Called from Subroutines:

SURF

**Figure 51. Subroutine READSPEC Flowchart**

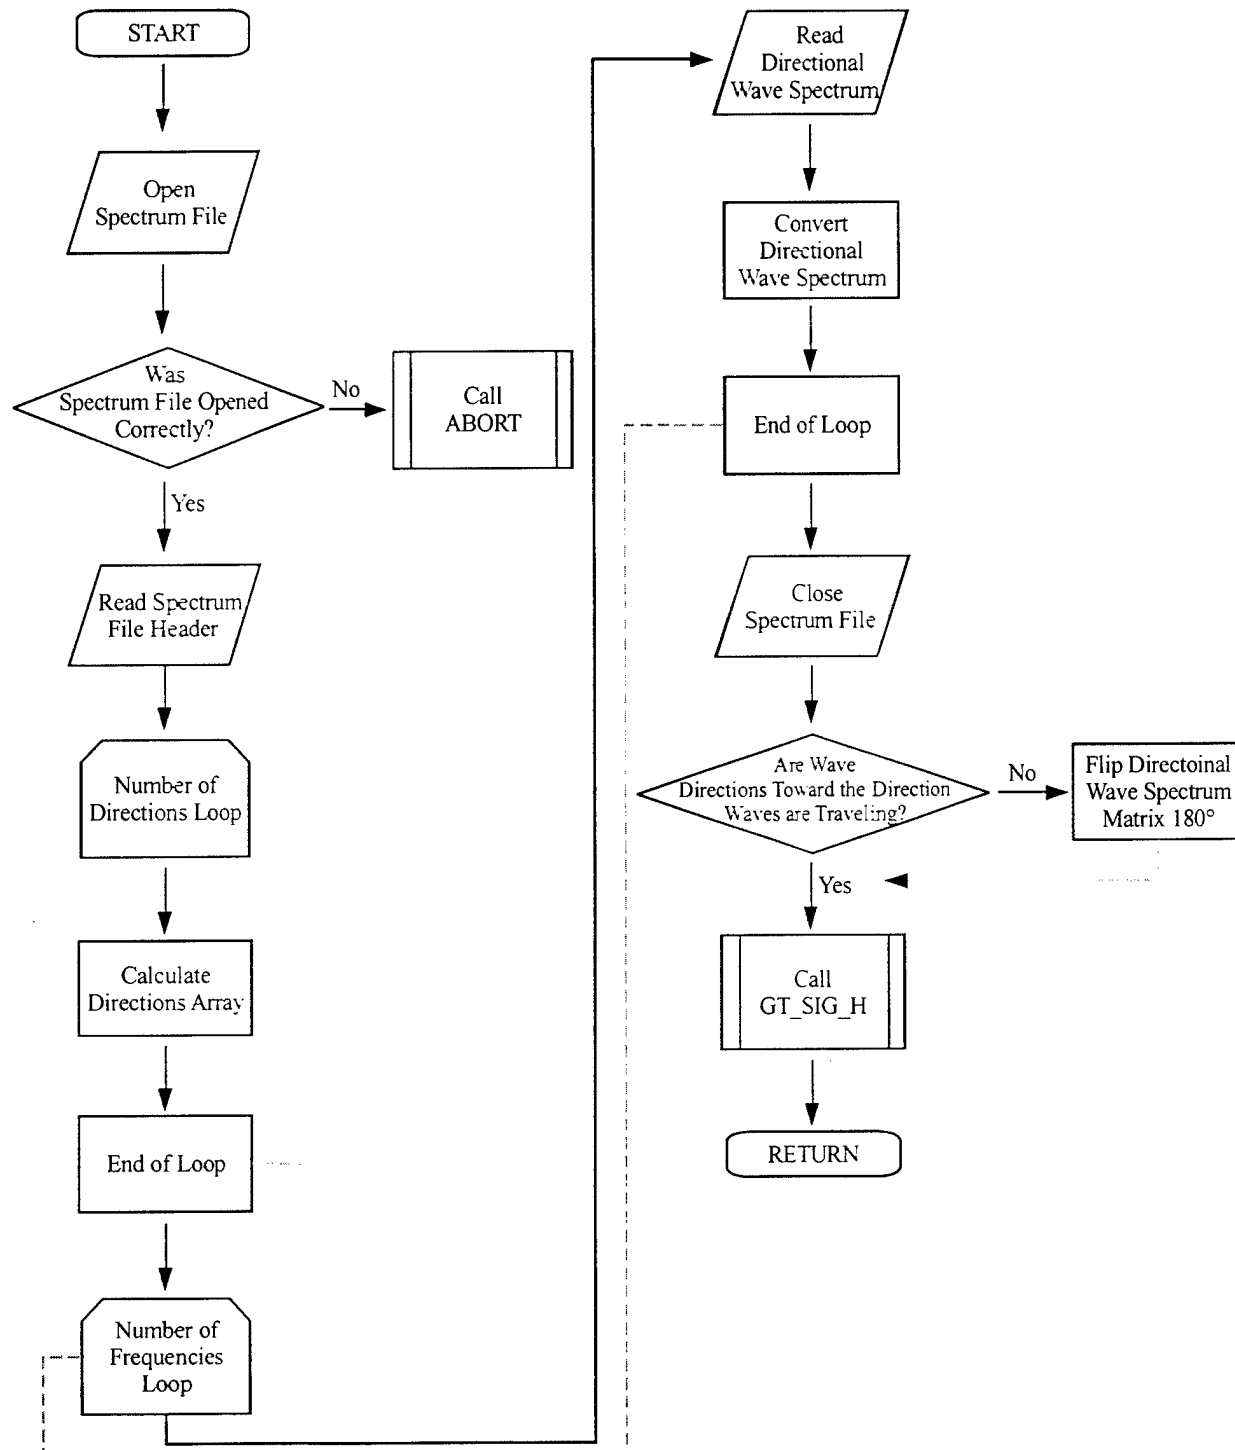

## 5.51 Subroutine REFRAC

### Subroutine Call:

REFRAC (idirec, ifreq, dangle, xtheta, xcoeff, esowm, ehsig)

### Summary:

For each frequency and direction bin in the input directional wave spectrum, the shallow water direction band for each deep water direction band is found. Wave energy from each deep water band is multiplied by the combined refraction/shoaling coefficient and moved into the proper shallow water band to provide a shallow water directional spectrum.

### Input Variables:

dangle	Real	Angle Between Directional Bins
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Real	Number of Frequencies in Input Spectrum
xcoeff (dirNum,freqNum)	Real	Wave Height Refraction Coefficients
xtheta (dirNum,freqNum)	Real	Angle Refraction Coefficients

### Output Variables:

ehsig	Real	Significant Wave Height from Directional Spectrum
esowm (dirNum,freqNum)	Real	Directional Wave Spectrum

### Local Variables:


esite (dirNum,freqNum)	Real	Directional Spectrum in Shallow Water
idir	Integer	Direction Loop Counter
ifrq	Integer	Frequency Loop Counter
itemp	Integer	Temporary Wave Angle Variable
itheta (dirNum,freqNum)	Integer	Shoreward Energy Spectrum
jdir	Integer	Loop Variable
mtemp	Integer	Temporary Wave Angle Variable
sum	Real	Temporary Wave Energy Summation Variable
sum2	Real	Temporary Wave Energy Summation Variable
ytheta	Real	Temporary Wave Angle Variable

**Subroutines Called from REFRAC ():** None.

# REFRAC ( ) Called from Subroutines:

SURF

Figure 52. Subroutine REFRAC Flowchart

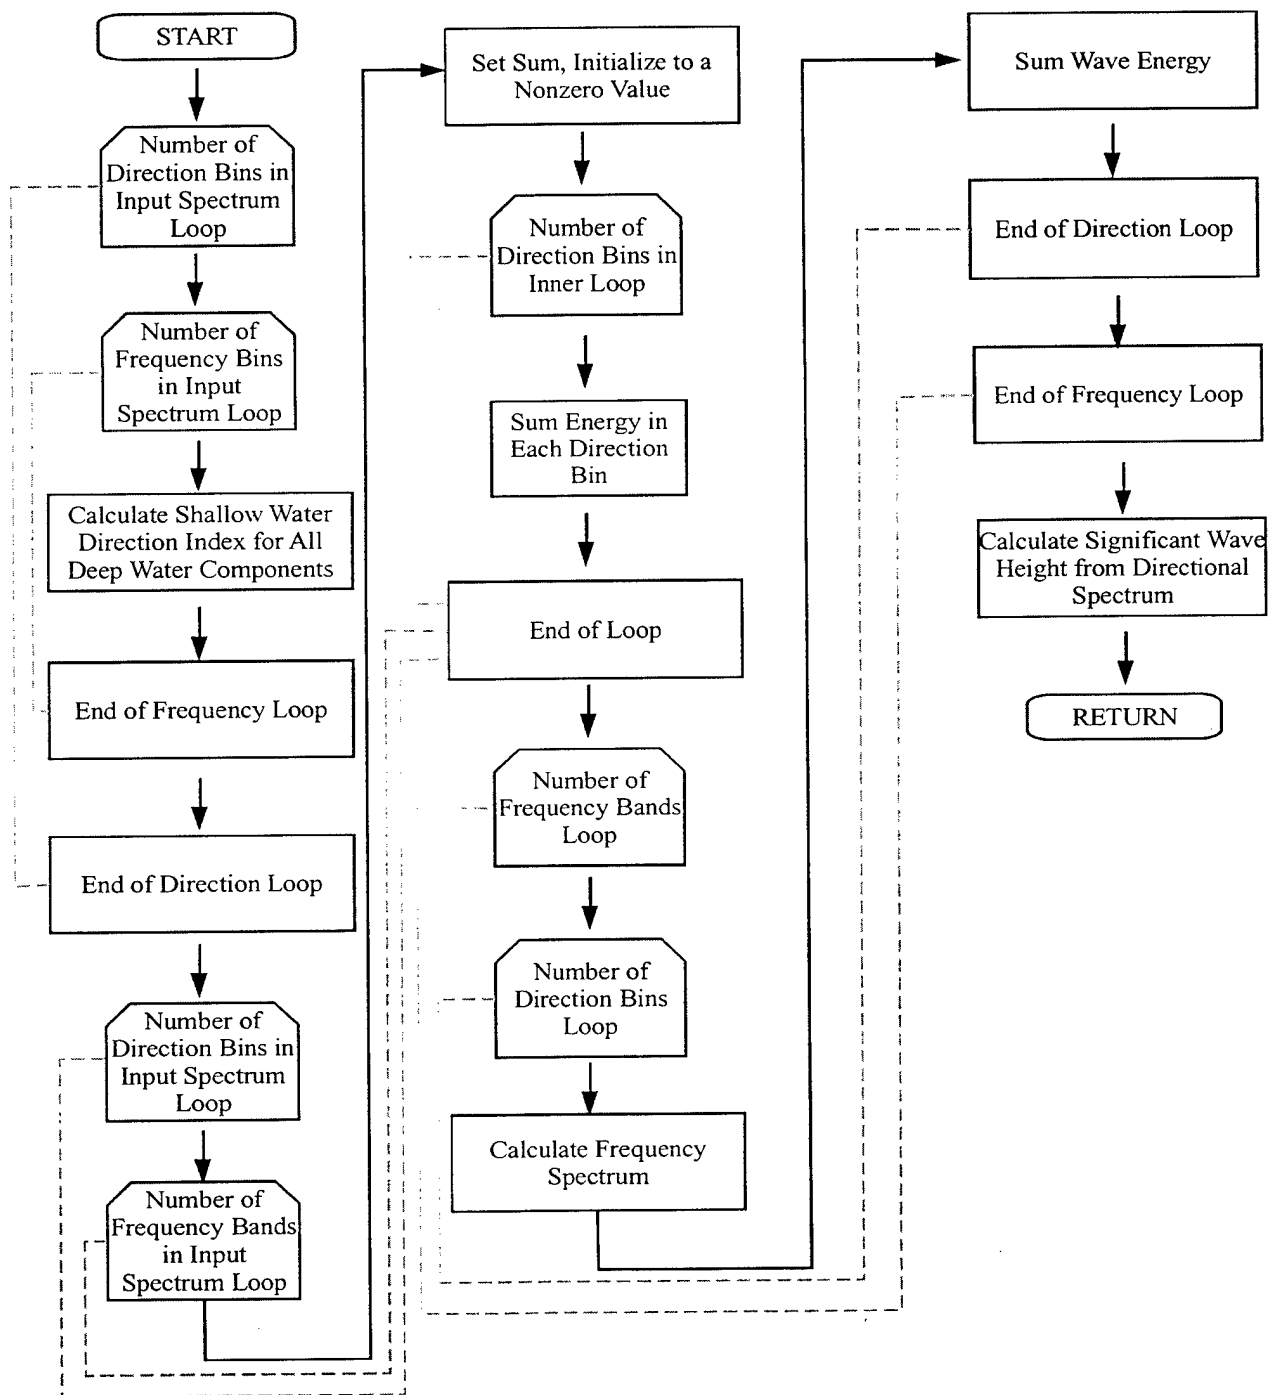



## 5.52 Subroutine RN2

### Subroutine Call:

RN2 (n, x, y1, y2, y3, y4)

### Summary:

Subroutine RN2 calculates percentages of each type of breaker in the surf zone.

### Input Variables:

n	Integer	Number of Waves Considered Breaking on a Positive Bottom Slope
x (points)	Real	Temporary Significant Wave Height Array
y1 (points)	Real	Spilling Breaker Type
y2 (points)	Real	Plunging Breaker Type
y3 (points)	Real	Surging Breaker Type
y4 (points)	Real	Total Number of Breakers

### Output Variables:

y1 (points)	Real	Spilling Array Breaker Type
y2 (points)	Real	Plunging Array Breaker Type
y3 (points)	Real	Surging Array Breaker Type
y4 (points)	Real	Total Array Breaker Type

### Local Variables:


hold	Real	Temporary Variable Used for Repositioning
i	Integer	Loop Counter
j	Integer	Loop Counter
js	Integer	Loop Starting Index
m	Integer	Number of Waves Considered Breaking on a Positive Slope

Subroutines Called from RN2 ( ): None.

RN2 ( ) Called from Subroutines:

NEW\_BRK

Figure 53. Subroutine RN2 Flowchart

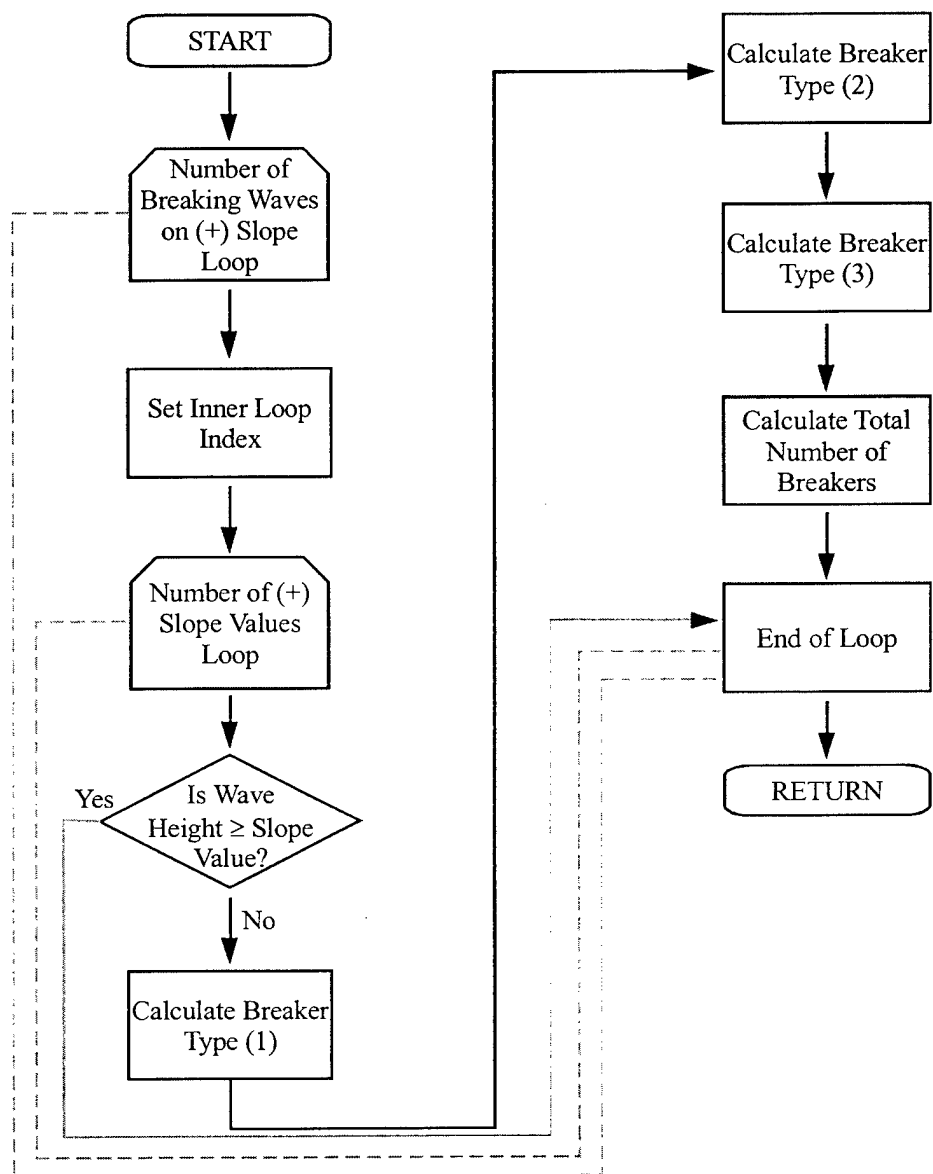

### 5.53 Subroutine S\_COEFF

#### Subroutine Call:

S\_COEFF (dp, fqd, hrms, theta, c, xk, wdir, igamma, wdspd, c1,c2, c3, c4, cf, vwind)

#### Summary:

Subroutine S\_COEFF calculates several parameters in the longshore current equation including the Radiation Stress, the bottom stress, and the wind stress. A check is performed to assure that wave induced motion is not dominated by wind effects and a warning message is written to the output file if this condition is violated. An assumption is made that if the wave induced orbital velocity is greater than the wind-forced component of the longshore current, the local conditions are wave dominated.

#### Input Variables:

c	Real	Wave Celerity at Input Starting Depth
dp	Real	Water Depth Offshore
fqd	Real	Peak Frequency from Directional Spectrum
hrms	Real	Root Mean Square Wave Height
igamma	Integer	Beach Orientation, Compass Heading Directly Toward Beach
theta	Real	Wave Angle
wdir	Real	Input Wind Direction Compass Heading
wdspd	Real	Input Wind Speed
xk	Real	Wave Length at Input Starting Depth

#### Output Variables:

c1	Real	Mixing/Eddy Viscosity Coefficient
c2	Real	Bottom Friction Coefficient
c3	Real	Factor for Radiation Stress
c4	Real	Friction Coefficient
vwind	Real	Wind Driven Longshore Current Velocity

**Local Variables:**


c4tmp	Real	Temporary Variable Used in Wind Velocity Vector Calculation
cd	Real	Coefficient of Drag Used in Wind Velocity Calculation
cf	Real	Coefficient of Friction for the Bottom
dwind	Real	Sign of Wind Vector (Positive or Negative)
m	Integer	Temporary Variable Used in Rotating Wind Angle
theta4	Real	Rotated Wind Direction
uorb	Real	Wave Particle Orbital Velocity
xn	Real	Eddy Viscosity Mixing Coefficient

**Subroutines Called from S\_COEFF ( ):** None.

**S\_COEFF ( ) Called from Subroutines:**

CALCSURF

Figure 54. Subroutine S\_COEFF Flowchart

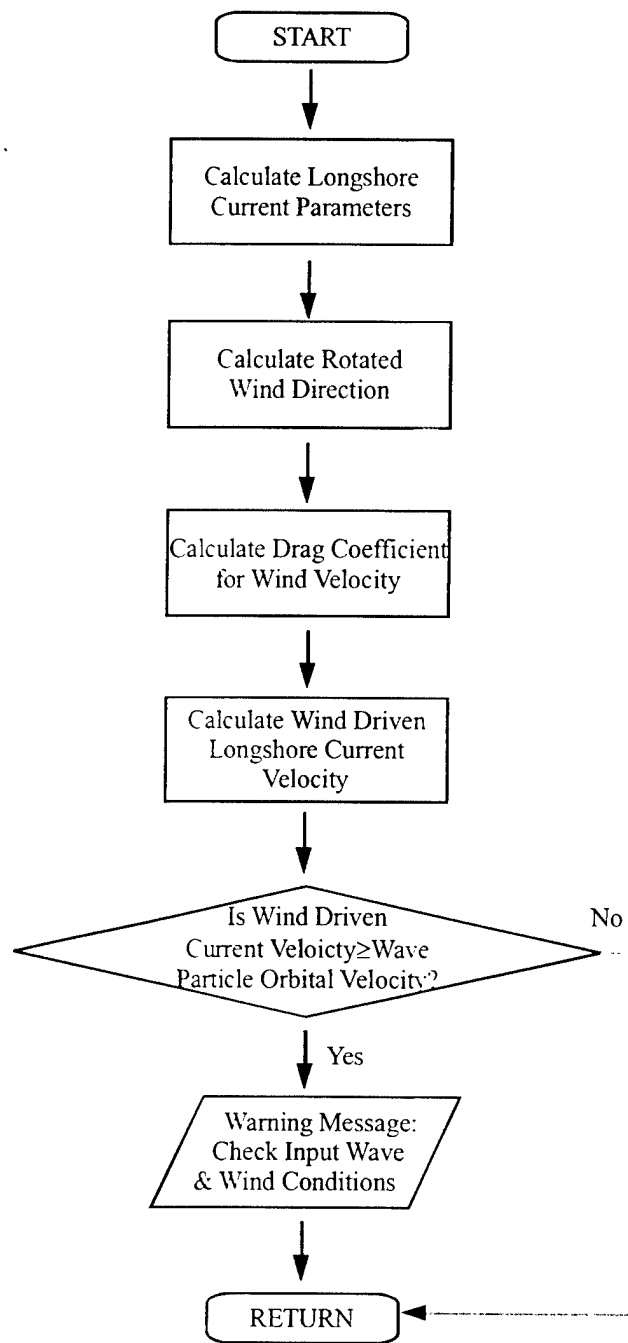

## 5.54 Subroutine S\_NOSURF

### Subroutine Call:

S\_NOSURF ( hsig, surf )

### Summary:

Subroutine S\_NOSURF is called to determine if local conditions are significant enough to proceed with surf zone calculations. The minimum condition for continuation is that the significant wave height calculated from the directional wave spectrum must be greater than 0.15 m.

### Input Variables:

hsig	Real	Significant Wave Height
------	------	-------------------------

### Output Variables:

surf	Logical	Flag to Indicate Low or No Surf Conditions (True or False)
------	---------	---


**Local Variables:** None.

**Subroutines Called from S\_NOSURF ():** None.

**S\_NOSURF () Called from Subroutines:**

CALCSURF  
RAD\_ST2

**Figure 55. Subroutine S\_NOSURF Flowchart**

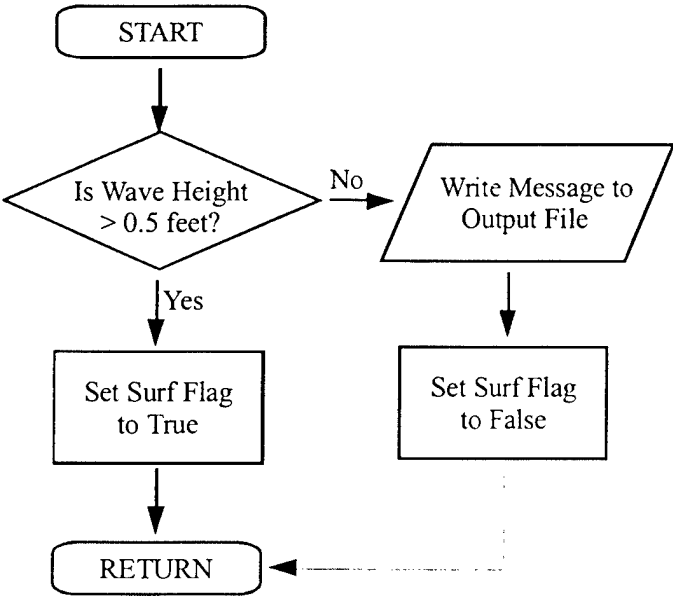

## 5.55 Subroutine S\_TIDE

### Subroutine Call:

S\_TIDE (tide, ydepth, nnn, dxy1, xx1, dxy, xshift)

### Summary:

Subroutine S\_TIDE adds the tidal elevation to each cross-shore point in the input depth profile.

### Input Variables:

dxy1 (points)	Real	Corresponding Depths without Tide
nnn	Integer	Number of Points in Input Depth Array
tide	Real	Tide Level
xx1 (points)	Real	Adjusted Cross-Shore Distances from Depth Profile
ydepth	Char*1	Usage of Input Depth (Yes/No)

### Output Variables:

dxy (points)	Real	Adjusted Depths with Tide
xshift	Real	Offshore Distance

### Local Variables:

ddiff	Real	Change in Water Depth
n	Integer	Loop Counter
nn	Integer	Loop Counter
mm	Integer	Loop Counter
xdiff	Real	Change in Cross-Shore Location
ztide	Real	Tide Level


Subroutines Called from S\_TIDE (:): None.

S\_TIDE ( ) Called from Subroutines:

CALCSURF



Figure 56. Subroutine S\_TIDE Flowchart

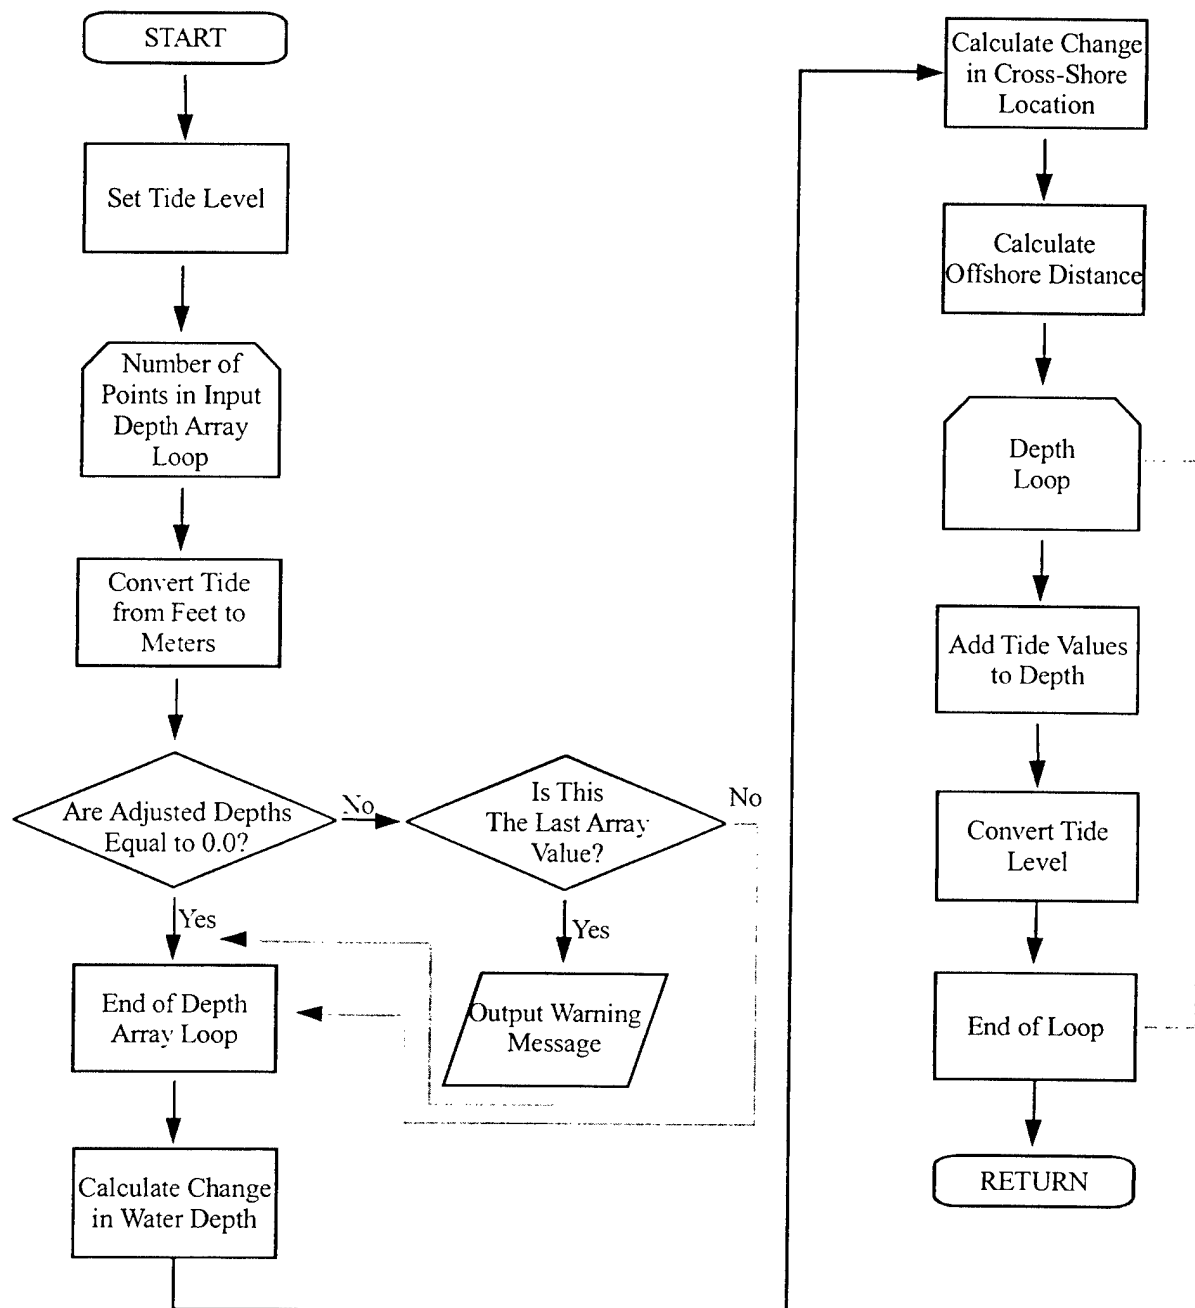

## 5.56 Subroutine SEAFIT

### Subroutine Call:

SEAFIT (hsig, per, dir, ifreq, idirec, freq1, freq2, xfrom, esowm)

### Summary:

Subroutine SEAFIT calculates a directional wave spectrum from an input wave height and wave period using a Pierson-Moskowitz spectrum representation and a cosine to the fourth directional spreading function. The modified Pierson-Moskowitz equation (from Pierson and Moskowitz, 1964)

$$E(f) = a g^2 w^{-5} e^{[-b(w_0/w)^4]}$$

provides wave energy at each frequency from the following equation:

where :

$$w = 2\pi f$$

$$a = 0.0081$$

$$b = 0.74$$

$$w_0 = \frac{g}{U}$$

in which  $f$  is the wave frequency in Hertz,  $g$  is gravity, and  $U$  is the wind speed in meters per second measured at 19.5 m above the sea surface. The spectrum  $E(f)$  is a vector of spectral densities and it is assumed that each density is integrated from the lower limit of the frequency bin to the upper limit of the frequency bin.

**Input Variables:**

dir	Real	Wave Direction
freq1 (freqNum)	Real	Beginning Frequency Bin Value
freq2 (freqNum)	Real	Ending Frequency Bin Value
hsig	Real	Significant Wave Height
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequencies in Input Spectrum
per	Real	Peak Period of Directional Wave Spectrum
xfrom (dirNum)	Real	Direction Array, Direction Wave Energy Comes From

**Output Variables:**

esowm (dirNum,freqNum)	Real	Directional Wave Spectrum
------------------------	------	---------------------------

**Local Variables:**

ang	Real	Temporary Wave Angle
b	Real	Constant = 0.74
const	Real	Variable in Pierson-Moskowitz Equation
e	Real	Variable in Pierson-Moskowitz Equation
enew	Real	Variable in Pierson-Moskowitz Equation
gu	Real	Variable in Pierson-Moskowitz Equation
hs	Real	Set to Significant Wave Height
hsl	Real	Set to Significant Wave Height
idir	Integer	Direction Loop Counter
ifrq	Integer	Frequency Loop Counter
ipm	Integer	Set to 1
ratio	Real	Set to 1.0
sprd	Real	Directional Spreading Factor
sum1	Real	Temporary Wave Energy Variable
sum2	Real	Temporary Wave Energy Variable
temp	Real	Variable in Pierson-Moskowitz Equation
theta	Real	Wave Angle
val1	Real	Variable in Pierson-Moskowitz Equation
val2	Real	Variable in Pierson-Moskowitz Equation
w1	Real	Wave Frequency at Beginning of Bin
w2	Real	Wave Frequency at End of Bin


**Subroutines Called from SEAFIT ():**

None.

## SEAFIT ( ) Called from Subroutines:

WAVEFIT

Figure 57. Subroutine SEAFIT Flowchart

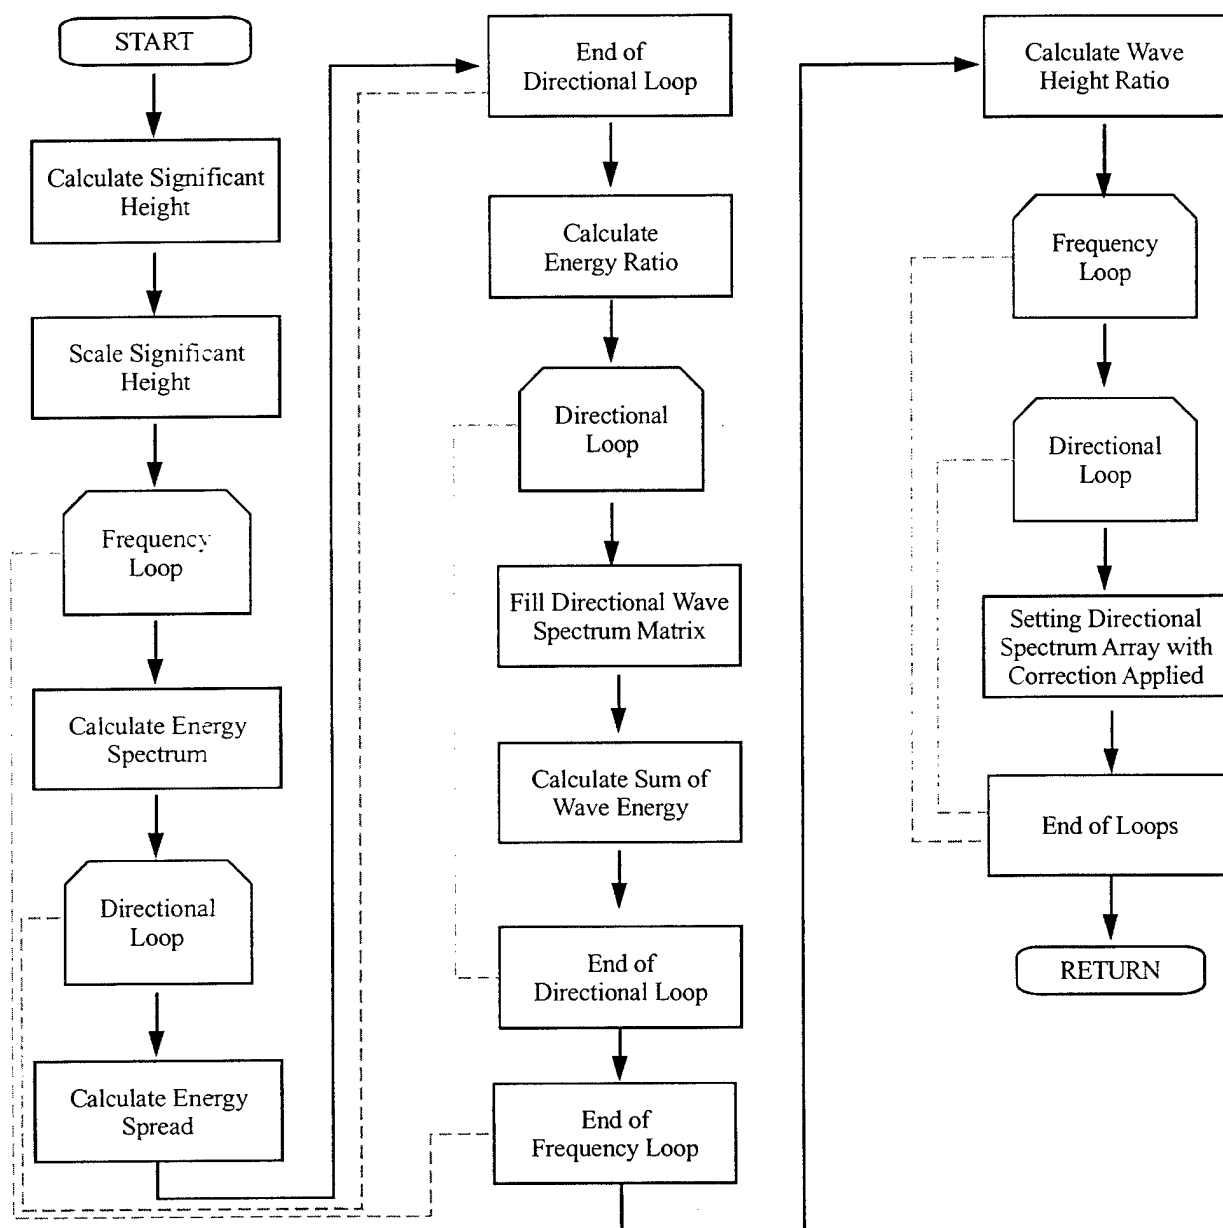

## 5.57 Subroutine SETUP

### Subroutine Call:

SETUP (pkfreq, d1, d2, hrms1, hrms2, eta1, eta2, kinit1)

### Summary:

Subroutine SETUP calculates the change in the nearshore mean water level caused by the onshore flux of momentum or the shore-directed Radiation Stress. The presence of waves causes a change in the total water depth, which is defined by the still water level plus the wave-induced set-up.

### Input Variables:

d1	Real	Corresponding Depth
d2	Real	Next Corresponding Depth
eta1	Real	Wave Induced Setup at Present Location
hrms1	Real	Root Mean Square Wave Height
hrms2	Real	Wave Height at next Onshore Grid Location
kinit1	Real	Wave Number
pkfreq	Real	Peak Frequency at the Center of the Frequency Band

### Output Variables:

eta2	Real	Wave Induced Setup at New Location
------	------	------------------------------------

### Local Variables:

avg_depth	Real	Averaged Depth
convrq	Logical	Set to False
e1	Real	Total Average Energy for Offshore Wave
e2	Real	Total Average Energy for Wave Shoaled and Refracted Toward the Shore
en1	Real	Linear Wave Theory Ratio of Group Velocity to Wave Celerity
en2	Real	Linear Wave Theory Ratio of Group Velocity to Wave Celerity
eta_new	Real	Wave Induced Setup Estimated at New Location
i	Integer	Counter
k1	Real	First Wave Number Estimate
k2	Real	Second Wave Number Estimate
percent_diff	Real	Convergence Check

sxx1	Real	Cross-Shore Directed Radiation Stress
sxx2	Real	Cross-Shore Directed Radiation Stress
tol	Real	Convergence Tolerance


**Subroutines Called from SETUP ():**

WAVENUM

**SETUP () Called from Subroutines:**

MAIN\_WAV

Figure 58. Subroutine SETUP Flowchart

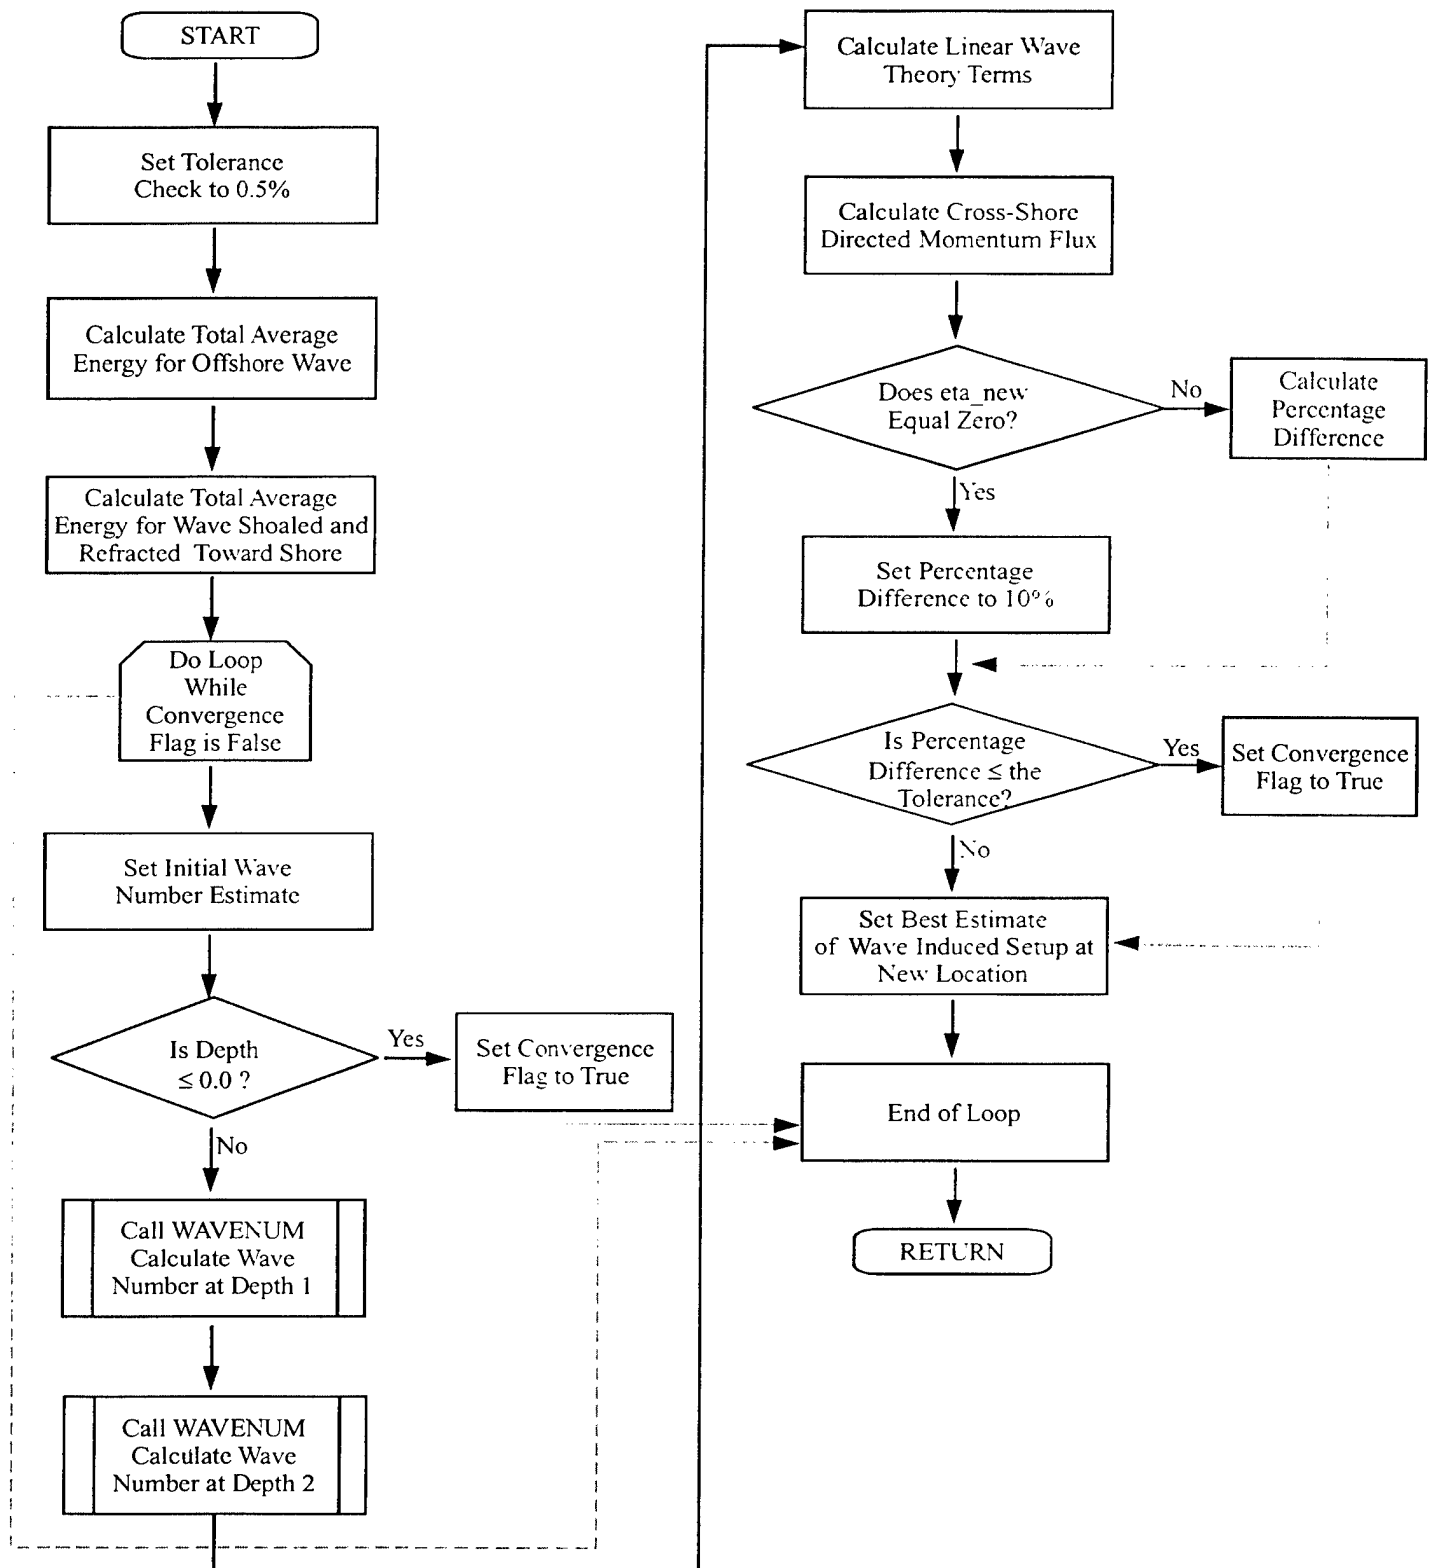

## 5.58 Subroutine SHORTOUT

### Subroutine Call:

SHORTOUT (wdir, wspd, j, iimax, dxy, xtemp, sum1, k, h1max, h2max, per, pct, theta1, vmax, vmin, width, igamma, b1, rk, htemp, wid\_ii, jgamma, alfa, bravo, chrllie, echo, foxtrt, golf1, golf2, ihtl1, ihtl2)

### Summary:

Subroutine SHORTOUT defines the forecasting output variables.

### Input Variables:

b1 (points)	Real	Bottom Slope Array
dxy (points)	Real	Corresponding Depths with Tide
h1max	Real	Largest Significant Wave Height in the Surf Zone
h2max	Real	Largest Maximum Wave Height in the Surf Zone
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
igamma	Integer	Beach Orientation Rotated 90 Degrees from Original Heading Toward Beach
iimax	Integer	Number of Calculation Locations
j	Integer	Pre-tidal Depth or Still Water Level
k	Integer	Temporary Variable for Significant Wave Height
pct(4)	Real	Percentage Breaker Array
per	Real	Peak Period of Directional Wave Spectrum
rk (points, 4)	Real	Matrix of Percentage Breakers and Type of Breakers
sum1	Real	Sum of Wave Length in the Surf Zone
theta1	Real	Wave Angle at Input Starting Depth
vmax	Real	Maximum Positive Longshore Current Velocity
vmin	Real	Maximum Negative Longshore Current Velocity
wdir	Real	Input Wind Direction - Compass Heading Wind is Blowing From
wid_ii	Integer	Surf Zone Width Array Index
width	Real	Surf Zone Width
wspd	Real	Input Wind Speed
xtemp (points)	Real	Temporary Variable for Cross-Shore Values

### Output Variables:



alfa	Real	Significant Breaker Height
bravo	Real	Maximum Breaker Height
chrlic	Real	Dominant Breaker Period
echo	Real	Breaker Angle
foxtrt	Real	Longshore Current Speed and Direction
golf1	Real	Number of Surf Lines
golf2	Real	Surf Zone Width
ih11	Real	Wind Speed
ih12	Real	Wind Direction
jgamma	Integer	Temporary Variable Set to Beach Orientation

#### **Local Variables:**

i1	Integer	Temporary Array
i2	Integer	Temporary Array
temp1	Real	Temporary Variable for Longshore Current Maximum Calculation
temp2	Real	Temporary Variable for Longshore Current Minimum Calculation
xlen	Real	Average Wave Length in Surf Zone


#### **Subroutines Called from SHORTOUT():**

NEW\_BRK

#### **SHORTOUT ( ) Called from Subroutines:**

CALCSURF

**Figure 59. Subroutine SHORTOUT Flowchart**

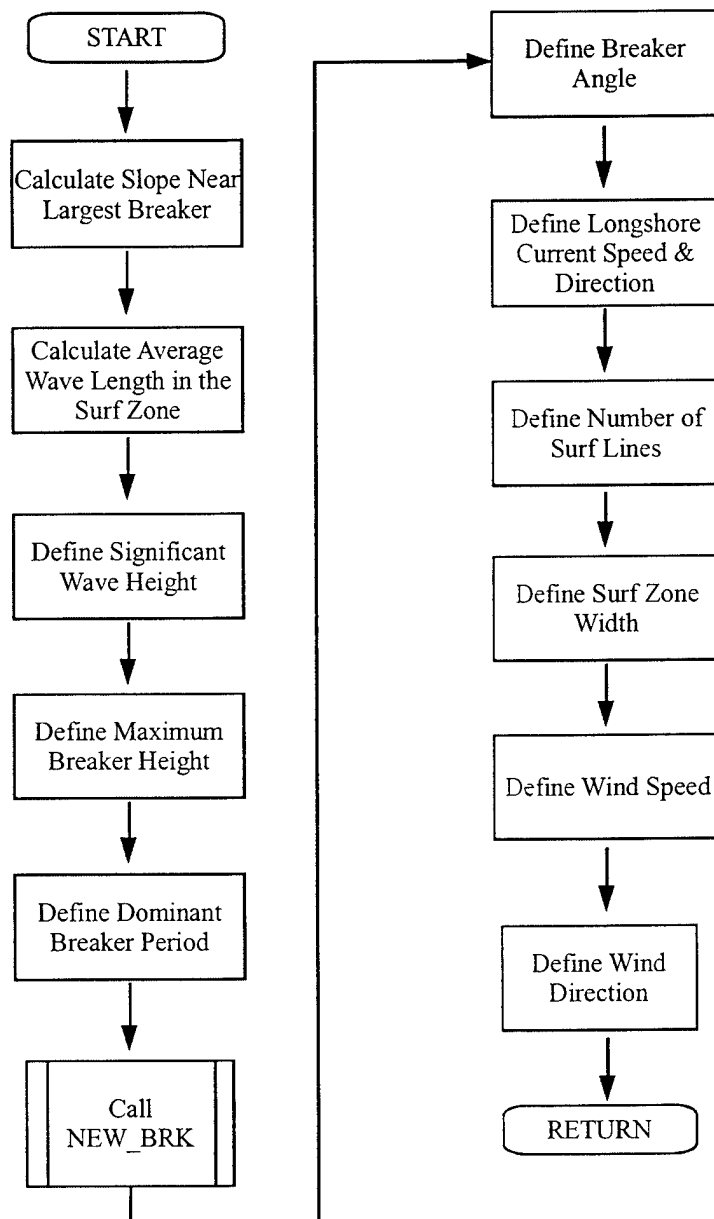

## 5.59 Subroutine SLF\_STRT

### Subroutine Call:

SLF\_STRT (self\_st, xk, theta, xdelt\_gr, hrms, per, fqz, fqd, Cg, dxy, nnn, b, j\_ii, l0, theta0, surf)

### Summary:

Subroutine SLF\_STRT shoals and refracts waves from the farthest offshore point to the shoreward point where the percentage of breaking exceeds the surf zone criteria of five percent (5%).

If the five percent (5%) threshold is not exceeded, execution halts.

### Input Variables:

b	Real	Empirical Factor in Wave Breaking Model
Cg	Real	Wave Group Velocity
dxy (points)	Real	Corresponding Depths with Tide
fqd	Real	Peak Frequency at the Center of the Frequency Band
fqz	Real	Zero Crossing Frequency
hrms	Real	Root Mean Square Wave Height
nnn	Integer	Number of Points in Input Depth Array
per	Real	Peak Period of Directional Wave Spectrum
self_st	Char*1	Self Staring Option (Yes or No)
theta	Real	Radiation Stress Angle
xdelt_gr	Real	Self-Adjusting Cross-Shore Grid Step
xk	Real	Wave Number

### Output Variables:

Cg	Real	Wave Group Velocity
hrms	Real	Root Mean Square Wave Height
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
l0	Real	Wave Length Offshore Location
surf	Logical	Index Where Percentage of Breakers Is Exceeded - Start of Surf Zone
theta0	Real	Wave Angle at Grid Offshore Location
xk	Real	Wave Number

**Local Variables:**

beta	Real	Bottom Slope
cg2	Real	Group Velocity
convg	Real	Convergence Flag (True or False)
dp	Real	Offshore Water Depth
eb	Real	Dissipation Term
hrms2	Real	Root Mean Square Wave Height
ii	Integer	Array Index
l	Real	Wave Length
p (4)	Real	Breaker Percentage Array
rhs	Real	Right Hand Side of Energy Equation
roller	Logical	Roller Option Flag (True or False)
rstart	Real	Percent Breaking Wave Criteria
xk0	Real	Offshore Wave Number


**Subroutines Called from SLF\_STRT ():**

BALANCEQ  
GET\_RHS  
PERCENT  
PT2

**SLF\_STRT () Called from Subroutines:**

MAIN\_WAV

Figure 60. Subroutine SLF\_STRT Flowchart

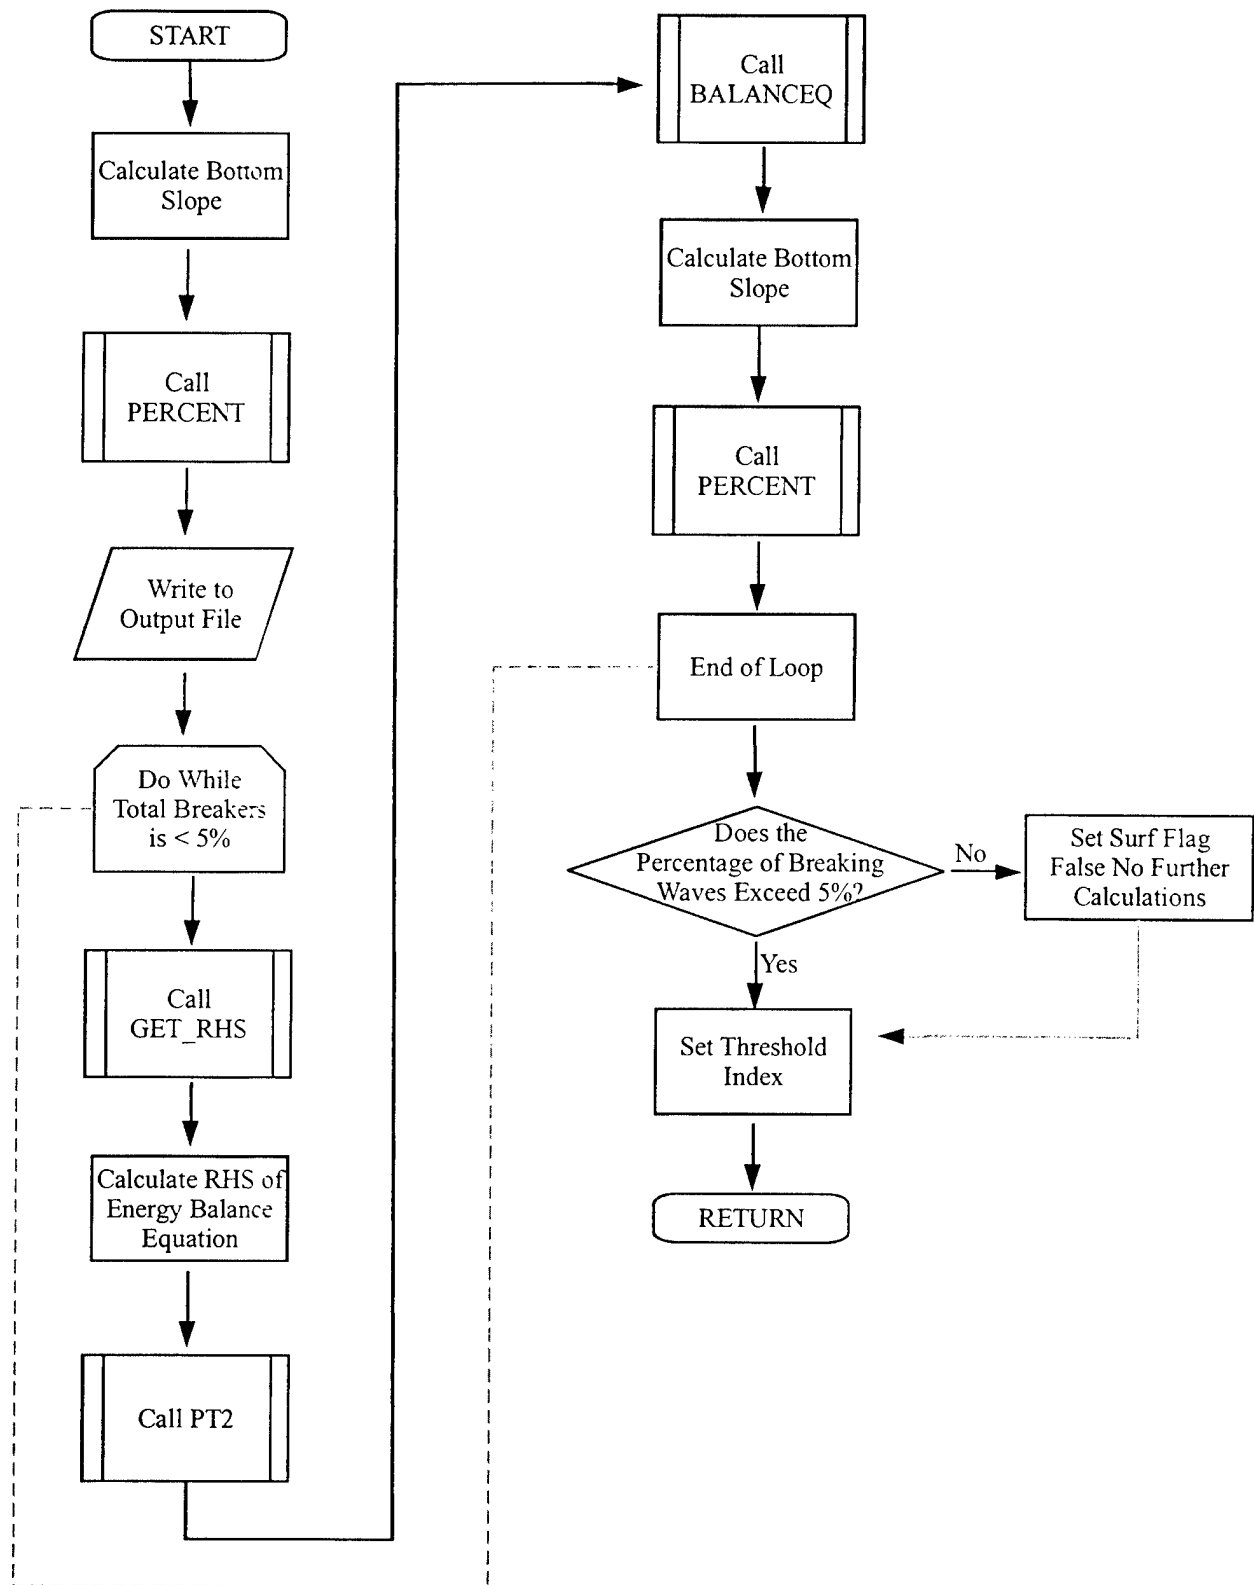

## 5.60 Subroutine SPLINE

### Subroutine Call:

SPLINE (xi, c, n)

### Summary:

Subroutine SPLINE calculates the coefficients of the cubic polynomial that fits through a specific set of x and y coordinates.

### Input Variables:

xi (dirNum)	Real	Array of X-Coordinates
-------------	------	------------------------

### Output Variables:

c (4,dirNum)	Real	Cubic Polynomial Coefficients
n	Integer	Number of X-Coordinates

### Local Variables:


d (dirNum)	Real	Difference between Adjacent X-Coordinates
dng1 (dirNum)	Real	Slope between (2) Adjacent X-Coordinates
dvd1	Real	Temporary Variable
dvd3	Real	Temporary Variable
dx	Real	Difference between (2) points
gg	Real	Temporary Value (delta x / slope)
I	Integer	Loop Counter
m	Integer	Loop Counter

**Subroutines Called from SPLINE ( ):** None.

**SPLINE( ) Called from Subroutines:**

GENRLSPL

**Figure 61. Subroutine SPLINE Flowchart**

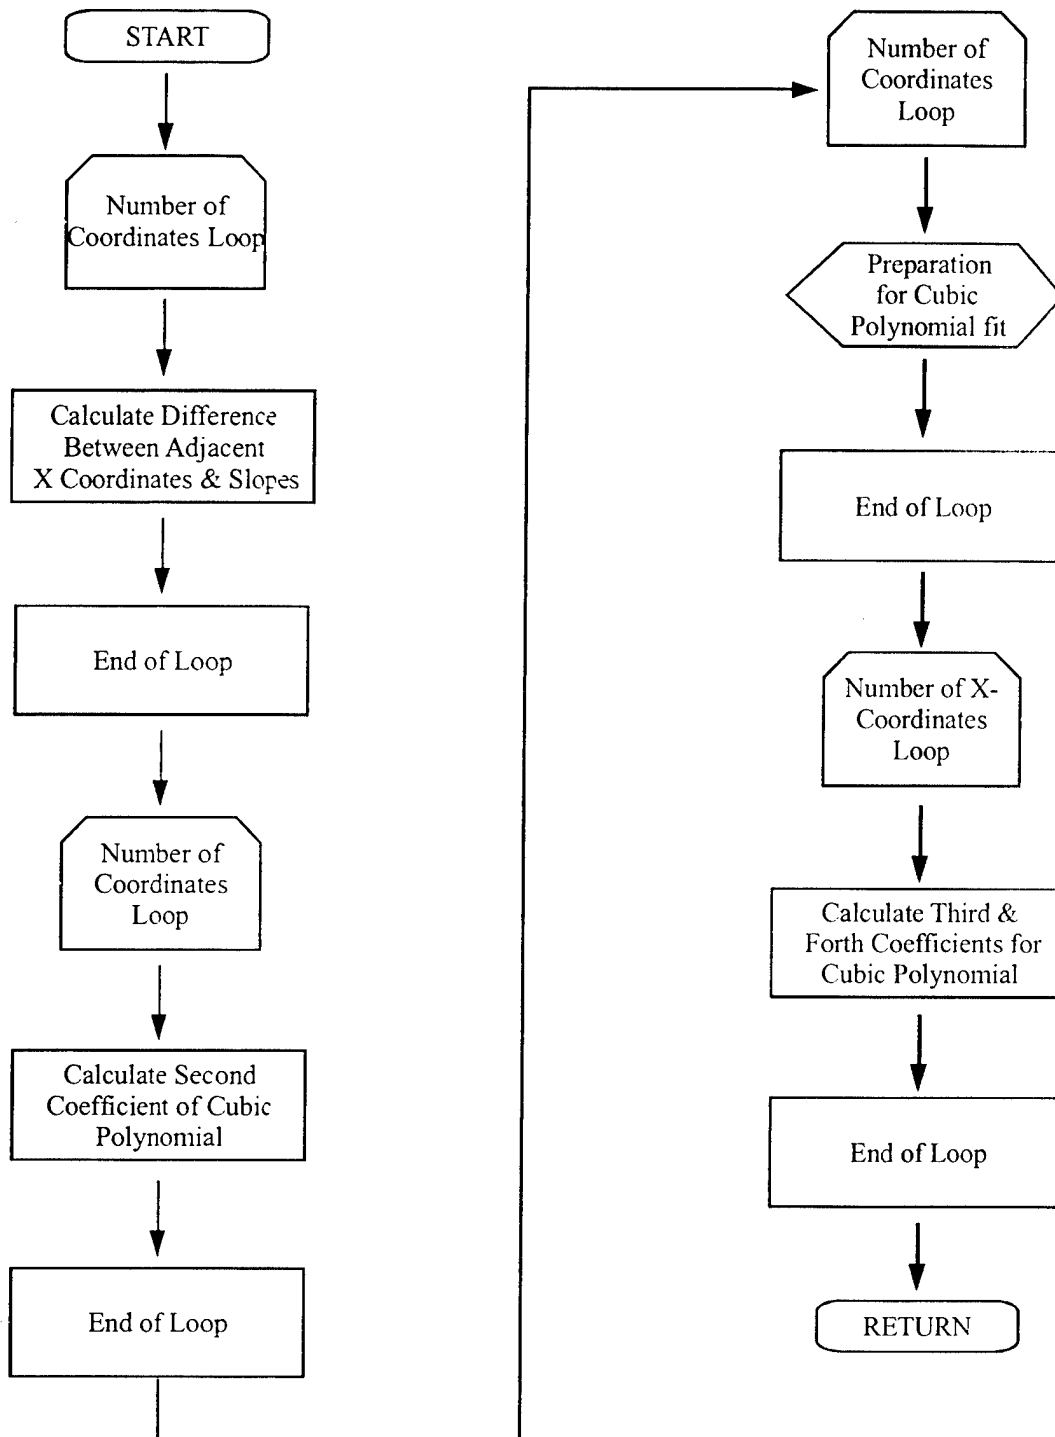

## 5.61 Subroutine SRFSETUP

### Subroutine Call:

SRFSETUP (file\_in, file\_out, fracname, lndname, depname, iyear, imonth, iday, ihour, imin, gamma2, ydepth, slope, ydetail, xdelt, dstart, yrefrac, ystr, self\_st, hsea, psea, dsea, hswell, pswell, dswell, wspd, wdir, tide, gt\_frg, spefile, file\_dat, file\_tmp, spedepth, file\_spc)

### Summary:

Subroutine SRFSETUP opens input and output files. Input variables are initialized using data from user-constructed input file. The format of the input file is outlined in Section 6.0.

**Input Variables:** None.

### Output Variables:

depname	Char*40	Depth Profile File Name
dsea	Real	Input Direction for Sea Contribution
dstart	Real	Input Starting Depth
dswell	Real	Input Swell Direction for Internally Generated Spectrum
file_in	Char*40	Input File Name
file_out	Char*40	Output File Name
file_dat	Char*40	Output File Name
file_spc	Char*40	Shallow Water Wave Spectrum File Name
file_tmp	Char*40	Output File Name
fracname	Char*40	Wave Refraction File Name
gamma2	Real	Beach Orientation, Compass Heading Directly Toward Beach
gt_frg	Integer	Spectrum Type
hsea	Real	Input Significant Wave Height for Sea Contribution to Pierson Moskowitz Spectrum
hswell	Real	Input Significant Wave Height for Internally Generated Spectrum
iday	Integer	Input Day
ihour	Integer	Input Hour
imin	Integer	Input Minute
imonth	Integer	Input Month
iyear	Integer	Input Year
lndname	Char*40	Input Landing Zone Name
psea	Real	Input Wave Period for Sea Contribution to Internally Generated Spectrum
pswell	Real	Input Swell Period for Internally Generated Spectrum



self_st	Char*1	Self Start Flag (Yes or No)
slope	Real	Bottom Slope
spedepth	Real	Depth at Offshore Wave Spectrum
spefile	Char*40	Selected Wave Spectrum File Name
tide	Real	Input Tide Level
wdir	Real	Input Wind Direction, Compass Heading Wind Blows From
wspd	Real	Input Wind Speed
xdelt	Real	Surf Zone Output Interval
ydepth	Char*1	Input Depth Profile Used? (Yes or No)
ydetail	Char*1	Detailed Output? (Yes or No)
yrefrac	Char*1	Is Refraction Considered in Analysis? (Yes or No)
ystr	Char*1	Is Straight Coast Refraction Used? (Yes or No)

#### **Local Variables:**

dum1	Char*80	Title Line
fend	Integer	File Name Prefix Used for Building File Names
file_dat	Char*20	Additional Output File Name
i	Integer	Loop Counter
iopen	Integer	I/O Status Number
j	Integer	Loop Counter


#### **Subroutines Called from SRFSETUP ( ):**

ABORT

#### **SRFSETUP ( ) Called from Subroutines:**

SURF

**Figure 62. Subroutine SRFSETUP Flowchart**

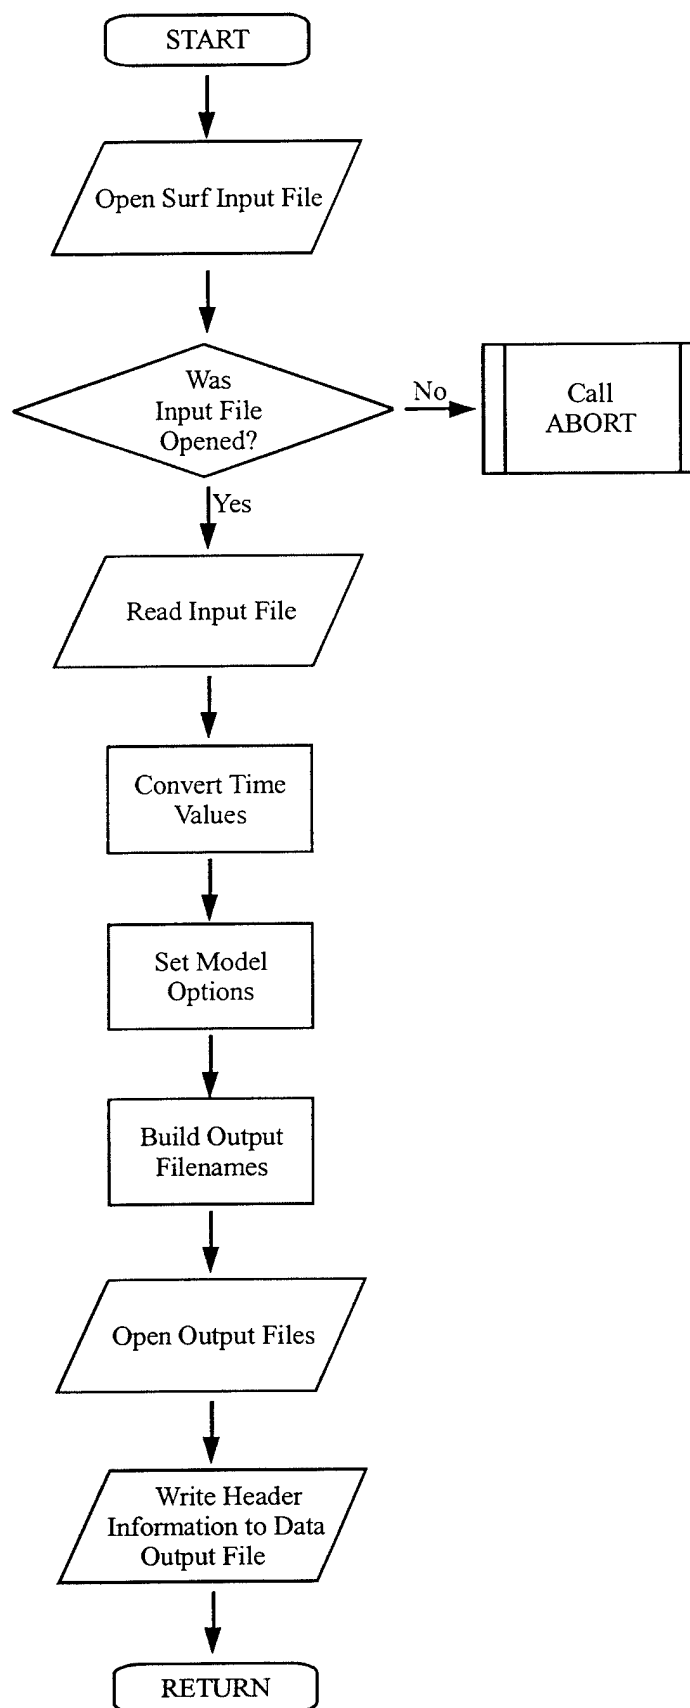

## 5.62 Subroutine STRFRAC

### Subroutine Call:

STRFRAC (dstart, ifreq, freq, igamma, idirec, xfrom, xcoeff, xtheta, wavedep)

### Summary:

Subroutine STRFRAC calculates wave angle refraction coefficients and combined shoaling and refraction coefficients to propagate wave energy into shallow water.

### Input Variables:

dstart	Real	Input Starting Depth
freq (freqNum)	Real	Input Wave Spectrum Center Frequencies
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequency Bins in Input Spectrum
igamma	Integer	Beach Orientation Rotated 90 Degrees from Original Heading Toward Beach
xfrom (dirNum)	Real	Direction Array

### Output Variables:

xcoeff (dirNum,freqNum)	Real	Wave Height Refraction Coefficients
xtheta (dirNum,freqNum)	Real	Wave Angle Refraction Coefficients

### Local Variables:

arg1	Real	Shallow Water Angle (1) - Temporary
direc	Real	Temporary Direction Angle
frd	Real	Wave Frequency
idir	Integer	Direction Loop Counter
ifrq	Integer	Frequency Loop Counter
m	Integer	Temporary Wave Angle
noprint	Real	Wave Component Direction
shoal	Real	Temporary Shoaling Coefficient
shoal2	Real	Temporary Shoaling Coefficient at Input Starting Depth
thetad	Real	Temporary Wave Angle Variable
thetas2	Real	Temporary Wave Angle Variable
xkd	Real	Temporary Wave Number Variable
xk2	Real	Temporary Wave Number Variable

xks2	Real	Temporary Wave Number at Input
		Starting Depth
xksd2	Real	Wave Number at Input Starting Depth


**Subroutines Called from STRFRAC ():**

WAVENUM

**STRFRAC () Called from Subroutines:**

SURF

**Figure 63. Subroutine STRFRAC Flowchart**

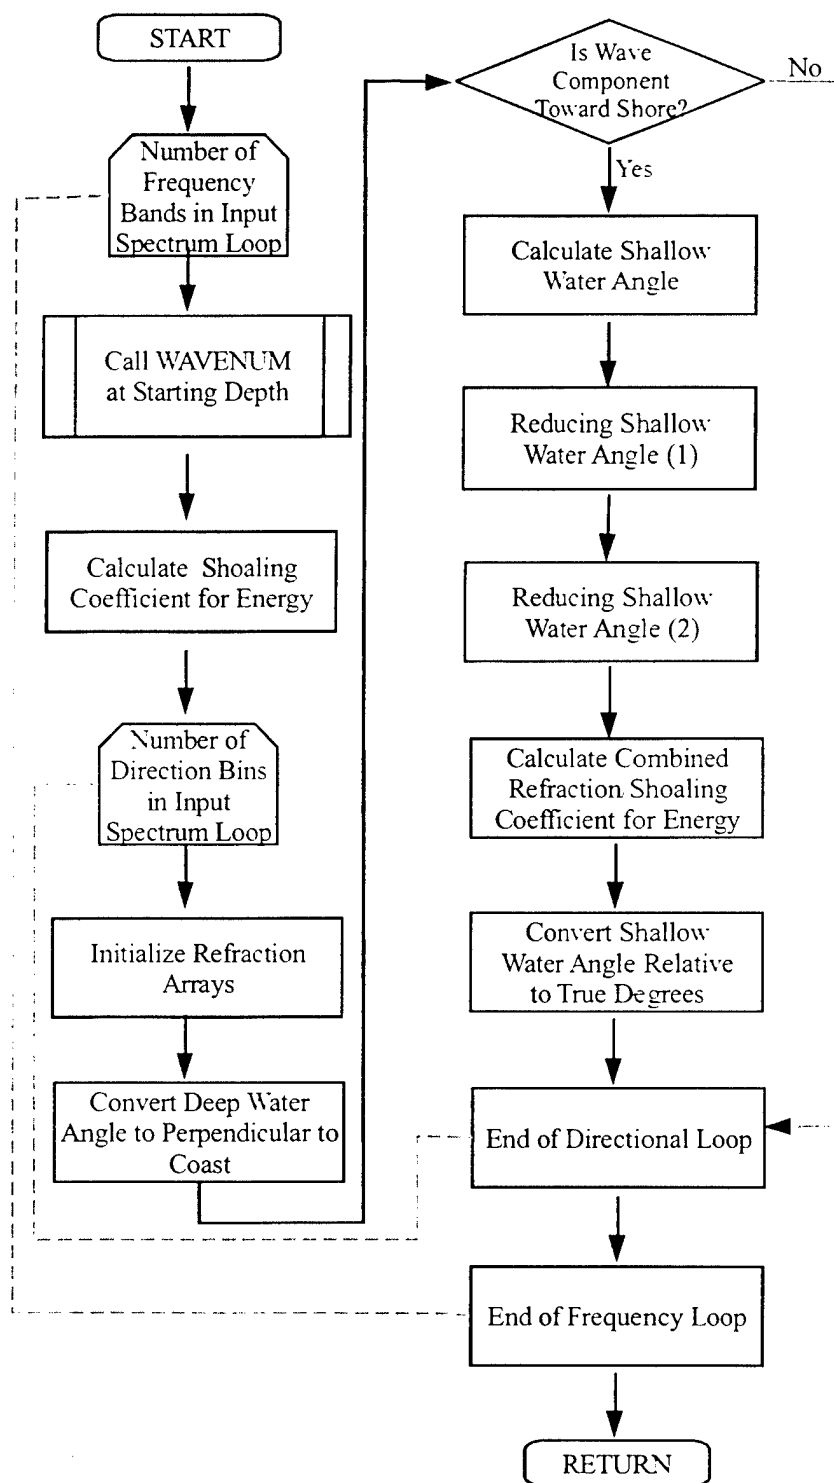

## 5.63 Subroutine SUMMARY

### Subroutine Call:

SUMMARY (dstart, tide, wspd, wdir, xdelt, yrefrac, ystr, depname, file\_out, fracname, lndname, ydepth, ydetail, gamma2, slope, hsea, psea, dsea, hswell, pswell, dswell, spectra, spefile)

### Summary:

Subroutine SUMMARY summarizes the input information read to the output file for documentation and forecaster verification.

### Input Variables:

depname	Char*40	Depth Profile File Name
dsea	Real	Input Direction for Sea Contribution
dstart	Real	Input Starting Depth
dswell	Real	Input Swell Direction for Internally Generated Spectrum
file_out	Char*40	Output File Name *.out
fracname	Char*40	Wave Refraction File Name
gamma2	Real	Beach Orientation, Compass Heading Directly Toward Beach
hsea	Real	Input Significant Wave Height for Sea Contribution to Internally Generated Spectrum
hswell	Real	Input Significant Wave Height to Internally Generated Spectrum
lndname	Char*40	Input Landing Zone Name
psea	Real	Input Wave Period for Sea Contribution to Internally Generated Spectrum
pswell	Real	Input Swell Period for Internally Generated Spectrum
slope	Real	Bottom Slope for a Constructed Depth Profile
spectra	Logical	Does Input Spectrum Exist? (True or False)
spefile	Char*40	Selected Wave Spectrum File Name
tide	Real	Input Tide Level
wdir	Real	Input Wind Direction Compass Heading Wind Blows From
wspd	Real	Input Wind Speed
xdelt	Real	Surf Zone Output Interval
ydepth	Char*1	Input Depth Profile Used? (Yes or No)
ydetail	Char*1	Detailed Output? (Yes or No)
yrefrac	Char*1	Is Refraction Considered in Analysis? (Yes or No)
ystr	Char*1	Is Straight Coast Refraction Used? (Yes or No)

**Output Variables:**               None.

**Local Variables:**


sediment	Char*40	Sediment Type
----------	---------	---------------

**Subroutines Called from SUMMARY ():**       None.

**SUMMARY () Called from Subroutines:**

SURF

**Figure 64. Subroutine SUMMARY Flowchart**

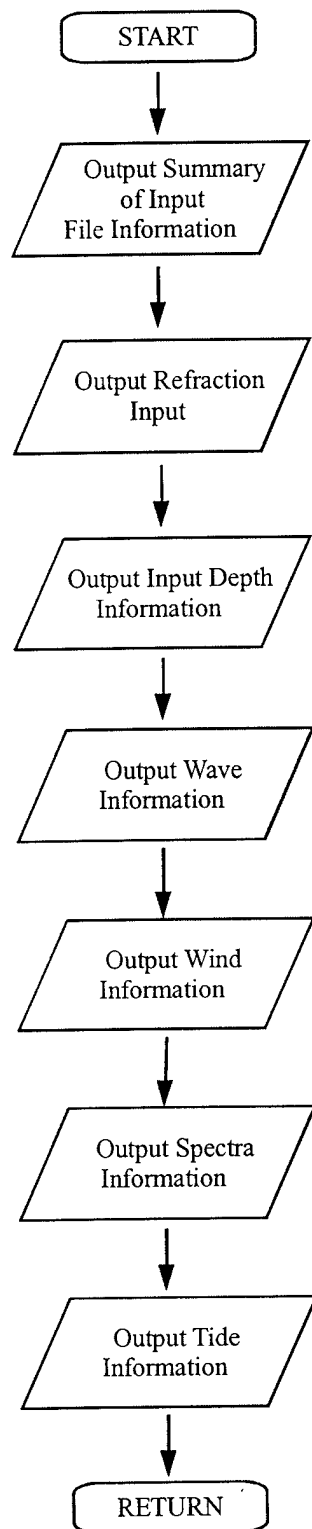



## 5.64 Subroutine SURFCAST

### Subroutine Call:

SURFCAST (pct, depname, lndname, slope, ydepth, alfa, bravo, chrlye, echo, foxtrt, golf1, golf2, ihtl1, ihtl2)

### Summary:

Subroutine SURFCAST reads input variables and provides a short format summary of Navy specified parameters. The subroutine also examines longshore current direction and selects the dominant breaker type.

### Input Variables:

alfa	Real	Significant Breaker Height
bravo	Real	Maximum Breaker Height
chrlye	Real	Dominant Breaker Period
depname	Char*40	Depth Profile File Name
echo	Real	Breaker Angle
foxtrt	Real	Longshore Current Speed and Direction
golf1	Real	Number of Surf Lines
golf2	Real	Surf Zone Width
ihtl1	Real	Wind Speed Coded Surf Forecast Value
ihtl2	Real	Wind Direction
lndname	Char*40	Input Landing Zone Name
pct (4)	Real	Percent of Different Breaker Types: pct (1) = Spilling pct (2) = Plunging pct (3) = Surging pct (4) = Total
slope	Real	Bottom Slope
ydepth	Char*1	Input Depth Profile Used? (Yes or No)

**Output Variables:** None.

### Local Variables:

foxtmp	Real	Longshore Current Where the Sign Indicates the Direction
i	Integer	Loop Counter Variable
jdelt	Integer	Difference If Any Between 100% and Sum of jp (4)
jp (4)	Integer	Temporary Variable Same as pct(4) Array


jsum	Integer	Check for Percentages Adding to 100%
maxp	Integer	Indicates Dominant Breaker Type
xmax	Real	Temporary Variable Used in Dominant Breaker Type Examination

**Subroutines Called from SURFCAST ():** None.

**SURFCAST () Called from Subroutines:**

SURF

**Figure 65. Subroutine SURFCAST Flowchart**

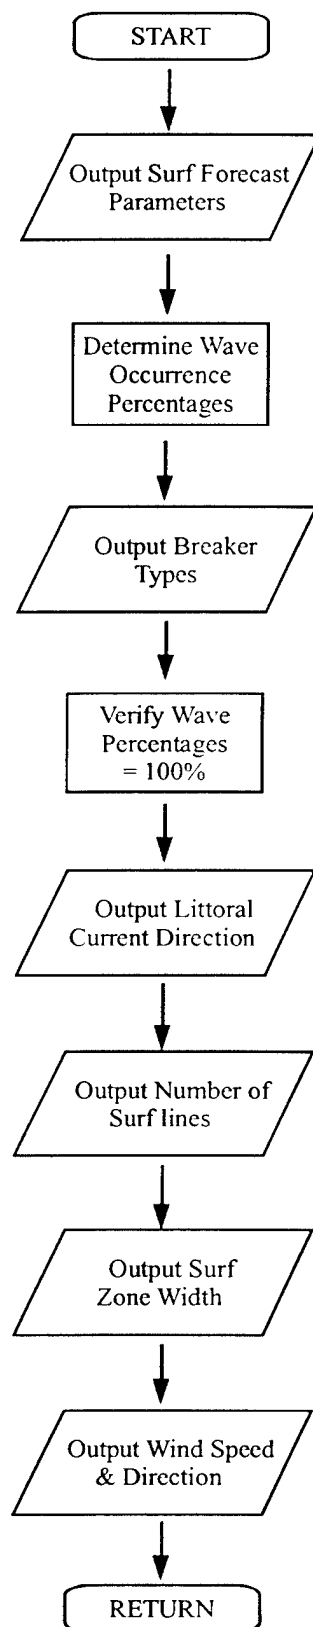

## 5.65 Subroutine SWLFIT

### Subroutine Call:

SWLFIT (hsig, per, dir, dangle, ifreq, idirec, period, esowm)

### Summary:

Subroutine SWLFIT superimposes remotely generated swell wave energy onto the existing directional wave spectrum. The existing wave spectrum may be zero or it may contain locally generated sea waves already added by the subroutine SEAFIT.

### Input Variables:

dangle	Real	Angle between Directional Bins
dir	Real	Input Swell Direction for Internally Generated Spectrum
hsig	Real	Significant Wave Height
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequency Bins in Input Spectrum
per	Real	Peak Period of Directional Wave Spectrum
period (freqNum)	Real	Period Array (1 / Frequency)

### Output Variables:

esowm (dirNum,freqNum)	Real	Directional Wave Spectrum
------------------------	------	---------------------------

### Local Variables:

d1	Real	Temporary Variable for Distributing Wave Energy
d2	Real	Temporary Variable for Distributing Wave Energy
d3	Real	Temporary Variable for Distributing Wave Energy
delt	Real	Temporary Variable for Distributing Wave Energy
diff	Real	Difference between Maximum Wave Period and Array Value of Wave Period
dmin	Real	Set to 1000.0
energy	Real	Swell Energy
ifrq	Integer	Frequency Loop Counter
jdir	Integer	Swell Direction


jdir1	Integer	Direction Bin Index Number
jdir3	Integer	Direction Bin Index Number
jfreq	Integer	Directional Wave Spectrum Wave Number
xdir	Real	Wave Direction

**Subroutines Called from SWLFIT ():** None.

**SWLFIT () Called from Subroutines:**

WAVEFIT

**Figure 66. Subroutine SWLFIT Flowchart**

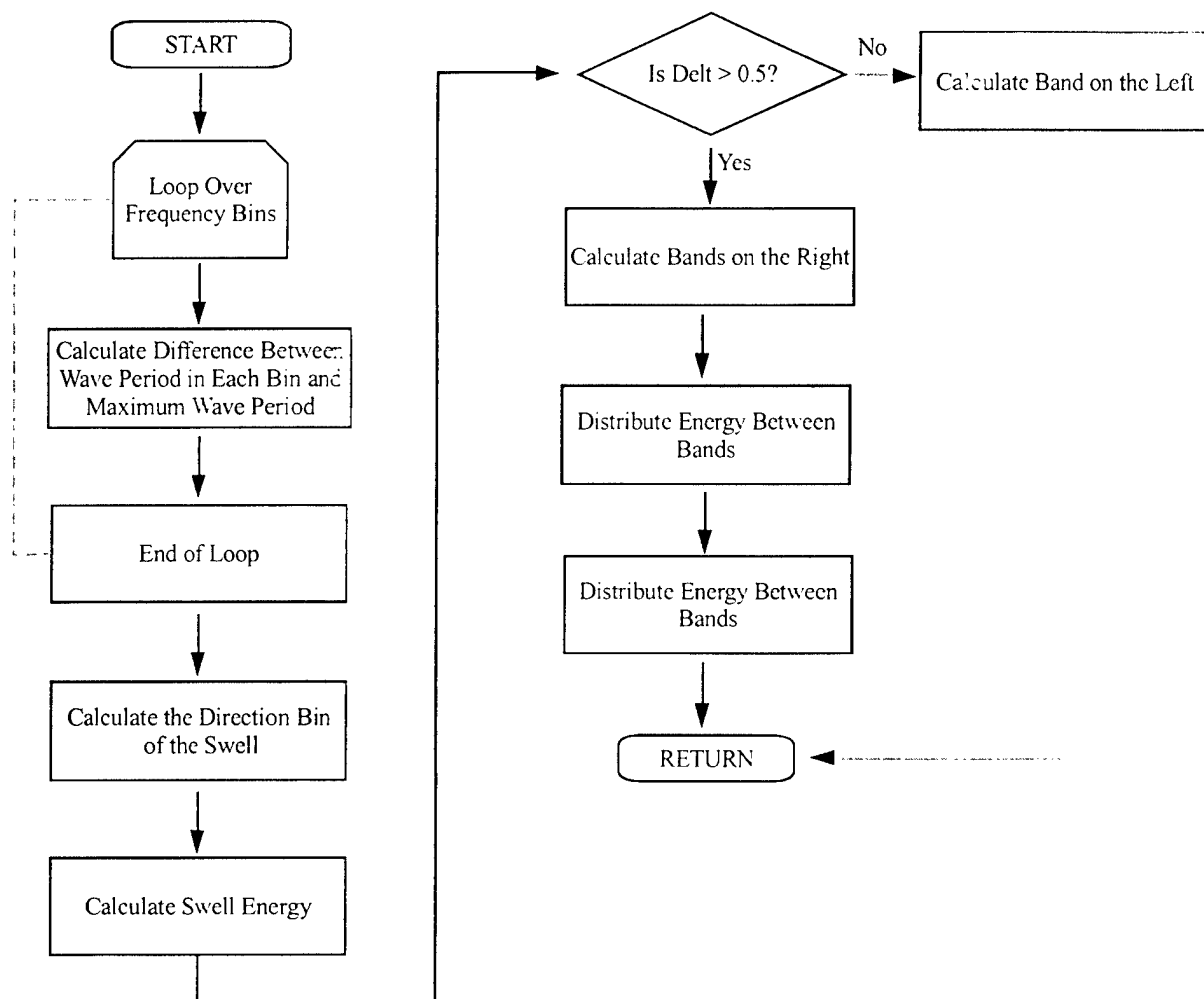

## 5.66 Subroutine WAVEFIT

### Subroutine Call:

WAVEFIT (ifreq, idirec, dangle, hsea, psea, dsea, hswell, pswell, dswell, freq1, freq2, xfrom, period, esowm, ehsig)

### Summary:

Subroutine WAVEFIT initializes the internally generated directional wave spectrum to zero and calls subroutines SEAFIT and SWLFIT to fill the matrix.

### Input Variables:

dangle	Real	Angle Between Directional Bins
dsea	Real	Input Direction for Sea Contribution to Internally Generated Wave Spectrum
dswell	Real	Input Swell Direction for Internally Generated Spectrum
freq1 (freqNum)	Real	Beginning Frequency Bin Value
freq2 (freqNum)	Real	Ending Frequency Bin Value
hsea	Real	Input Significant Wave Height for Sea Contribution to Internally Generated Wave Spectrum
hswell	Real	Input Significant Wave Height to Internally Generated Spectrum
idirec	Integer	Number of Direction Bins in Input Spectrum
ifreq	Integer	Number of Frequencies in Input Spectrum
period (freqNum)	Real	Period Array (1/Frequency)
psea	Real	Input Wave Period for Sea Contribution
pswell	Real	Input Swell Period for Internally Generated Spectrum
xfrom (dirNum)	Real	Direction Array, Direction Wave Energy Comes From

### Output Variables:

ehsig	Real	Significant Wave Height from Directional Spectrum
esowm (dirNum,freqNum)	Real	Directional Wave Spectrum

**Local Variables:**

idir	Integer	Direction Loop Counter
ifrq	Integer	Frequency Loop Counter


**Subroutines Called from WAVEFIT ():**

GT\_SIG\_H  
SEAFIT  
SWLFIT

**WAVEFIT () Called from Subroutines:**

GENSPEC

**Figure 67. Subroutine WAVEFIT Flowchart**

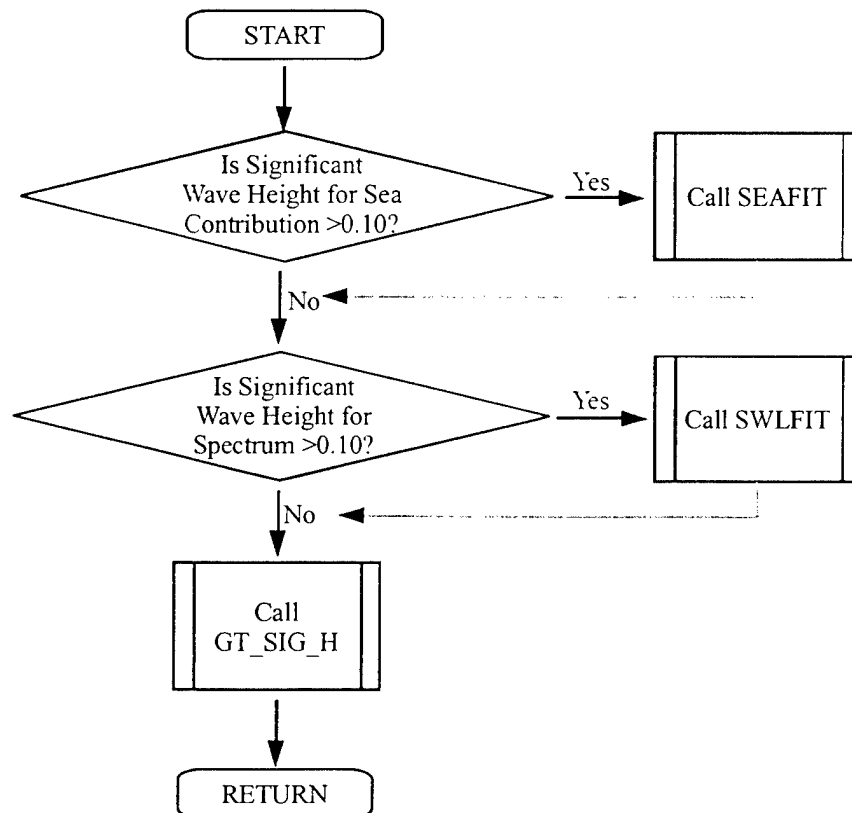

## 5.67 Subroutine WAVENUM

### Subroutine Call:

WAVENUM (fq, dp, xk)

### Summary:

The wave dispersion equation is solved for the wave number through numerical iteration. A relative change of less than .0005 is required and the maximum number of iterations is 150. If convergence is not obtained within 150 iterations, a shallow water approximation is employed.

### Input Variables:

dp	Real	Offshore Water Depth
fq	Real	Frequency either Wave or Peak

### Output Variables:

xk	Real	Wave Number
----	------	-------------

### Local Variables:

const	Real	Shallow Water Criteria Constant
diff	Real	Percent Difference between Wave Number Estimates
est	Real	Estimate of Wave Number
I	Integer	Loop Counter
it	Integer	Loop Limit - Set to 150


**Subroutines Called from WAVENUM ():** None.

**WAVENUM () Called from Subroutines:**

INITLIZE  
PT2  
RAD\_ST1  
RAD\_ST2  
SETUP  
STRFRAC



**Figure 68. Subroutine WAVENUM Flowchart**

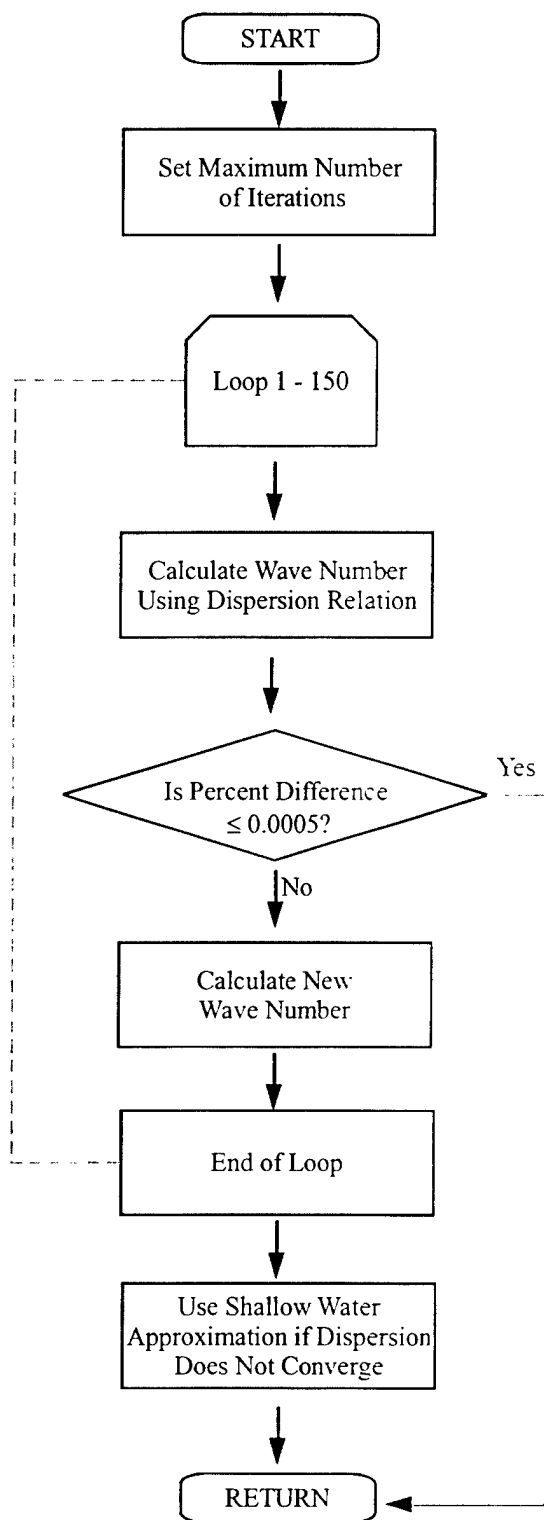

## 5.68 Subroutine WEIGHTFN

### Subroutine Call:

WEIGHTFN (dp, hrms, h, w\_h)

### Summary:

Subroutine WEIGHTFN calculates the weighting function used to describe the distribution of breaking waves across the surf zone.

### Input Variables:

dp	Real	Offshore Water Depth
h	Real	Wave Height
hrms	Real	Root Mean Square Wave Height

### Output Variables:

w_h	Real	Output Weighting Function
-----	------	---------------------------

### Local Variables:

m	Real	Multiplier
temp	Real	Weighting Function
tol	Real	Set to -700.00


### Subroutines Called from WEIGHTFN ():

GET\_M

### WEIGHTFN () Called from Subroutines:

F2

**Figure 69. Subroutine WEIGHTFN Flowchart**

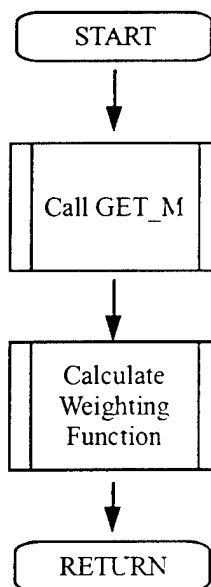

## 5.69 Subroutine ZONE1

### Subroutine Call:

ZONE1 (j\_ii, iimax, dxy, xtemp, htemp, ptemp, xktemp, v, distmax, vmax, vmin, suml, width, j, k, h1max, h2max, wid\_ii)

### Summary:

Subroutine ZONE1 calculates the preliminary surf forecast values and surf zone parameters.

### Input Variables:

distmax	Real	Farthest Distance Offshore
dxy (points)	Real	Pre-Tidal Depth or Still Water Level
htemp (points)	Real	Temporary Variable for Significant Wave Height Values
iimax	Integer	Number of Calculation Locations
j_ii	Integer	Index where Wave Probabilities Exceed Threshold
ptemp (points)	Real	Percentage of Breaking Waves and Breaker Types
v (points)	Real	Longshore Current
xktemp (points)	Real	Temporary Variable for Wave Number
xtemp (points)	Real	Temporary Variable for Cross-Shore Values

### Output Variables:

h1max	Real	Maximum Significant Wave Height
h2max	Real	Maximum Wave Height
j	Integer	Array Index Where Maximum Significant Wave Height Occurs
k	Integer	Temporary Variable Number of Points in Cross-Shore Transect
suml	Real	Summation of Wave Lengths Across the Surf Zone
vmax	Real	Maximum Positive Longshore Current Velocity
vmin	Real	Maximum Negative Longshore Current Velocity
wid_ii	Integer	Array Index for X-value at Surf Zone Boundary
width	Real	Surf Zone Width

**Local Variables:**


dp1	Real	Offshore Depth in Feet
hdep	Real	Limiting Breaking Depth
hmax	Real	Temporary Variable for Maximum Wave Height
hout1	Real	Temporary Variable for Significant Wave Height
hrms1	Real	Root Mean Square Wave Height
ii	Integer	Loop Index
ving1	Real	Longshore Current Velocity in Knots
wlen	Real	Wave Length
xoff1	Real	Distance Offshore

**Subroutines Called from ZONE1 ():** None.

**ZONE1 () Called from Subroutines:**

CALCSURF

Figure 70. Subroutine ZONE1 Flowchart

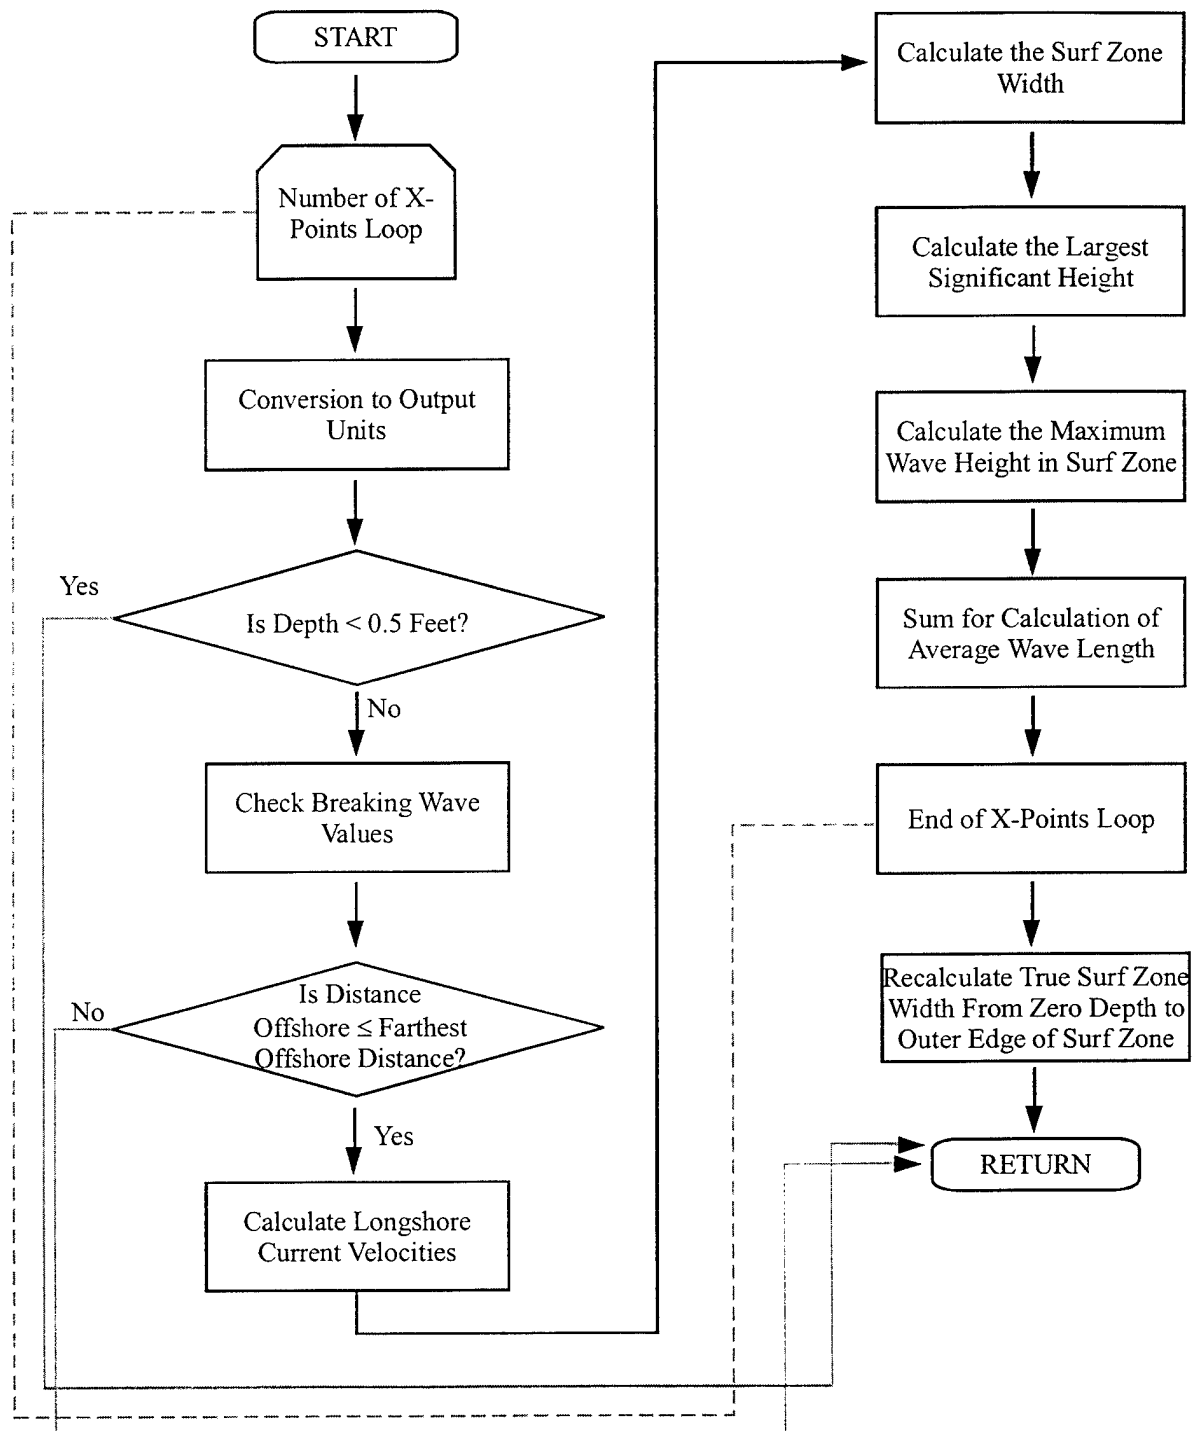

## 5.70 Function CUBPOLY

### Function Call:

CUBPOLY (xavg, xi, c, n)

### Summary:

Function CUBPOLY evaluates the cubic polynomial that was previously fit through a defined set of x and y coordinates. The evaluated cubic polynomial function interpolates a new y value for an input x value.

### Input Variables:

c (4,dirNum)	Real	Cubic Polynomial Coefficient
n	Integer	Number of X-Coordinates
xavg	Real	Interpolated Coordinate
xi (dirNum)	Real	Array of X-Coordinate

### Output Variables:

CUBPOLY	Real	Value at the Interpolated Coordinate
---------	------	--------------------------------------

### Local Variables:


dx	Real	Temporary Variable
I	Integer	Loop Counter
j	Integer	Loop Counter

**Subroutines Called from CUBPOLY ():** None.

**CUBPOLY () Called from Subroutines:**

GENRLSPL

**Figure 71. Function CUBPOLY Flowchart**

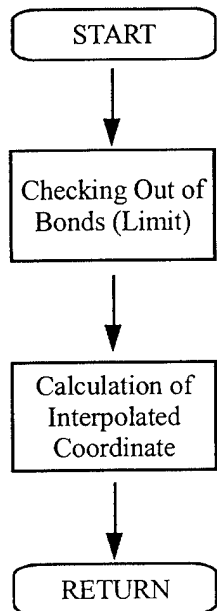



## 5.71 Function F2

### Function Call:

F2 (h, hrms, dp, p\_flag)

### Summary:

Function F2 evaluates the Rayleigh probability distribution function for a given wave height value, for a selected weighting function.

### Input Variables:

dp	Real	Offshore Water Depth
h	Real	Wave Height
hrms	Real	Root Mean Square Wave Height
p_flag	Logical	Weighting Factor Flag (True or False)

### Output Variables:

f2	Real	Weighted Rayleigh Distribution
----	------	--------------------------------

### Local Variables:

p_h	Real	Rayleigh Probability Distribution
temp	Real	Exponent Term in Rayleigh Distribution
tol	Real	Tolerance Value Set to -700.0
w_h	Real	Weighting Function


### Subroutines Called from F2 ( ):

WEIGHTFN

### F2 ( ) Called from Functions:

INTEGRAT

Figure 72. Function F2 Flowchart

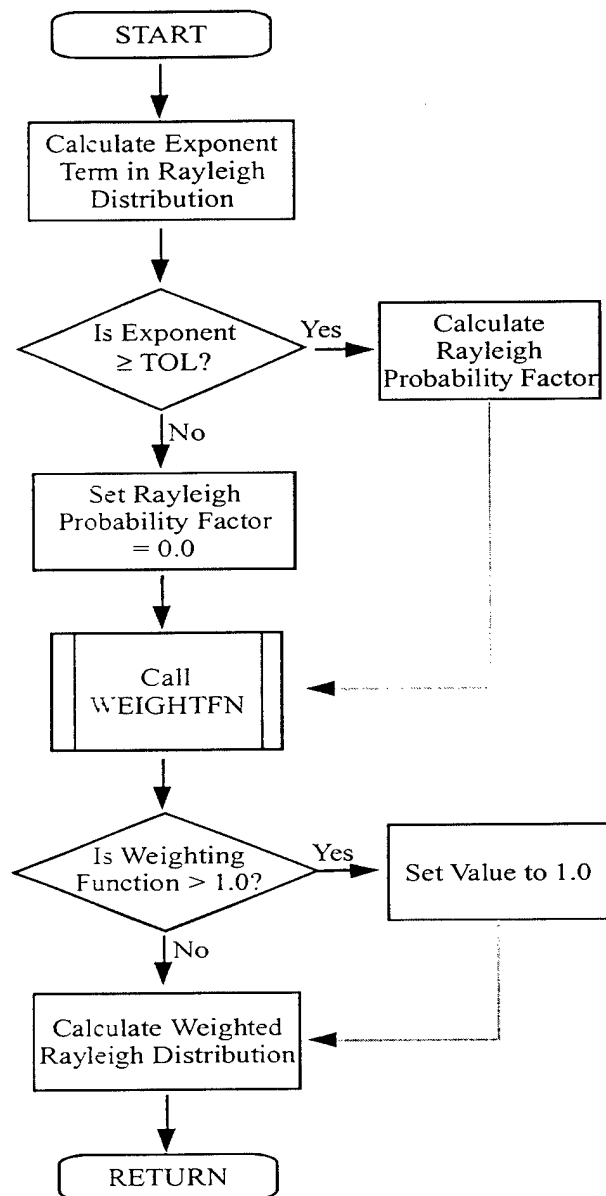

## 5.72 Function F3

### Function Call:

F3 (hrms, theta, Cg, dp, mean\_freq, xk, roller)

### Summary:

Function F3 returns values for the LHS of the energy equation.

### Input Variables:

Cg	Real	Wave Group Velocity
dp	Real	Offshore Water Depth
hrms	Real	Root Mean Square Wave Height
mean_freq	Real	Directional Spectrum Value
roller	Logical	Roller Option Flag (True or False)
theta	Real	Wave Angle
xk	Real	Wave Number

### Output Variables:

f3	Real	Total Energy
----	------	--------------

### Local Variables:

e_roller	Real	Roller Contribution to the Energy Equation
e_wave	Real	Wave Contribution to the Energy Equation


### Subroutines Called from F3 ( ):

CALCROLL  
GET\_WAVE

### F3 ( ) Called from Subroutines:

BALANCEQ

**Figure 73. Function F3 Flowchart**

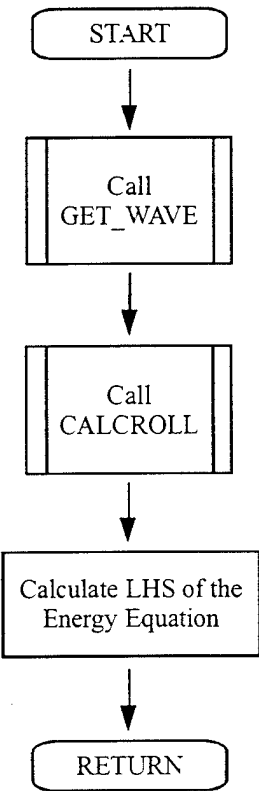

**5.73    Function FCN1**

**Function Call:**

FCN1 (t, h, per, l, dp, v, u, theta2)

**Summary:**

Function FCN1 calculates the nonlinear bottom stress term at a particular time. This calculation ultimately provides the bottom friction for the longshore current calculation after time-averaging over one wave period.

**Input Variables:**

dp	Real	Offshore Water Depth
h	Real	Wave Height
l	Real	Wave Length
per	Real	Peak Period of Directional Wave Spectrum
t	Real	Wave Period
theta2	Real	Wave Angle
u	Real	Mean Cross-Shore Current Velocity
v	Real	Longshore Current Velocity

**Output Variables:**

fcn1	Real	Nonlinear Bottom Friction at a Specific Time
------	------	--

**Local Variables:**

d2	Real	Temporary Variable Used in Calculation
uw	Real	Orbital Velocity at Specific Time
um	Real	Orbital Velocity
w	Real	Angular Frequency


**Subroutines Called from FCN1 ():**

GET\_UM

**FCN1 () Called from Subroutines:**

GET\_FCN

**Figure 74. Function FCN1 Flowchart**

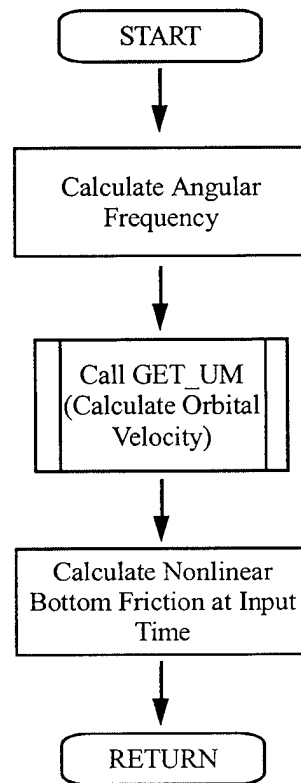

## 5.74 Function INTEGRAT

### Function Call:

INTEGRAT (xo, xn, hrms, dp, p\_flag)

### Summary:

Function INTEGRAT evaluates an integral numerically using the trapezoidal rule. Function {F2} is called to evaluate the integral at upper and lower limits. The function applies the trapezoidal integration method to estimate the wave height at a particular depth from a weighted distribution.

### Input Variables:

dp	Real	Farthest Offshore Water Depth
hrms	Real	Root Mean Square Wave Height
p_flag	Logical	Weighting Factor Flag (True or False)
xn	Real	Upper Limit of Integration = 5 * hrms
xo	Real	Lower Limit of Integration = 0.0

### Output Variables:

integrat	Real	Wave Height Distribution Calculated for a Specific Location
----------	------	---

### Local Variables:

delt	Real	Step Between Intervals
f_xn	Real	f(x) Evaluated at Upper Limit
f_xo	Real	f(x) Evaluated at Lower Limit
f2	Real	Wave Height Distribution
		Weighting Function
i	Integer	Loop Variable
numit	Integer	Set to 100 - Number of Iterations Examined Over Integral
sum	Real	Summary Results from Function F2
xi	Real	Integration Step Location


### Functions Called from INTEGRAT ():

F2

**INTEGRAT ( ) Called from Subroutines:**

CALC\_HB3  
PERCENT

**Figure 75. Function INTEGRAT Flowchart**

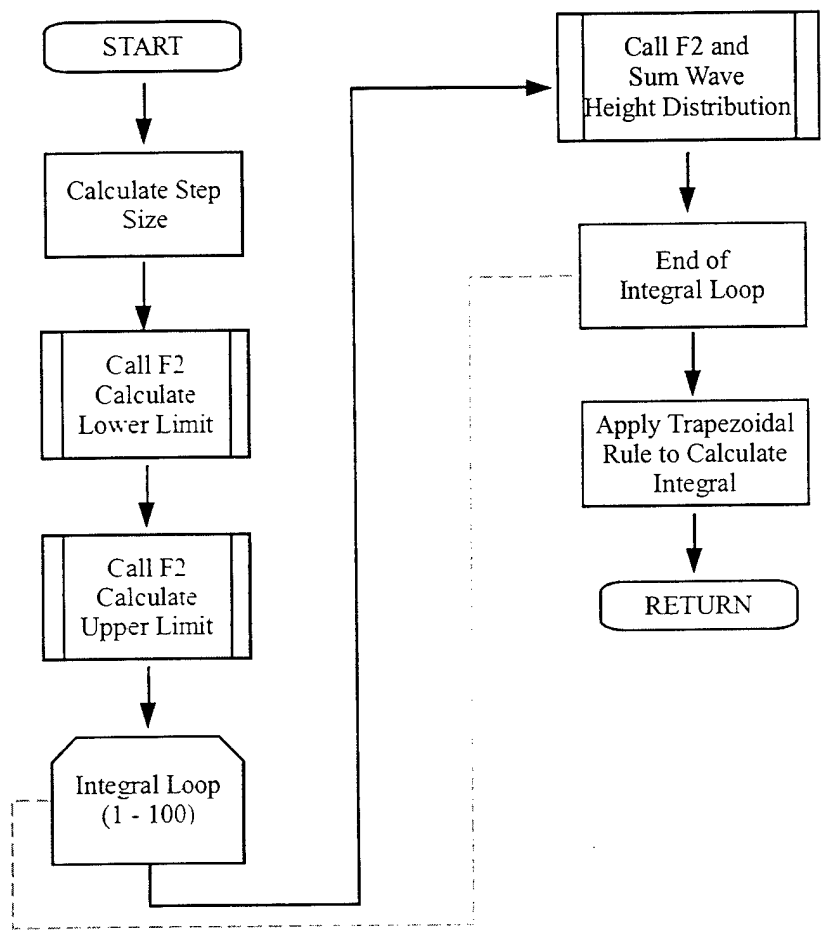



## 5.75 Include File: COMMON.INC

### Summary:

The include file COMMON.INC contains all the parameters set for the SURF Model.

### Defined Parameters:

dcal	Real	0.3048 - Feet to Meters Conversion
degrad	Real	PI / 180.0 - Conversion from Degrees to Radians
dirNum	Integer	180 - Array Dimension Used for Direction Arrays
freqNum	Integer	50 - Array Dimension Used for Frequency Arrays
g	Real	9.8
gamma	Real	0.42 - Empirical Wave Height Factor
iunit	Integer	Output File Unit
pi	Real	3.14159265
points	Integer	500 - Array Dimension Used for all Input Depth Arrays
raddeg	Real	180.0 / pi - Conversion from Radians to Degrees
rho	Integer	1030 - Water Density
rhoair	Real	1.2 - Air Density
sigma	Real	sigma_deg * degrad
sigma-deg	Real	5.0 - Angle in Degrees between Wave and Roller in the Thornton/Lippman Model (1996)
tpi	Real	2 * 3.14159265
zone_pct	Real	10% Surf Zone Width Percent of Breaking Waves

## 6.0 NOTES

### 6.1 SURF 3.1 Input Files

#### 6.1.1 SURF 3.1 Input File

Line	Description	Type	Units	Range
Line 1	Input File Name	Char*40	----	----
Line 2	Date and Time (YYYYMMDDHH)	Char*10	----	----
Line 3	Landing Zone Name	Char*40	----	----
Line 4	Input Depth Profile File Name	Char*40	*.*	----
Line 5	Input Wave Spectrum File Name	Char*40	*.*	----
Line 6	Input Wave Refraction File Name	Char*40	*.*	----
Line 7	Compass Heading Toward Beach	Real	Degrees	0-359
Line 8	Slope/Sediment Type	Integer	----	1-10
	1 = Boulders	6 = Coarse Sand		
	2 = Cobble	7 = Medium Sand		
	3 = Pebbles	8 = Fine Sand		
	4 = Granules	9 = Very Fine Sand		
	5 = Very Coarse Sand	10 = Silt		
Line 9	Starting Depth	Real	Feet	> 0
Line 10	Offshore Wave Spectrum Depth	Real	Feet	> 0
Line 11	Sea Wave Height	Real	Feet	> 0
	Sea Wave Period	Real	Seconds	1 - 30
	Sea Wave Direction	Real	Degrees	0 - 359
	Swell Wave Height	Real	Feet	> 0
	Swell Wave Period	Real	Seconds	1 - 30
	Swell Wave Direction	Real	Degrees	0 - 359
Line 12	Wind Speed	Real	Knots	> 0
	Wind Direction	Real	Degrees	0 - 359
	Tide Elevation	Real	Feet	+ or -
Line 13	Output Data Grid Spacing	Real	Feet	> 0

\* The input file name (line 1) must always be included.

\*\* If any of the above input data is not included or not available, insert a blank or a blank line for character and/or numeric data to maintain a consistent format in the input file.

\*\*\* The above format is for the default model setup, for more detailed information read the advanced user options information in section 6.1.5.

### 6.1.2 SURF 3.1 Input Depth Profile File

Line	Description	Type	Range
Line 1	Title	Char*80	-----
Line 2	Units for Distance Offshore 1 - Distances in Feet 2 - Distances in Meters 3 - Distances in Yards	Integer	1,2,or 3
Line 3	Units for Depth 1 - Depths in Feet 2 - Depths in Meters 3 - Depths in Fathoms	Integer	1,2,or 3
Line 4 - EOF	Point Number	Integer	1 - 500
	Distance	Real	+ or -
	(+) Positive numbers are Offshore (-) Negative numbers are Onshore		
	Depth	Real	+ or -
	(+) Positive numbers are Depths (-) Negative numbers are Elevations		

### 6.1.3 SURF 3.1 Wave Refraction File

Line	Description	Type	Units	Range
Line 1	Longitude	Real	Degrees	-180.0 - +180.0
Line 2	Latitude	Real	Degrees	-90.0 - +90.0
Line 3	Date (YYYYDDMM)	Real	----	----
Line 4	Number of Angles	Integer	----	1 - 180
Line 5	Number of Rows	Integer	----	+ number
	Number of Columns	Integer	----	+ number
Line 6	Number of Frequency Bins	Integer	----	1 - 50
Line 7	Initial Direction	Real	Degrees	0. - 359.
Line 8	Initial Frequency Bin	Real	Degrees	0. - 359.
Line 9	Width of Direction Bin	Real	Degrees	2. - 180.
Line 10	Direction of Waves	Integer	----	1 or 2
	1 - Direction waves are coming from			
	2 - Direction waves are going to			

#### *Angle Refraction Coefficients - This section is repeated for each Frequency Bin*

Line	Bin Number	Integer	----	1 - 50
	Lower Limit of Frequency Bin	Real	Hertz	> = 0.
	Center of Frequency Bin	Real	Hertz	> = 0.
	Upper Limit of Frequency Bin	Real	Hertz	> = 0.
Line	Angle Refraction Coefficients	Real	Degrees	0. - 359.
	The coefficients are in the format: (Number of Rows by Number of Columns).			
	All rows and columns must contain numbers; pad with zeros, if necessary.			

#### *End of Angle Refraction Coefficients Section*

Line	Header 1 for Shoaling Coefficients	Char*80	----	----
Line	Header 2 for Shoaling Coefficients	Char*80	----	----
Line	Header 3 for Shoaling Coefficients	Char*80	----	----

#### *Shoaling Coefficients - This section is repeated for each Frequency Bin*

Line	Bin Number	Integer	----	1 - 50
	Lower Limit of Frequency Bin	Real	Hertz	> = 0.
	Center of Frequency Bin	Real	Hertz	> = 0.
	Upper Limit of Frequency Bin	Real	Hertz	> = 0.
Line	Shoaling Coefficients	Real	(N/m) <sup>2</sup>	
	The coefficients are in the format: (Number of Rows by Number of Columns).			
	All rows and columns must contain numbers; pad with zeros, if necessary			

#### *End of Shoaling Coefficients Section*

\* The coefficients in this file must be defined over the entire 0 to 360 degree range. A partial sector definition (e.g. 0 to 180 degrees) will cause errors. If the input data is not available over the entire range, pad the direction bins with zeros.

#### 6.1.4 SURF 3.1 Spectrum File

Line	Description	Type	Units	Range
Line 1	Longitude	Real	Degrees	-180.0 - +180.0
Line 2	Latitude	Real	Degrees	-90.0 - +90.0
Line 3	Date - (YYYYMMDD)	Real	----	----
Line 4	Number of Angles	Integer	----	1 - 180
Line 5	Number of Rows	Integer	----	+ number
	Number of Columns	Integer	----	+ number
Line 6	Number of Frequency Bins	Integer	----	1 - 50
Line 7	Initial Direction	Real	Degrees	0. - 359.
Line 8	Initial Frequency Bin	Real	Hertz	> = 0.
Line 9	Width of Direction Bin	Real	Degrees	2. - 180.
Line 10	Direction of Waves	Integer	----	1 or 2
	1 - Direction waves are coming from			
	2 - Direction waves are going to			

#### *Directional Wave Spectrum - This section is repeated for each Frequency Bin*

Line	Bin Number	Integer	----	1 - 50
	Lower Limit of Frequency Bin	Real	Hertz	> = 0
	Center of Frequency Bin	Real	Hertz	> = 0
	Upper Limit of Frequency Bin	Real	Hertz	> = 0
Line	Directional Wave Spectrum	Real	>	> = 0

$$\left( \frac{m^2}{Hz * Radians} \right)$$

The Number of Angles are in the format:

(Number of Rows by Number of Columns)

All rows and columns must contain numbers; pad fields with zeros, if necessary.

#### *End of Directional Wave Spectrum Section*

\* The coefficients in this file must be defined over the entire 0 to 360 degree range. A partial sector definition (e.g. 0 to 180 degrees) will cause errors. If the input data is not available over the entire range, pad the direction bins with zeros.

### 6.1.5 Advanced SURF 3.1 Model Options

Several run-time model options included in Surf 3.1 are transparent to the user. These options are reserved for the advanced or expert user applying the model to unique situations. The default input settings described in section 6.5.1 are appropriate for most model runs. However, if necessary the user can control the wave refraction and the amount of output data including the production of an additional file with a shallow water wave spectrum after transformation due to shoaling and refraction. These options are not recommended for most users.

#### Wave Refraction Option

The default wave refraction setting uses linear wave theory and Snell=s Law to refract waves with a straight coast assumption. A coast is assumed straight if the bottom contours are straight and generally parallel with the coastline. Line 6 in the input file is used to specify an externally generated wave refraction file that includes refraction and shoaling coefficients. Programs such as REFDIF and STWAVE can be used to calculate these types of coefficients. If an expert user wants to ignore all refraction effects Line 6 must contain the word *none* or *NONE*. This option is not recommended for most users.

#### Self-Start Option

The model is typically configured to use the self-start option. This option expedites model execution by shoaling and refracting the offshore wave spectrum to the starting depth specified in Line 9 of the input file. The model then begins stepwise calculations from this point shoreward. There are two advanced user options associated with the starting depth. These options are selected by using a negative number or a zero in Line 9 of the input file.

If Line 9 of the input file contains a negative number the self-start option will not be used and

the data written to the output file will begin at the absolute value of the starting depth specified in Line 9. For example, if Line 9 in the input file is B15, then the self-start option will not be used and the columnar data in the output file will begin at a water depth of 15 feet. If Line 9 is a zero the self start option will not be used and calculations will begin at the farthest point offshore as defined in the input depth file or the constructed equilibrium depth profile.

### **Wave Spectrum Depth Option**

Line 10 of the input file is used to specify the water depth at the input directional wave spectrum. If this value is left blank or is defined as zero, the model will assume that the wave spectrum is located in deep water. If Line 10 of the input file is a negative number, an additional output file is created with the shallow water directional wave spectrum at the depth specified in Line 9, the starting depth. This wave spectrum has been shoaled and refracted to the starting depth.

The format of this ASCII text file is a simple matrix of rows and columns. It has the same name as the output file except that the file extension will be \*.dws. The first row contains the center frequency bin definitions and the first column defines the wave direction bins. The heart of the matrix is the wave energy per frequency and direction with the units  $\text{m}^2/\text{Hz} \cdot \text{radians}$ . This spectrum has the same units as the input directional wave spectrum so that direct comparisons can be made. This option is available for users interested in examining the transformation of the directional wave spectrum in shallow water.

### **Detailed Output Option**

The final advanced user option controls the amount of data in the output file. The default option will create an output file with the detailed output of columnar data of many wave parameters across the surf zone. The distance between each of these points is defined by Line 13 in the input file. If Line 13 is zero or a negative number, only the summary of the wave parameters in the coded surf

forecast will be reported in the output file excluding the detailed output.



## 6.2 SURF 3.1 Output Files

### 6.2.1 SURF 3.1 Detailed Output File

The SURF Detailed Output File has three output sections delineated by asterisks. The first section contains the input parameters and several variables describing the directional wave spectrum.

The second section is the coded surf forecast with variables specific to military surf observations. The final section is the detailed surf output, which is columnar data describing cross-shore distributions of several variables including wave height, water depth, wave breaking, and longshore current. The filename generated is "\*.out", where the "\*" is replaced with the prefix of the input file name.

Line	Description	Type	Units
Line 1	Surf Header	Character	-----
Line 2	Blank Line	Character	-----
Line 3	SURF Model Version	Character	-----
Line 4	Date and Time of Forecast	Character	-----
Line 5	Output File Name Information	Character	-----
Line 6	Straight Coast Wave Refraction Option	Character	-----
Line 7	Landing Zone Name	Character	-----
Line 8	Sight Line Toward Beach	Real	Degrees
Line 9	Interval	Real	Feet
Line 10	Starting Depth	Real	Feet
Line 11	Depth Profile Name or Beach Sediment Type	Character	-----
Line 12	Spectrum Usage Text	Character	-----
	Or		
	Sea Wave Height	Real	Feet
	Sea Period	Real	Seconds
	Sea Direction	Real	Degrees
Line 13	Spectrum File Name	Character	-----
	Or		
	Swell Wave Height	Real	Feet
	Swell Period	Real	Seconds
	Swell Direction	Real	Degrees
Line 14	Wind Speed	Real	Knots
Line 15	Wind Direction	Real	Degrees
Line 16	Tide Level	Real	Feet
Line 17	Blank Line	Character	-----

Line	Description	Type	Units
Line 18	Internal Grid Spacing	Real	Feet
Line 19	Significant Wave Height from Input File	Real	Feet
Line 20	Significant Wave Height from Straight Coast	Real	Feet
Line 21	Input Spectrum Type	Integer	----
Line 22	Significant Wave Height Offshore	Real	Feet
Line 23	Significant Wave Height	Real	Feet
Line 24	Peak Frequency	Real	Hertz
Line 25	Zero-Crossing Frequency	Real	Hertz
Line 26	Peak Period	Real	Seconds
Line 27	Percentage Breaking Waves at Starting Depth	Real	Percent
Line 28	Self Starting Option	Character	----
Line 29	Blank Line	Character	----
Line 30	Text Heading - Surf Forecast	Character	----
Line 31	Significant Breaker Height	Real	Feet
Line 32	Maximum Breaker Height	Real	Feet
Line 33	Dominant Breaker Period	Real	Seconds
Line 34	Dominant Breaker Type	Character	----
Line 35	Breaker Percentages	Character	Percent
Line 36	Breaker Angle	Real	Degrees
Line 37	Littoral Current	Real	Knots
Line 38	Number of Surf Lines	Real	----
Line 39	Surf Zone Width	Real	Feet
Line 40	Wind Speed	Real	Knots
Line 41	Wind Direction	Real	Degrees
Line 42	Blank Line	Character	----
Line 43	Modified Surf Index	Real	----
Line 44	Blank Line	Character	----
Line 45	Text Heading - Detailed Surf Output	Character	----
Line 46	Blank Line	Character	----
Line 47	Text Heading Line	Character	----
Line 48	Text Heading Line	Character	----
Line 49	Text Heading Line - Units	Character	----
Line 50	Blank Line	Character	----
Line 51 -EOF	Index Number	Integer	----
	Distance Offshore	Real	Feet
	Water Depth	Real	Feet
	Significant Breaker Height	Real	Feet
	Maximum Breaker Height	Real	Feet
	Percent Breaking Waves	Real	Percent
	Wave Length	Real	Feet
	Littoral Current	Real	Knots

### 6.2.2 SURF 3.1 Summary Output File

The SURF Summary Output File is in the same format as the Detailed Surf Output file in the preceding section without the Detailed output at the end of the file. The filename generated is "\*.out", where the "\*" is replaced with the prefix of the input file name.

Line	Description	Type	Units
Line 1	Surf Header	Character	----
Line 2	Blank Line	Character	----
Line 3	SURF Model Version	Character	----
Line 4	Date and Time of Forecast	Character	----
Line 5	Output File Name Information	Character	----
Line 6	Straight Coast Wave Refraction Option	Character	----
Line 7	Landing Zone Name	Character	----
Line 8	Sight Line	Real	Degrees
Line 9	Interval	Real	Feet
Line 10	Starting Depth	Real	Feet
Line 11	Depth Profile Name or Beach Slope	Character	----
Line 12	Spectrum Usage Text	Character	----
	Or		
	Sea Wave Height	Real	Feet
	Sea Period	Real	Seconds
	Sea Direction	Real	Degrees
Line 13	Spectrum File Name	Character	----
	Or		
	Swell Wave Height	Real	Feet
	Swell Period	Real	Seconds
	Swell Direction	Real	Degrees
Line 14	Wind Speed	Real	Knots
Line 15	Wind Direction	Real	Degrees
Line 16	Tide Level	Real	Feet
Line 17	Blank Line	Character	----
Line 18	Internal Grid Spacing	Real	Feet
Line 19	Significant Wave Height from Input File	Real	Feet
Line 20	Significant Wave Height from Straight Coast	Real	Feet
Line 21	Input Spectrum Type	Integer	----
Line 22	Significant Wave Height Offshore	Real	Feet
Line 23	Stress Significant Wave Height	Real	Feet
Line 24	Stress Peak Frequency	Real	Hertz
Line 25	Stress Zero-Crossing Frequency	Real	Hertz
Line 26	Stress Peak Period	Real	Seconds

Line	Description	Type	Units
Line 27	Percentage Breaking Waves at Starting Depth	Real	Percent
Line 28	Self Starting Option	Character	-----
Line 29	Blank Line	Character	-----
Line 30	Text Heading - Surf Forecast	Character	-----
Line 31	Significant Breaker Height	Real	Feet
Line 32	Maximum Breaker Height	Real	Feet
Line 33	Dominant Breaker Period	Real	Seconds
Line 34	Dominant Breaker Type	Character	-----
Line 35	Breaker Percentages	Character	Percent
Line 36	Breaker Angle	Real	Degrees
Line 37	Littoral Current	Real	Knots
Line 38	Number of Surf Lines	Real	-----
Line 39	Surf Zone Width	Real	Feet
Line 40	Wind Speed	Real	Knots
Line 41	Wind Direction	Real	Degrees
Line 42	Blank Line	Character	-----
Line 43	Modified Surf Index	Real	-----

### 6.2.3 SURF 3.1 Data Only Output File

The data only output file contains columnar data most often used for plotting purposes. This file was created to ease the I/O reading for visual representation of the values. This matrix of values represents the cross-shore distributions of the variables defined in each column. The filename generated is "\*.dat", where the "\*" is replaced with the prefix of the input file name.

Line	Description	Type	Units
Line 1 - EOF	Index Number	Integer	----
	Distance Offshore	Real	Feet
	Water Depth	Real	Feet
	Significant Breaker Height	Real	Feet
	Maximum Breaker Height	Real	Feet
	Percent Breaking Waves	Real	Percent
	Wave Length	Real	Feet
	Littoral Current	Real	Knots

#### 6.2.4 SURF 3.1 Shallow Water Directional Wave Spectrum

The file is only created when Line 10 of the Surf input file contains a negative number. The format of this ASCII text file is a simple matrix of rows and columns. This file has the same file name as the output file except that the file extension will be \*.dws. The first row contains the center frequency bin definitions and the first column defines the wave direction bins. The heart of the matrix is the spectral wave energy per frequency and direction with the units  $\text{m}^2/\text{Hz} \cdot \text{radians}$ . This spectrum has the same units as the input directional wave spectrum.

Line	Description	Type	Units	Range
Line 1	Frequency Bins	Real	Hertz	0 - 0.5
Line 2-EOF	Wave Direction, Wave Energy	Real	Degrees, $\text{m}^2/\text{Hz} \cdot \text{rad}$	0 - 359 0 - 999


### 6.3 Error Message Description

Error Message	Subroutine Generating Error	Suggested Solution to Resolve Error
Error 105 - All input depths are less than starting depth. Check inputs. Program stopped.	C_IN_DEP	Decrease the starting depth in the input file -line 9 or extend the depth input profile farther offshore.
Error 115 - Opening Directional Wave Spectrum File.	READSPEC	Check Wave Spectrum name in the input file- line 5. Verify the location of the spectrum file is the same as the input file.
Error 120 - Opening input file.	SRFSETUP	Check the name of the input file typed at the command prompt (Surf3.1 < InputFile) or the name typed during execution (Enter Input File Name).
Error 125 - Opening of Input Depth File.	C_IN_DEP	Check Depth Profile name in the input file - line 4. Verify the location of the depth file is the same as the input file.
Error 130 - Opening Refraction File.	READRFRC	Check Refraction name in the input file - line 6. Verify the location of the refraction file is the same as the input file.
Error 145 - Input depth profile has more data points than allowed. Check depth profile. Program stopped.	C_IN_DEP	The maximum number of depth points allowed is 500. Modify depth input file to contain only 500 depth values.
Error 150 - Large Internal grid spacing. Check depth profile.	DEPDRVR	Use the Self Start Option in the input file - line 9. Refer to the Self Start Option in Section 6.1.5.
Error 160 - No Convergence.	NONLIN2	Smooth the input depth profile.
Error 165 - No sediment type selected for Equilibrium Profile.	EQUILPRF	A Slope/Sediment Type was not set correctly in the input file line 8. The value must be inclusive of 1 - 10.
Error 170 - No Surf.	SURF	

		Check the heading toward the beach in the input file, line 7 and the Spectrum Input File. Also, there may just be no surf in the area.
Error 180 - Problem gridding to output file. Program stops.	PRT_OUT1 PRT_OUT2	Check that the input depth profile extends to the beach shoreline and that the tide level - line 12 is not too high.
Error 185 - Problem with wave height values.	NEW_BRK	Check the input depth profile. The data may need to be smoothed due to unusual slopes. (Hint: too many negative slopes.)
Error 195 - Significant wave height outside surf zone less than 0.5 ft - no further calculations.	S_NOSURF	Check the heading toward the beach in the input file - line 7.
Error 200 - Surf forecasts are for situations when waves are more important than winds. This is not the case for input waves and winds. Forecasts may not be valid.	S_COEFF	Check the input wave and wind conditions in the input file - line 11 and line 12.
Error 205 - Water edge not found. Check tide and/or depths. Program stopped.	S_TIDE	The input depth profile must extend to the beach including the addition of a tide, if specified. There must be a depth at either 0.0, an onshore value, or an elevation.
Error 210 - Wave direction not toward the beach - no further calculations.	RAD_ST2	Check the heading toward the beach in the input file, line 7 and/or the directional wave spectrum file.
Error 215 - Wave induced set-up not converging to tolerance.	SETUP	The input depth profile must be smoothed.
Error 220 - Wave induced Set-up is not converging. Ending program.	MAIN_WAV	The input depth profile must be smoothed.



## 6.4 Flowchart Symbol Index

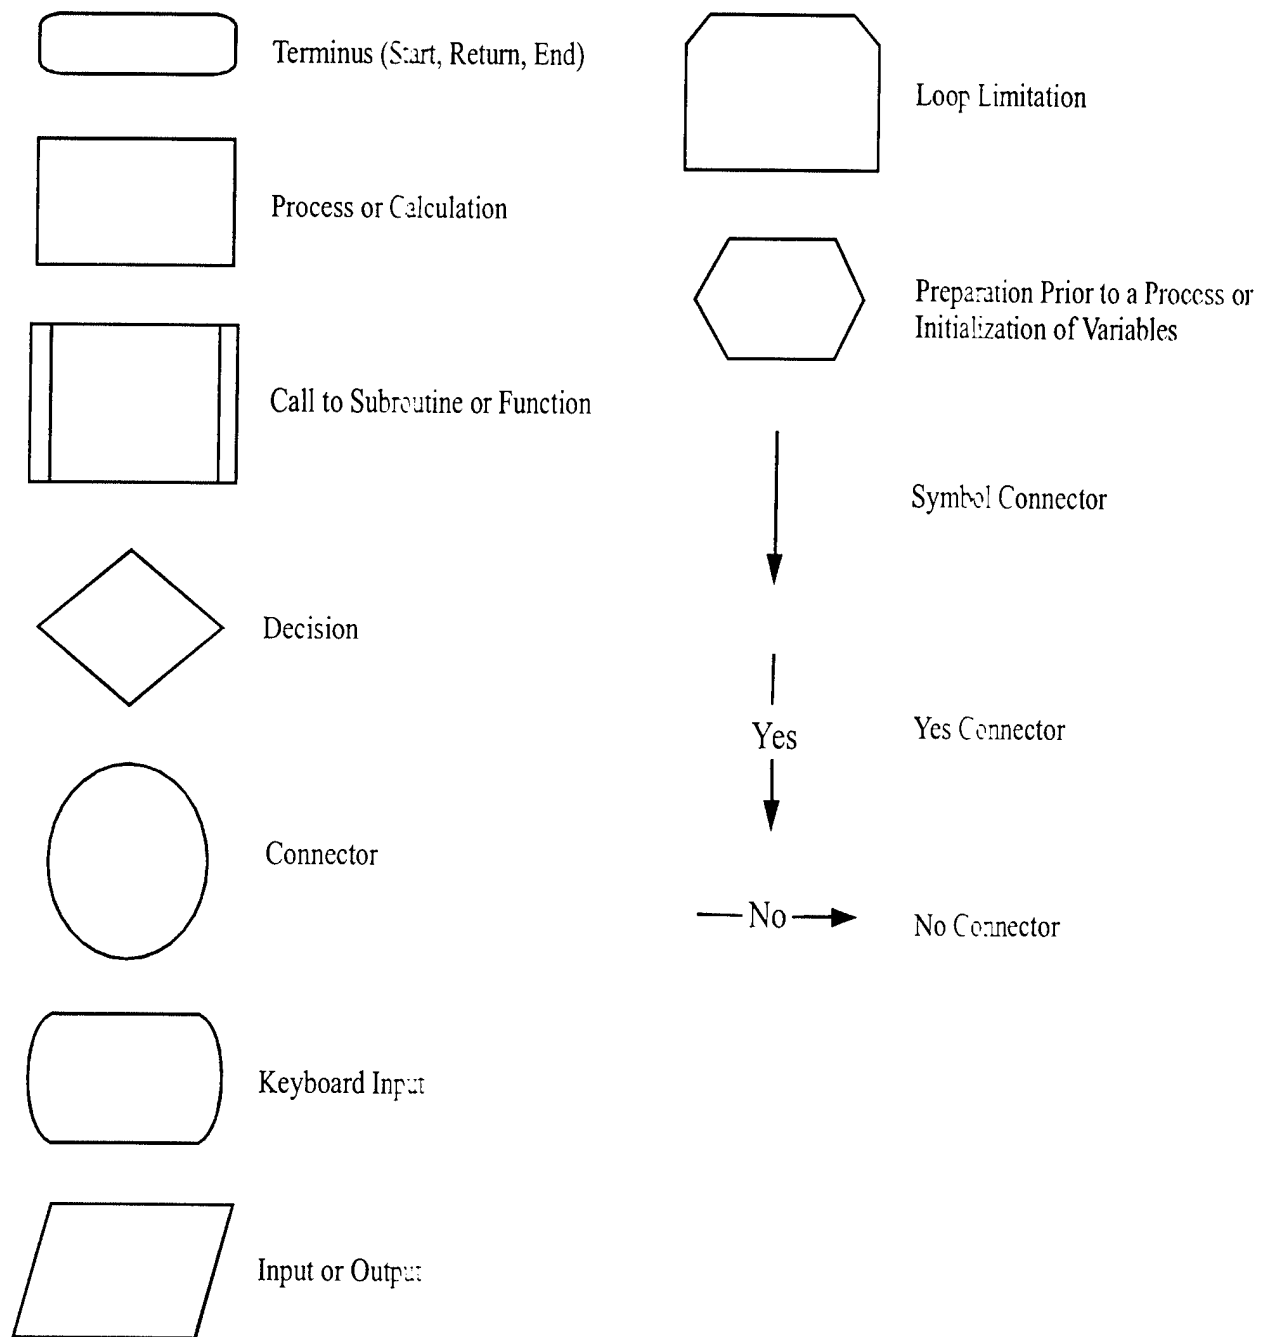

## **6.5 Acronyms**

CNMOC	Commander, Naval Meteorology and Oceanography Command
CSCI	Computer Software Configuration Item
CSU	Computer Software Unit
DWS	Directional Wave Spectrum
EOF	End of File
Hz	Hertz
LHS	Left Hand Side of Energy Balance Equation
m	Meter
N	Newton
MSI	Modified Surf Index
NRL	Naval Research Laboratory
OAML	Oceanographic and Atmospheric Master Library
ONR	Office of Naval Research
RHS	Right Hand Side of Energy Balance Equation
RSM	Refraction/Shoaling Matrix
SPAWAR	Space and Naval Warfare Systems Command

## **ACKNOWLEDGMENTS**

SURF 3.1 was developed under sponsorship of the Space and Naval Warfare Systems Command (SPAWAR) under program element 603207N-Coastal Wave/Surf Models Project. Dr. Ed Harrison is the program manager.